



MaxiDiag_Volvo_V6.20 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
○ This function is not supported. ▲ This function is the new feature in this version.

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2015	AEM	●	●	●	●
XC90	2015	AUD	●	●	●	○
XC90	2015	AUU	●	●	●	●
XC90	2015	BCM	●	●	●	●
XC90	2015	BPM	●	●	●	●
XC90	2015	CCM	●	●	●	○
XC90	2015	CEM	●	●	●	●
XC90	2015	CPM	●	●	●	●
XC90	2015	DDM	●	●	●	●
XC90	2015	DEM	●	●	●	●
XC90	2015	DIM	●	●	●	●
XC90	2015	ECM	●	●	●	●
XC90	2015	GPS	●	●	●	●
XC90	2015	HCM	●	●	●	●
XC90	2015	IAM	●	●	●	●
XC90	2015	ICM	●	●	●	●
XC90	2015	MMM	●	●	●	○
XC90	2015	PAC	●	●	●	○
XC90	2015	PDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2014	AEM	●	●	●	●
XC90	2014	AUD	●	●	●	○
XC90	2014	AUU	●	●	●	●
XC90	2014	BCM	●	●	●	●
XC90	2014	BCM	●	●	●	●
XC90	2014	BCM	●	●	●	●
XC90	2014	BCM	●	●	●	●
XC90	2014	BPM	●	●	●	●
XC90	2014	CCM	●	●	●	○
XC90	2014	CEM	●	●	●	●
XC90	2014	CEM	●	●	●	●
XC90	2014	CEM	●	●	●	●
XC90	2014	CEM	●	●	●	●
XC90	2014	CPM	●	●	●	●
XC90	2014	CPM	●	●	●	●
XC90	2014	CPM	●	●	●	●
XC90	2014	CPM	●	●	●	●
XC90	2014	DDM	●	●	●	●
XC90	2014	DEM	●	●	●	●
XC90	2014	DEM	●	●	●	●
XC90	2014	DEM	●	●	●	●
XC90	2014	DIM	●	●	●	●
XC90	2014	ECM	●	●	●	●
XC90	2014	ECM	●	●	●	●
XC90	2014	ECM	●	●	●	●
XC90	2014	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2014	GPS	●	●	●	●
XC90	2014	HCM	●	●	●	●
XC90	2014	HCM	●	●	●	●
XC90	2014	HCM	●	●	●	●
XC90	2014	HCM	●	●	●	●
XC90	2014	IAM	●	●	●	●
XC90	2014	ICM	●	●	●	●
XC90	2014	MMM	●	●	●	○
XC90	2014	PAC	●	●	●	○
XC90	2014	PDM	●	●	●	●
XC90	2014	PHM	●	●	●	●
XC90	2014	PSM	●	●	●	●
XC90	2014	RDAR	●	●	●	●
XC90	2014	REM	●	●	●	●
XC90	2014	SAS	●	●	●	●
XC90	2014	SAS	●	●	●	●
XC90	2014	SAS	●	●	●	●
XC90	2014	SAS	●	●	●	●
XC90	2014	SRS	●	●	●	●
XC90	2014	SUB	●	●	●	○
XC90	2014	TCM	●	●	●	●
XC90	2014	TCM	●	●	●	●
XC90	2014	TCM	●	●	●	●
XC90	2014	TCM	●	●	●	●
XC90	2014	UEM	●	●	●	●
XC90	2013A	AEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2013A	AUD	●	●	●	○
XC90	2013A	AUU	●	●	●	●
XC90	2013A	BCM	●	●	●	●
XC90	2013A	BPM	●	●	●	●
XC90	2013A	CCM	●	●	●	○
XC90	2013A	CEM	●	●	●	●
XC90	2013A	CPM	●	●	●	●
XC90	2013A	CPM	●	●	●	●
XC90	2013A	DDM	●	●	●	●
XC90	2013A	DEM	●	●	●	●
XC90	2013A	DIM	●	●	●	●
XC90	2013A	ECM	●	●	●	●
XC90	2013A	GPS	●	●	●	●
XC90	2013A	HCM	●	●	●	●
XC90	2013A	IAM	●	●	●	●
XC90	2013A	ICM	●	●	●	●
XC90	2013A	MMM	●	●	●	○
XC90	2013A	PAC	●	●	●	○
XC90	2013A	PDM	●	●	●	●
XC90	2013A	PHM	●	●	●	●
XC90	2013A	PSM	●	●	●	●
XC90	2013A	RDAR	●	●	●	●
XC90	2013A	REM	●	●	●	●
XC90	2013A	SAS	●	●	●	●
XC90	2013A	SRS	●	●	●	●
XC90	2013A	SUB	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2013A	TCM	●	●	●	●
XC90	2013A	UEM	●	●	●	●
XC90	2013	AEM	●	●	●	●
XC90	2013	AUD	●	●	●	○
XC90	2013	AUU	●	●	●	●
XC90	2013	BCM	●	●	●	●
XC90	2013	BCM	●	●	●	●
XC90	2013	BCM	●	●	●	●
XC90	2013	BCM	●	●	●	●
XC90	2013	BPM	●	●	●	●
XC90	2013	CCM	●	●	●	○
XC90	2013	CEM	●	●	●	●
XC90	2013	CEM	●	●	●	●
XC90	2013	CEM	●	●	●	●
XC90	2013	CEM	●	●	●	●
XC90	2013	CPM	●	●	●	●
XC90	2013	CPM	●	●	●	●
XC90	2013	CPM	●	●	●	●
XC90	2013	CPM	●	●	●	●
XC90	2013	DDM	●	●	●	●
XC90	2013	DEM	●	●	●	●
XC90	2013	DEM	●	●	●	●
XC90	2013	DEM	●	●	●	●
XC90	2013	DIM	●	●	●	●
XC90	2013	ECM	●	●	●	●
XC90	2013	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2013	ECM	●	●	●	●
XC90	2013	ECM	●	●	●	●
XC90	2013	GPS	●	●	●	●
XC90	2013	HCM	●	●	●	●
XC90	2013	HCM	●	●	●	●
XC90	2013	HCM	●	●	●	●
XC90	2013	HCM	●	●	●	●
XC90	2013	IAM	●	●	●	●
XC90	2013	ICM	●	●	●	●
XC90	2013	MMM	●	●	●	○
XC90	2013	PAC	●	●	●	○
XC90	2013	PDM	●	●	●	●
XC90	2013	PHM	●	●	●	●
XC90	2013	PSM	●	●	●	●
XC90	2013	RDAR	●	●	●	●
XC90	2013	REM	●	●	●	●
XC90	2013	SAS	●	●	●	●
XC90	2013	SAS	●	●	●	●
XC90	2013	SAS	●	●	●	●
XC90	2013	SAS	●	●	●	●
XC90	2013	SRS	●	●	●	●
XC90	2013	SUB	●	●	●	○
XC90	2013	TCM	●	●	●	●
XC90	2013	TCM	●	●	●	●
XC90	2013	TCM	●	●	●	●
XC90	2013	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2013	UEM	●	●	●	●
XC90	2012	AEM	●	●	●	●
XC90	2012	AUD	●	●	●	○
XC90	2012	AUU	●	●	●	●
XC90	2012	BCM	●	●	●	●
XC90	2012	BCM	●	●	●	●
XC90	2012	BCM	●	●	●	●
XC90	2012	BCM	●	●	●	●
XC90	2012	BCM	●	●	●	●
XC90	2012	BPM	●	●	●	●
XC90	2012	CCM	●	●	●	○
XC90	2012	CEM	●	●	●	●
XC90	2012	CEM	●	●	●	●
XC90	2012	CEM	●	●	●	●
XC90	2012	CEM	●	●	●	●
XC90	2012	CEM	●	●	●	●
XC90	2012	CPM	●	●	●	●
XC90	2012	CPM	●	●	●	●
XC90	2012	DDM	●	●	●	●
XC90	2012	DEM	●	●	●	●
XC90	2012	DEM	●	●	●	●
XC90	2012	DEM	●	●	●	●
XC90	2012	DEM	●	●	●	●
XC90	2012	DIM	●	●	●	●
XC90	2012	ECM	●	●	●	●
XC90	2012	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2012	ECM	●	●	●	●
XC90	2012	ECM	●	●	●	●
XC90	2012	ECM	●	●	●	●
XC90	2012	GPS	●	●	●	●
XC90	2012	HCM	●	●	●	●
XC90	2012	HCM	●	●	●	●
XC90	2012	HCM	●	●	●	●
XC90	2012	HCM	●	●	●	●
XC90	2012	HCM	●	●	●	●
XC90	2012	IAM	●	●	●	●
XC90	2012	ICM	●	●	●	●
XC90	2012	MMM	●	●	●	○
XC90	2012	PAC	●	●	●	○
XC90	2012	PDM	●	●	●	●
XC90	2012	PHM	●	●	●	●
XC90	2012	PSM	●	●	●	●
XC90	2012	RDAR	●	●	●	●
XC90	2012	REM	●	●	●	●
XC90	2012	SAS	●	●	●	●
XC90	2012	SAS	●	●	●	●
XC90	2012	SAS	●	●	●	●
XC90	2012	SAS	●	●	●	●
XC90	2012	SAS	●	●	●	●
XC90	2012	SRS	●	●	●	●
XC90	2012	SUB	●	●	●	○
XC90	2012	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2012	TCM	●	●	●	●
XC90	2012	TCM	●	●	●	●
XC90	2012	TCM	●	●	●	●
XC90	2012	TCM	●	●	●	●
XC90	2012	UEM	●	●	●	●
XC90	2011	AEM	●	●	●	●
XC90	2011	AUD	●	●	●	○
XC90	2011	AUU	●	●	●	●
XC90	2011	BCM	●	●	●	●
XC90	2011	BCM	●	●	●	●
XC90	2011	BCM	●	●	●	●
XC90	2011	BCM	●	●	●	●
XC90	2011	BCM	●	●	●	●
XC90	2011	BCM	●	●	●	●
XC90	2011	BPM	●	●	●	●
XC90	2011	CCM	●	●	●	●
XC90	2011	CEM	●	●	●	●
XC90	2011	CEM	●	●	●	●
XC90	2011	CEM	●	●	●	●
XC90	2011	CEM	●	●	●	●
XC90	2011	CEM	●	●	●	●
XC90	2011	CEM	●	●	●	●
XC90	2011	CPM	●	●	●	●
XC90	2011	CPM	●	●	●	●
XC90	2011	CPM	●	●	●	●
XC90	2011	DDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2011	DEM	●	●	●	●
XC90	2011	DEM	●	●	●	●
XC90	2011	DEM	●	●	●	●
XC90	2011	DEM	●	●	●	●
XC90	2011	DEM	●	●	●	●
XC90	2011	DEM	●	●	●	●
XC90	2011	DIM	●	●	●	●
XC90	2011	ECM	●	●	●	●
XC90	2011	ECM	●	●	●	●
XC90	2011	ECM	●	●	●	●
XC90	2011	ECM	●	●	●	●
XC90	2011	ECM	●	●	●	●
XC90	2011	ECM	●	●	●	●
XC90	2011	GPS	●	●	●	●
XC90	2011	HCM	●	●	●	●
XC90	2011	HCM	●	●	●	●
XC90	2011	HCM	●	●	●	●
XC90	2011	HCM	●	●	●	●
XC90	2011	HCM	●	●	●	●
XC90	2011	HCM	●	●	●	●
XC90	2011	IAM	●	●	●	●
XC90	2011	ICM	●	●	●	●
XC90	2011	MMM	●	●	●	○
XC90	2011	PAC	●	●	●	○
XC90	2011	PDM	●	●	●	●
XC90	2011	PHM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2011	PSM	●	●	●	●
XC90	2011	RDAR	●	●	●	●
XC90	2011	REM	●	●	●	●
XC90	2011	SAS	●	●	●	●
XC90	2011	SAS	●	●	●	●
XC90	2011	SAS	●	●	●	●
XC90	2011	SAS	●	●	●	●
XC90	2011	SAS	●	●	●	●
XC90	2011	SAS	●	●	●	●
XC90	2011	SAS	●	●	●	●
XC90	2011	SRS	●	●	●	●
XC90	2011	TCM	●	●	●	●
XC90	2011	TCM	●	●	●	●
XC90	2011	TCM	●	●	●	●
XC90	2011	TCM	●	●	●	●
XC90	2011	TCM	●	●	●	●
XC90	2011	TCM	●	●	●	●
XC90	2011	UEM	●	●	●	●
XC90	2010	AEM	●	●	●	●
XC90	2010	AUD	●	●	●	○
XC90	2010	AUU	●	●	●	●
XC90	2010	BCM	●	●	●	●
XC90	2010	BCM	●	●	●	●
XC90	2010	BCM	●	●	●	●
XC90	2010	BCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2010	GPS	●	●	●	●
XC90	2010	HCM	●	●	●	●
XC90	2010	HCM	●	●	●	●
XC90	2010	HCM	●	●	●	●
XC90	2010	HCM	●	●	●	●
XC90	2010	HCM	●	●	●	●
XC90	2010	IAM	●	●	●	●
XC90	2010	ICM	●	●	●	●
XC90	2010	MMM	●	●	●	○
XC90	2010	PAC	●	●	●	○
XC90	2010	PDM	●	●	●	●
XC90	2010	PHM	●	●	●	●
XC90	2010	PSM	●	●	●	●
XC90	2010	RDAR	●	●	●	●
XC90	2010	REM	●	●	●	●
XC90	2010	SAS	●	●	●	●
XC90	2010	SAS	●	●	●	●
XC90	2010	SAS	●	●	●	●
XC90	2010	SAS	●	●	●	●
XC90	2010	SAS	●	●	●	●
XC90	2010	SRS	●	●	●	●
XC90	2010	SUB	●	●	●	○
XC90	2010	TCM	●	●	●	●
XC90	2010	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2010	TCM	●	●	●	●
XC90	2010	TCM	●	●	●	●
XC90	2010	TCM	●	●	●	●
XC90	2010	UEM	●	●	●	●
XC90	2009	AEM	●	●	●	●
XC90	2009	AUD	●	●	●	○
XC90	2009	AUU	●	●	●	●
XC90	2009	BCM	●	●	●	●
XC90	2009	BCM	●	●	●	●
XC90	2009	BCM	●	●	●	●
XC90	2009	BCM	●	●	●	●
XC90	2009	BCM	●	●	●	●
XC90	2009	CCM	●	●	●	●
XC90	2009	CEM	●	●	●	●
XC90	2009	CEM	●	●	●	●
XC90	2009	CEM	●	●	●	●
XC90	2009	CEM	●	●	●	●
XC90	2009	CEM	●	●	●	●
XC90	2009	CEM-HS	●	●	●	○
XC90	2009	CEM-HS	●	●	●	○
XC90	2009	CPM	●	●	●	●
XC90	2009	CPM	●	●	●	●
XC90	2009	CPM	●	●	●	●
XC90	2009	DDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2009	DEM	●	●	●	●
XC90	2009	DEM	●	●	●	●
XC90	2009	DEM	●	●	●	●
XC90	2009	DEM	●	●	●	●
XC90	2009	DEM	●	●	●	●
XC90	2009	DIM	●	●	●	●
XC90	2009	ECM	●	●	●	●
XC90	2009	ECM	●	●	●	●
XC90	2009	ECM	●	●	●	●
XC90	2009	ECM	●	●	●	●
XC90	2009	ECM	●	●	●	●
XC90	2009	ECM	●	●	●	●
XC90	2009	GPS	●	●	●	●
XC90	2009	HCM	●	●	●	●
XC90	2009	HCM	●	●	●	●
XC90	2009	HCM	●	●	●	●
XC90	2009	HCM	●	●	●	●
XC90	2009	HCM	●	●	●	●
XC90	2009	IAM	●	●	●	●
XC90	2009	ICM	●	●	●	●
XC90	2009	MMM	●	●	●	○
XC90	2009	PAC	●	●	●	○
XC90	2009	PDM	●	●	●	●
XC90	2009	PHM	●	●	●	●
XC90	2009	PSM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2009	RDAR	●	●	●	●
XC90	2009	REM	●	●	●	●
XC90	2009	SAS	●	●	●	●
XC90	2009	SAS	●	●	●	●
XC90	2009	SAS	●	●	●	●
XC90	2009	SAS	●	●	●	●
XC90	2009	SAS	●	●	●	●
XC90	2009	SAS	●	●	●	●
XC90	2009	SRS	●	●	●	●
XC90	2009	SUB	●	●	●	○
XC90	2009	TCM	●	●	●	●
XC90	2009	TCM	●	●	●	●
XC90	2009	TCM	●	●	●	●
XC90	2009	TCM	●	●	●	●
XC90	2009	TCM	●	●	●	●
XC90	2009	TCM	●	●	●	●
XC90	2009	UEM	●	●	●	●
XC90	2008	AEM	●	●	●	●
XC90	2008	AUD	●	●	●	○
XC90	2008	AUU	●	●	●	●
XC90	2008	BCM	●	●	●	●
XC90	2008	BCM	●	●	●	●
XC90	2008	BCM	●	●	●	●
XC90	2008	BCM	●	●	●	●
XC90	2008	BCM	●	●	●	●
XC90	2008	CCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2008	CEM	●	●	●	●
XC90	2008	CEM	●	●	●	●
XC90	2008	CEM	●	●	●	●
XC90	2008	CEM	●	●	●	●
XC90	2008	CEM	●	●	●	●
XC90	2008	CEM-HS	●	●	●	○
XC90	2008	CEM-HS	●	●	●	○
XC90	2008	CPM	●	●	●	●
XC90	2008	CPM	●	●	●	●
XC90	2008	CPM	●	●	●	●
XC90	2008	DDM	●	●	●	●
XC90	2008	DEM	●	●	●	●
XC90	2008	DEM	●	●	●	●
XC90	2008	DEM	●	●	●	●
XC90	2008	DEM	●	●	●	●
XC90	2008	DEM	●	●	●	●
XC90	2008	DIM	●	●	●	●
XC90	2008	ECM	●	●	●	●
XC90	2008	ECM	●	●	●	●
XC90	2008	ECM	●	●	●	●
XC90	2008	ECM	●	●	●	●
XC90	2008	ECM	●	●	●	●
XC90	2008	GPS	●	●	●	●
XC90	2008	HCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2008	HCM	●	●	●	●
XC90	2008	HCM	●	●	●	●
XC90	2008	HCM	●	●	●	●
XC90	2008	HCM	●	●	●	●
XC90	2008	IAM	●	●	●	●
XC90	2008	ICM	●	●	●	●
XC90	2008	MMM	●	●	●	○
XC90	2008	PAC	●	●	●	○
XC90	2008	PDM	●	●	●	●
XC90	2008	PHM	●	●	●	●
XC90	2008	PSM	●	●	●	●
XC90	2008	RDAR	●	●	●	●
XC90	2008	REM	●	●	●	●
XC90	2008	SAS	●	●	●	●
XC90	2008	SAS	●	●	●	●
XC90	2008	SAS	●	●	●	●
XC90	2008	SAS	●	●	●	●
XC90	2008	SAS	●	●	●	●
XC90	2008	SRS	●	●	●	●
XC90	2008	SUB	●	●	●	○
XC90	2008	TCM	●	●	●	●
XC90	2008	TCM	●	●	●	●
XC90	2008	TCM	●	●	●	●
XC90	2008	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2008	TCM	●	●	●	●
XC90	2008	UEM	●	●	●	●
XC90	2007	AEM	●	●	●	●
XC90	2007	AUD	●	●	●	○
XC90	2007	AUU	●	●	●	●
XC90	2007	BCM	●	●	●	●
XC90	2007	BCM	●	●	●	●
XC90	2007	BCM	●	●	●	●
XC90	2007	BCM	●	●	●	●
XC90	2007	CCM	●	●	●	●
XC90	2007	CEM	●	●	●	●
XC90	2007	CEM	●	●	●	●
XC90	2007	CEM	●	●	●	●
XC90	2007	CEM	●	●	●	●
XC90	2007	CEM-HS	●	●	●	○
XC90	2007	CEM-HS	●	●	●	○
XC90	2007	CPM	●	●	●	●
XC90	2007	CPM	●	●	●	●
XC90	2007	CPM	●	●	●	●
XC90	2007	DDM	●	●	●	●
XC90	2007	DEM	●	●	●	●
XC90	2007	DEM	●	●	●	●
XC90	2007	DEM	●	●	●	●
XC90	2007	DEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2007	DIM	●	●	●	●
XC90	2007	ECM	●	●	●	●
XC90	2007	ECM	●	●	●	●
XC90	2007	ECM	●	●	●	●
XC90	2007	ECM	●	●	●	●
XC90	2007	GPS	●	●	●	●
XC90	2007	HCM	●	●	●	●
XC90	2007	HCM	●	●	●	●
XC90	2007	HCM	●	●	●	●
XC90	2007	HCM	●	●	●	●
XC90	2007	IAM	●	●	●	●
XC90	2007	ICM	●	●	●	●
XC90	2007	MMM	●	●	●	○
XC90	2007	PAC	●	●	●	○
XC90	2007	PDM	●	●	●	●
XC90	2007	PHM	●	●	●	●
XC90	2007	PSM	●	●	●	●
XC90	2007	RDAR	●	●	●	●
XC90	2007	REM	●	●	●	●
XC90	2007	SAS	●	●	●	●
XC90	2007	SAS	●	●	●	●
XC90	2007	SAS	●	●	●	●
XC90	2007	SAS	●	●	●	●
XC90	2007	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2007	SUB	●	●	●	○
XC90	2007	TCM	●	●	●	●
XC90	2007	TCM	●	●	●	●
XC90	2007	TCM	●	●	●	●
XC90	2007	TCM	●	●	●	●
XC90	2007	UEM	●	●	●	●
XC90	2006	AEM	●	●	●	●
XC90	2006	ATM	●	●	●	●
XC90	2006	AUD	●	●	●	○
XC90	2006	BCM	●	●	●	●
XC90	2006	BCM	●	●	●	●
XC90	2006	BCM	●	●	●	●
XC90	2006	BCM	●	●	●	●
XC90	2006	BCM	●	●	●	●
XC90	2006	CCM	●	●	●	●
XC90	2006	CEM	●	●	●	●
XC90	2006	CEM	●	●	●	●
XC90	2006	CEM	●	●	●	●
XC90	2006	CEM	●	●	●	●
XC90	2006	CEM	●	●	●	●
XC90	2006	CEM-HS	●	●	●	○
XC90	2006	CPM	●	●	●	●
XC90	2006	CPM	●	●	●	●
XC90	2006	DDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2006	SRS	●	●	●	●
XC90	2006	SUB	●	●	●	○
XC90	2006	TCM	●	●	●	●
XC90	2006	TCM	●	●	●	●
XC90	2006	TCM	●	●	●	●
XC90	2006	TCM	●	●	●	●
XC90	2006	TCM	●	●	●	●
XC90	2006	UEM	●	●	●	●
XC90	2015	PHM	●	●	●	●
XC90	2015	PSM	●	●	●	●
XC90	2015	RDAR	●	●	●	●
XC90	2015	REM	●	●	●	●
XC90	2015	SAS	●	●	●	●
XC90	2015	SRS	●	●	●	●
XC90	2015	SUB	●	●	●	○
XC90	2015	TCM	●	●	●	●
XC90	2015	UEM	●	●	●	●
XC70 (08-)	2015A	AUD	●	●	●	○
XC70 (08-)	2015A	BCM	●	●	●	●
XC70 (08-)	2015A	CCM	●	●	●	●
XC70 (08-)	2015A	CEM	●	●	●	●
XC70 (08-)	2015A	CPM	●	●	●	●
XC70 (08-)	2015A	CVM	●	●	●	●
XC70 (08-)	2015A	DABM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2015A	DDM	●	●	●	●
XC70 (08-)	2015A	DEM	●	●	●	○
XC70 (08-)	2015A	DIM	●	●	●	●
XC70 (08-)	2015A	ECM	●	●	●	●
XC70 (08-)	2015A	ECM	●	●	●	●
XC70 (08-)	2015A	ECM	●	●	●	●
XC70 (08-)	2015A	ECM	●	●	●	●
XC70 (08-)	2015A	FLR	●	●	●	○
XC70 (08-)	2015A	FSM	●	●	●	●
XC70 (08-)	2015A	HLDf	●	●	●	○
XC70 (08-)	2015A	IAM	●	●	●	●
XC70 (08-)	2015A	ICM	●	●	●	●
XC70 (08-)	2015A	KVM	●	●	●	●
XC70 (08-)	2015A	PAC	●	●	●	●
XC70 (08-)	2015A	PAM	●	●	●	●
XC70 (08-)	2015A	PBM	●	●	●	●
XC70 (08-)	2015A	PDM	●	●	●	●
XC70 (08-)	2015A	PHM	●	●	●	●
XC70 (08-)	2015A	POT	●	●	●	●
XC70 (08-)	2015A	PSCM	●	●	●	●
XC70 (08-)	2015A	PSM	●	●	●	●
XC70 (08-)	2015A	RDAR	●	●	●	○
XC70 (08-)	2015A	RSE	●	●	●	●
XC70 (08-)	2015A	SAS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2015	ECM	●	●	●	●
XC70 (08-)	2015	ECM	●	●	●	●
XC70 (08-)	2015	ECM	●	●	●	●
XC70 (08-)	2015	FLR	●	●	●	○
XC70 (08-)	2015	FSM	●	●	●	●
XC70 (08-)	2015	IAM	●	●	●	●
XC70 (08-)	2015	ICM	●	●	●	●
XC70 (08-)	2015	KVM	●	●	●	●
XC70 (08-)	2015	PAC	●	●	●	○
XC70 (08-)	2015	PAM	●	●	●	●
XC70 (08-)	2015	PBM	●	●	●	●
XC70 (08-)	2015	PDM	●	●	●	●
XC70 (08-)	2015	PHM	●	●	●	●
XC70 (08-)	2015	POT	●	●	●	●
XC70 (08-)	2015	PSCM	●	●	●	●
XC70 (08-)	2015	PSM	●	●	●	●
XC70 (08-)	2015	RDAR	●	●	●	○
XC70 (08-)	2015	SAS	●	●	●	●
XC70 (08-)	2015	SRS	●	●	●	●
XC70 (08-)	2015	SUM	●	●	●	●
XC70 (08-)	2015	TCM	●	●	●	●
XC70 (08-)	2015	TCM	●	●	●	○
XC70 (08-)	2015	TRM	●	●	●	●
XC70 (08-)	2015	TVM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2014	AUD	●	●	●	○
XC70 (08-)	2014	BCM	●	●	●	●
XC70 (08-)	2014	CCM	●	●	●	●
XC70 (08-)	2014	CEM	●	●	●	●
XC70 (08-)	2014	CPM	●	●	●	●
XC70 (08-)	2014	CVM	●	●	●	●
XC70 (08-)	2014	DABM	●	●	●	●
XC70 (08-)	2014	DDM	●	●	●	●
XC70 (08-)	2014	DEM	●	●	●	○
XC70 (08-)	2014	DEM	●	●	●	○
XC70 (08-)	2014	DIM	●	●	●	●
XC70 (08-)	2014	ECM	●	●	●	●
XC70 (08-)	2014	ECM	●	●	●	●
XC70 (08-)	2014	ECM	●	●	●	●
XC70 (08-)	2014	ECM	●	●	●	●
XC70 (08-)	2014	ECM	●	●	●	●
XC70 (08-)	2014	ECM	●	●	●	●
XC70 (08-)	2014	ECM	●	●	●	●
XC70 (08-)	2014	ECM	●	●	●	●
XC70 (08-)	2014	ECM	●	●	●	●
XC70 (08-)	2014	ECM	●	●	●	●
XC70 (08-)	2014	ECM	●	●	●	●
XC70 (08-)	2014	FLR	●	●	●	○
XC70 (08-)	2014	FSM	●	●	●	●
XC70 (08-)	2014	HLDf	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2014	IAM	●	●	●	●
XC70 (08-)	2014	ICM	●	●	●	●
XC70 (08-)	2014	KVM	●	●	●	●
XC70 (08-)	2014	PAC	●	●	●	●
XC70 (08-)	2014	PAM	●	●	●	●
XC70 (08-)	2014	PBM	●	●	●	●
XC70 (08-)	2014	PDM	●	●	●	●
XC70 (08-)	2014	PHM	●	●	●	●
XC70 (08-)	2014	POT	●	●	●	●
XC70 (08-)	2014	PSCM	●	●	●	●
XC70 (08-)	2014	PSM	●	●	●	●
XC70 (08-)	2014	RDAR	●	●	●	○
XC70 (08-)	2014	RSE	●	●	●	●
XC70 (08-)	2014	SAS	●	●	●	●
XC70 (08-)	2014	SRS	●	●	●	●
XC70 (08-)	2014	SUB	●	●	●	○
XC70 (08-)	2014	SUM	●	●	●	●
XC70 (08-)	2014	TCM	●	●	●	○
XC70 (08-)	2014	TRM	●	●	●	●
XC70 (08-)	2014	TVM	●	●	●	○
XC70 (08-)	2013	AUD	●	●	●	○
XC70 (08-)	2013	BCM	●	●	●	●
XC70 (08-)	2013	CCM	●	●	●	●
XC70 (08-)	2013	CEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2013	CPM	●	●	●	●
XC70 (08-)	2013	CVM	●	●	●	●
XC70 (08-)	2013	DABM	●	●	●	●
XC70 (08-)	2013	DDM	●	●	●	●
XC70 (08-)	2013	DEM	●	●	●	○
XC70 (08-)	2013	DEM	●	●	●	○
XC70 (08-)	2013	DIM	●	●	●	●
XC70 (08-)	2013	ECM	●	●	●	●
XC70 (08-)	2013	ECM	●	●	●	●
XC70 (08-)	2013	ECM	●	●	●	●
XC70 (08-)	2013	ECM	●	●	●	●
XC70 (08-)	2013	ECM	●	●	●	●
XC70 (08-)	2013	ECM	●	●	●	●
XC70 (08-)	2013	ECM	●	●	●	●
XC70 (08-)	2013	ECM	●	●	●	●
XC70 (08-)	2013	FLR	●	●	●	○
XC70 (08-)	2013	FSM	●	●	●	●
XC70 (08-)	2013	HLDf	●	●	●	○
XC70 (08-)	2013	IAM	●	●	●	●
XC70 (08-)	2013	ICM	●	●	●	●
XC70 (08-)	2013	KVM	●	●	●	●
XC70 (08-)	2013	PAC	●	●	●	●
XC70 (08-)	2013	PAM	●	●	●	●
XC70 (08-)	2013	PBM	●	●	●	●
XC70 (08-)	2013	PDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2013	PHM	●	●	●	●
XC70 (08-)	2013	POT	●	●	●	●
XC70 (08-)	2013	PSCM	●	●	●	●
XC70 (08-)	2013	PSM	●	●	●	●
XC70 (08-)	2013	RDAR	●	●	●	○
XC70 (08-)	2013	RSE	●	●	●	●
XC70 (08-)	2013	SAS	●	●	●	●
XC70 (08-)	2013	SRS	●	●	●	●
XC70 (08-)	2013	SUB	●	●	●	○
XC70 (08-)	2013	SUM	●	●	●	●
XC70 (08-)	2013	TCM	●	●	●	●
XC70 (08-)	2013	TCM	●	●	●	●
XC70 (08-)	2013	TRM	●	●	●	●
XC70 (08-)	2013	TVM	●	●	●	●
XC70 (08-)	2012	AUD	●	●	●	○
XC70 (08-)	2012	BCM	●	●	●	●
XC70 (08-)	2012	CCM	●	●	●	●
XC70 (08-)	2012	CEM	●	●	●	●
XC70 (08-)	2012	CPM	●	●	●	●
XC70 (08-)	2012	CVM	●	●	●	○
XC70 (08-)	2012	DABM	●	●	●	○
XC70 (08-)	2012	DDM	●	●	●	●
XC70 (08-)	2012	DEM	●	●	●	●
XC70 (08-)	2012	DEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2012	DIM	●	●	●	●
XC70 (08-)	2012	ECM	●	●	●	●
XC70 (08-)	2012	ECM	●	●	●	●
XC70 (08-)	2012	ECM	●	●	●	●
XC70 (08-)	2012	ECM	●	●	●	●
XC70 (08-)	2012	ECM	●	●	●	●
XC70 (08-)	2012	ECM	●	●	●	●
XC70 (08-)	2012	ECM	●	●	●	●
XC70 (08-)	2012	FLR	●	●	●	○
XC70 (08-)	2012	FSM	●	●	●	●
XC70 (08-)	2012	HLDF	●	●	●	○
XC70 (08-)	2012	IAM	●	●	●	●
XC70 (08-)	2012	ICM	●	●	●	●
XC70 (08-)	2012	KVM	●	●	●	●
XC70 (08-)	2012	PAC	●	●	●	●
XC70 (08-)	2012	PAM	●	●	●	●
XC70 (08-)	2012	PBM	●	●	●	●
XC70 (08-)	2012	PDM	●	●	●	●
XC70 (08-)	2012	PHM	●	●	●	●
XC70 (08-)	2012	POT	●	●	●	●
XC70 (08-)	2012	PSCM	●	●	●	●
XC70 (08-)	2012	PSM	●	●	●	●
XC70 (08-)	2012	RDAR	●	●	●	○
XC70 (08-)	2012	RSE	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2012	SAS	●	●	●	●
XC70 (08-)	2012	SRS	●	●	●	●
XC70 (08-)	2012	SUB	●	●	●	○
XC70 (08-)	2012	SUM	●	●	●	●
XC70 (08-)	2012	TCM	●	●	●	●
XC70 (08-)	2012	TCM	●	●	●	●
XC70 (08-)	2012	TRM	●	●	●	●
XC70 (08-)	2012	TVM	●	●	●	●
XC70 (08-)	2011	AUD	●	●	●	○
XC70 (08-)	2011	AUU	●	●	●	●
XC70 (08-)	2011	BCM	●	●	●	●
XC70 (08-)	2011	BPM	●	●	●	●
XC70 (08-)	2011	CCM	●	●	●	●
XC70 (08-)	2011	CEM	●	●	●	●
XC70 (08-)	2011	CPM	●	●	●	●
XC70 (08-)	2011	DABM	●	●	●	○
XC70 (08-)	2011	DDM	●	●	●	●
XC70 (08-)	2011	DEM	●	●	●	●
XC70 (08-)	2011	DEM	●	●	●	●
XC70 (08-)	2011	DIM	●	●	●	●
XC70 (08-)	2011	ECM	●	●	●	●
XC70 (08-)	2011	ECM	●	●	●	●
XC70 (08-)	2011	ECM	●	●	●	●
XC70 (08-)	2011	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2011	ECM	●	●	●	●
XC70 (08-)	2011	ECM	●	●	●	●
XC70 (08-)	2011	FLR	●	●	●	○
XC70 (08-)	2011	FSM	●	●	●	●
XC70 (08-)	2011	HCM	●	●	●	●
XC70 (08-)	2011	HLDF	●	●	●	●
XC70 (08-)	2011	IAM	●	●	●	●
XC70 (08-)	2011	ICM	●	●	●	●
XC70 (08-)	2011	KVM	●	●	●	●
XC70 (08-)	2011	MMM	●	●	●	○
XC70 (08-)	2011	PAC	●	●	●	●
XC70 (08-)	2011	PAM	●	●	●	●
XC70 (08-)	2011	PBM	●	●	●	●
XC70 (08-)	2011	PDM	●	●	●	●
XC70 (08-)	2011	PHM	●	●	●	●
XC70 (08-)	2011	POT	●	●	●	●
XC70 (08-)	2011	PSCM	●	●	●	●
XC70 (08-)	2011	PSM	●	●	●	●
XC70 (08-)	2011	RDAR	●	●	●	○
XC70 (08-)	2011	SAS	●	●	●	●
XC70 (08-)	2011	SRS	●	●	●	●
XC70 (08-)	2011	SUB	●	●	●	○
XC70 (08-)	2011	SUM	●	●	●	●
XC70 (08-)	2011	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2011	TCM	●	●	●	●
XC70 (08-)	2011	TCM	●	●	●	●
XC70 (08-)	2011	TCM	●	●	●	●
XC70 (08-)	2011	TRM	●	●	●	●
XC70 (08-)	2010	AUD	●	●	●	○
XC70 (08-)	2010	AUU	●	●	●	●
XC70 (08-)	2010	BCM	●	●	●	●
XC70 (08-)	2010	BPM	●	●	●	●
XC70 (08-)	2010	CCM	●	●	●	●
XC70 (08-)	2010	CEM	●	●	●	●
XC70 (08-)	2010	CPM	●	●	●	●
XC70 (08-)	2010	DABM	●	●	●	○
XC70 (08-)	2010	DDM	●	●	●	●
XC70 (08-)	2010	DEM	●	●	●	●
XC70 (08-)	2010	DEM	●	●	●	●
XC70 (08-)	2010	DIM	●	●	●	●
XC70 (08-)	2010	ECM	●	●	●	●
XC70 (08-)	2010	ECM	●	●	●	●
XC70 (08-)	2010	ECM	●	●	●	●
XC70 (08-)	2010	ECM	●	●	●	●
XC70 (08-)	2010	ECM	●	●	●	●
XC70 (08-)	2010	ECM	●	●	●	●
XC70 (08-)	2010	FLR	●	●	●	○
XC70 (08-)	2010	FSM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2010	TRM	●	●	●	●
XC70 (08-)	2009	AUD	●	●	●	○
XC70 (08-)	2009	AUU	●	●	●	●
XC70 (08-)	2009	BCM	●	●	●	●
XC70 (08-)	2009	BPM	●	●	●	●
XC70 (08-)	2009	CCM	●	●	●	●
XC70 (08-)	2009	CEM	●	●	●	●
XC70 (08-)	2009	CPM	●	●	●	●
XC70 (08-)	2009	DABM	●	●	●	○
XC70 (08-)	2009	DDM	●	●	●	●
XC70 (08-)	2009	DEM	●	●	●	●
XC70 (08-)	2009	DEM	●	●	●	●
XC70 (08-)	2009	DIM	●	●	●	●
XC70 (08-)	2009	ECM	●	●	●	●
XC70 (08-)	2009	ECM	●	●	●	●
XC70 (08-)	2009	ECM	●	●	●	●
XC70 (08-)	2009	ECM	●	●	●	●
XC70 (08-)	2009	FSM	●	●	●	●
XC70 (08-)	2009	HCM	●	●	●	●
XC70 (08-)	2009	HLDf	●	●	●	●
XC70 (08-)	2009	IAM	●	●	●	●
XC70 (08-)	2009	ICM	●	●	●	●
XC70 (08-)	2009	KVM	●	●	●	●
XC70 (08-)	2009	MMM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2009	PAC	●	●	●	●
XC70 (08-)	2009	PAM	●	●	●	●
XC70 (08-)	2009	PBM	●	●	●	●
XC70 (08-)	2009	PDM	●	●	●	●
XC70 (08-)	2009	PHM	●	●	●	●
XC70 (08-)	2009	POT	●	●	●	●
XC70 (08-)	2009	PSM	●	●	●	●
XC70 (08-)	2009	RDAR	●	●	●	○
XC70 (08-)	2009	SAS	●	●	●	●
XC70 (08-)	2009	SRS	●	●	●	●
XC70 (08-)	2009	SUB	●	●	●	○
XC70 (08-)	2009	SUM	●	●	●	●
XC70 (08-)	2009	TCM	●	●	●	●
XC70 (08-)	2009	TCM	●	●	●	●
XC70 (08-)	2009	TCM	●	●	●	●
XC70 (08-)	2009	TCM	●	●	●	●
XC70 (08-)	2009	TRM	●	●	●	●
XC70 (08-)	2008	AUD	●	●	●	○
XC70 (08-)	2008	AUU	●	●	●	●
XC70 (08-)	2008	BCM	●	●	●	●
XC70 (08-)	2008	BPM	●	●	●	●
XC70 (08-)	2008	CCM	●	●	●	●
XC70 (08-)	2008	CEM	●	●	●	●
XC70 (08-)	2008	CPM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2008	DDM	●	●	●	●
XC70 (08-)	2008	DEM	●	●	●	●
XC70 (08-)	2008	DEM	●	●	●	●
XC70 (08-)	2008	DIM	●	●	●	●
XC70 (08-)	2008	ECM	●	●	●	●
XC70 (08-)	2008	ECM	●	●	●	●
XC70 (08-)	2008	ECM	●	●	●	●
XC70 (08-)	2008	FSM	●	●	●	●
XC70 (08-)	2008	HCM	●	●	●	●
XC70 (08-)	2008	HLDf	●	●	●	●
XC70 (08-)	2008	IAM	●	●	●	○
XC70 (08-)	2008	ICM	●	●	●	●
XC70 (08-)	2008	KVM	●	●	●	●
XC70 (08-)	2008	MMM	●	●	●	○
XC70 (08-)	2008	PAC	●	●	●	●
XC70 (08-)	2008	PAM	●	●	●	●
XC70 (08-)	2008	PBM	●	●	●	●
XC70 (08-)	2008	PDM	●	●	●	●
XC70 (08-)	2008	PHM	●	●	●	●
XC70 (08-)	2008	POT	●	●	●	●
XC70 (08-)	2008	PSM	●	●	●	●
XC70 (08-)	2008	RDAR	●	●	●	○
XC70 (08-)	2008	SAS	●	●	●	●
XC70 (08-)	2008	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC70 (08-)	2008	SUB	●	●	●	○
XC70 (08-)	2008	SUM	●	●	●	●
XC70 (08-)	2008	TCM	●	●	●	●
XC70 (08-)	2008	TCM	●	●	●	●
XC70 (08-)	2008	TCM	●	●	●	●
XC70 (08-)	2008	TRM	●	●	●	●
XC60	2015A	AUD	●	●	●	○
XC60	2015A	BCM	●	●	●	●
XC60	2015A	CCM	●	●	●	●
XC60	2015A	CEM	●	●	●	●
XC60	2015A	CPM	●	●	●	●
XC60	2015A	CVM	●	●	●	●
XC60	2015A	DABM	●	●	●	○
XC60	2015A	DDM	●	●	●	●
XC60	2015A	DEM	●	●	●	○
XC60	2015A	DIM	●	●	●	●
XC60	2015A	ECM	●	●	●	●
XC60	2015A	ECM	●	●	●	●
XC60	2015A	ECM	●	●	●	●
XC60	2015A	ECM	●	●	●	●
XC60	2015A	ECM	●	●	●	●
XC60	2015A	ECM	●	●	●	●
XC60	2015A	ECM	●	●	●	●
XC60	2015A	FLR	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC60	2015A	FSM	●	●	●	●
XC60	2015A	HLDf	●	●	●	○
XC60	2015A	IAM	●	●	●	●
XC60	2015A	ICM	●	●	●	●
XC60	2015A	KVM	●	●	●	●
XC60	2015A	PAC	●	●	●	○
XC60	2015A	PAM	●	●	●	●
XC60	2015A	PBM	●	●	●	●
XC60	2015A	PDM	●	●	●	●
XC60	2015A	PHM	●	●	●	●
XC60	2015A	POT	●	●	●	●
XC60	2015A	PSCM	●	●	●	●
XC60	2015A	PSM	●	●	●	●
XC60	2015A	RDAR	●	●	●	○
XC60	2015A	RSE	●	●	●	●
XC60	2015A	SAS	●	●	●	●
XC60	2015A	SODL	●	●	●	●
XC60	2015A	SODR	●	●	●	●
XC60	2015A	SRS	●	●	●	●
XC60	2015A	SUB	●	●	●	○
XC60	2015A	SUM	●	●	●	●
XC60	2015A	TCM	●	●	●	●
XC60	2015A	TCM	●	●	●	○
XC60	2015A	TRM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC60	2015	ECM	●	●	●	●
XC60	2015	ECM	●	●	●	●
XC60	2015	ECM	●	●	●	●
XC60	2015	ECM	●	●	●	●
XC60	2015	ECM	●	●	●	●
XC60	2015	FLR	●	●	●	○
XC60	2015	FSM	●	●	●	●
XC60	2015	IAM	●	●	●	●
XC60	2015	ICM	●	●	●	●
XC60	2015	KVM	●	●	●	●
XC60	2015	PAC	●	●	●	○
XC60	2015	PAM	●	●	●	●
XC60	2015	PBM	●	●	●	●
XC60	2015	PDM	●	●	●	●
XC60	2015	PHM	●	●	●	●
XC60	2015	POT	●	●	●	●
XC60	2015	PSCM	●	●	●	●
XC60	2015	PSM	●	●	●	●
XC60	2015	RDAR	●	●	●	○
XC60	2015	SAS	●	●	●	●
XC60	2015	SODL	●	●	●	●
XC60	2015	SODR	●	●	●	●
XC60	2015	SRS	●	●	●	●
XC60	2015	SUM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC60	2014	ECM	●	●	●	●
XC60	2014	ECM	●	●	●	●
XC60	2014	ECM	●	●	●	●
XC60	2014	ECM	●	●	●	●
XC60	2014	ECM	●	●	●	●
XC60	2014	ECM	●	●	●	●
XC60	2014	ECM	●	●	●	●
XC60	2014	ECM	●	●	●	●
XC60	2014	FLR	●	●	●	○
XC60	2014	FSM	●	●	●	●
XC60	2014	HLDf	●	●	●	○
XC60	2014	IAM	●	●	●	●
XC60	2014	ICM	●	●	●	●
XC60	2014	KVM	●	●	●	●
XC60	2014	PAC	●	●	●	○
XC60	2014	PAM	●	●	●	●
XC60	2014	PBM	●	●	●	●
XC60	2014	PDM	●	●	●	●
XC60	2014	PHM	●	●	●	●
XC60	2014	POT	●	●	●	●
XC60	2014	PSCM	●	●	●	●
XC60	2014	PSM	●	●	●	●
XC60	2014	RDAR	●	●	●	○
XC60	2014	RSE	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC60	2014	SAS	●	●	●	●
XC60	2014	SODL	●	●	●	●
XC60	2014	SODR	●	●	●	●
XC60	2014	SRS	●	●	●	●
XC60	2014	SUB	●	●	●	○
XC60	2014	SUM	●	●	●	●
XC60	2014	TCM	●	●	●	●
XC60	2014	TCM	●	●	●	●
XC60	2014	TCM	●	●	●	○
XC60	2014	TRM	●	●	●	●
XC60	2014	TVM	●	●	●	○
XC60	2013	AUD	●	●	●	○
XC60	2013	BCM	●	●	●	●
XC60	2013	CCM	●	●	●	●
XC60	2013	CEM	●	●	●	●
XC60	2013	CPM	●	●	●	●
XC60	2013	CVM	●	●	●	●
XC60	2013	DABM	●	●	●	●
XC60	2013	DDM	●	●	●	●
XC60	2013	DEM	●	●	●	○
XC60	2013	DEM	●	●	●	○
XC60	2013	DIM	●	●	●	●
XC60	2013	ECM	●	●	●	●
XC60	2013	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC60	2013	ECM	●	●	●	●
XC60	2013	ECM	●	●	●	●
XC60	2013	ECM	●	●	●	●
XC60	2013	ECM	●	●	●	●
XC60	2013	ECM	●	●	●	●
XC60	2013	ECM	●	●	●	●
XC60	2013	ECM	●	●	●	●
XC60	2013	FLR	●	●	●	○
XC60	2013	FSM	●	●	●	●
XC60	2013	HLDf	●	●	●	○
XC60	2013	IAM	●	●	●	●
XC60	2013	ICM	●	●	●	●
XC60	2013	KVM	●	●	●	●
XC60	2013	PAC	●	●	●	○
XC60	2013	PAM	●	●	●	●
XC60	2013	PBM	●	●	●	●
XC60	2013	PDM	●	●	●	●
XC60	2013	PHM	●	●	●	●
XC60	2013	POT	●	●	●	●
XC60	2013	PSCM	●	●	●	●
XC60	2013	PSM	●	●	●	●
XC60	2013	RDAR	●	●	●	○
XC60	2013	RSE	●	●	●	●
XC60	2013	SAS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC60	2012	ECM	●	●	●	●
XC60	2012	ECM	●	●	●	●
XC60	2012	ECM	●	●	●	●
XC60	2012	ECM	●	●	●	●
XC60	2012	FLR	●	●	●	○
XC60	2012	FSM	●	●	●	●
XC60	2012	HLDf	●	●	●	○
XC60	2012	IAM	●	●	●	●
XC60	2012	ICM	●	●	●	●
XC60	2012	KVM	●	●	●	●
XC60	2012	PAC	●	●	●	○
XC60	2012	PAM	●	●	●	●
XC60	2012	PBM	●	●	●	●
XC60	2012	PDM	●	●	●	●
XC60	2012	PHM	●	●	●	●
XC60	2012	POT	●	●	●	●
XC60	2012	PSCM	●	●	●	●
XC60	2012	PSM	●	●	●	●
XC60	2012	RDAR	●	●	●	○
XC60	2012	RSE	●	●	●	●
XC60	2012	SAS	●	●	●	●
XC60	2012	SRS	●	●	●	●
XC60	2012	SUB	●	●	●	○
XC60	2012	SUM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC60	2011	ECM	●	●	●	●
XC60	2011	ECM	●	●	●	●
XC60	2011	FLR	●	●	●	○
XC60	2011	FSM	●	●	●	●
XC60	2011	HCM	●	●	●	●
XC60	2011	HLDL	●	●	●	●
XC60	2011	IAM	●	●	●	●
XC60	2011	ICM	●	●	●	●
XC60	2011	KVM	●	●	●	●
XC60	2011	MMM	●	●	●	○
XC60	2011	PAC	●	●	●	○
XC60	2011	PAM	●	●	●	●
XC60	2011	PBM	●	●	●	●
XC60	2011	PDM	●	●	●	●
XC60	2011	PHM	●	●	●	●
XC60	2011	POT	●	●	●	●
XC60	2011	PSCM	●	●	●	●
XC60	2011	PSM	●	●	●	●
XC60	2011	RDAR	●	●	●	○
XC60	2011	SAS	●	●	●	●
XC60	2011	SRS	●	●	●	●
XC60	2011	SUB	●	●	●	○
XC60	2011	SUM	●	●	●	●
XC60	2011	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC60	2011	TCM	●	●	●	●
XC60	2011	TCM	●	●	●	●
XC60	2011	TCM	●	●	●	●
XC60	2011	TCM	●	●	●	●
XC60	2011	TRM	●	●	●	●
XC60	2011	TVM	●	●	●	●
XC60	2010A	AUD	●	●	●	○
XC60	2010A	AUU	●	●	●	●
XC60	2010A	BCM	●	●	●	●
XC60	2010A	BPM	●	●	●	●
XC60	2010A	CCM	●	●	●	●
XC60	2010A	CEM	●	●	●	●
XC60	2010A	CPM	●	●	●	●
XC60	2010A	CVM	●	●	●	○
XC60	2010A	DABM	●	●	●	○
XC60	2010A	DDM	●	●	●	●
XC60	2010A	DEM	●	●	●	●
XC60	2010A	DIM	●	●	●	●
XC60	2010A	ECM	●	●	●	●
XC60	2010A	FSM	●	●	●	●
XC60	2010A	HCM	●	●	●	●
XC60	2010A	HLDf	●	●	●	●
XC60	2010A	IAM	●	●	●	●
XC60	2010A	ICM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC60	2010A	KVM	●	●	●	●
XC60	2010A	MMM	●	●	●	○
XC60	2010A	PAC	●	●	●	●
XC60	2010A	PAM	●	●	●	●
XC60	2010A	PBM	●	●	●	●
XC60	2010A	PDM	●	●	●	●
XC60	2010A	PHM	●	●	●	●
XC60	2010A	POT	●	●	●	●
XC60	2010A	PSM	●	●	●	●
XC60	2010A	RDAR	●	●	●	○
XC60	2010A	SAS	●	●	●	●
XC60	2010A	SRS	●	●	●	●
XC60	2010A	SUB	●	●	●	○
XC60	2010A	SUM	●	●	●	●
XC60	2010A	TCM	●	●	●	●
XC60	2010A	TRM	●	●	●	●
XC60	2010	AUD	●	●	●	○
XC60	2010	AUU	●	●	●	●
XC60	2010	BCM	●	●	●	●
XC60	2010	BPM	●	●	●	●
XC60	2010	CCM	●	●	●	●
XC60	2010	CEM	●	●	●	●
XC60	2010	CPM	●	●	●	●
XC60	2010	CVM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC60	2010	DABM	●	●	●	○
XC60	2010	DDM	●	●	●	●
XC60	2010	DEM	●	●	●	●
XC60	2010	DEM	●	●	●	●
XC60	2010	DIM	●	●	●	●
XC60	2010	ECM	●	●	●	●
XC60	2010	ECM	●	●	●	●
XC60	2010	ECM	●	●	●	●
XC60	2010	ECM	●	●	●	●
XC60	2010	ECM	●	●	●	●
XC60	2010	ECM	●	●	●	●
XC60	2010	ECM	●	●	●	●
XC60	2010	FLR	●	●	●	○
XC60	2010	FSM	●	●	●	●
XC60	2010	HCM	●	●	●	●
XC60	2010	HLDf	●	●	●	●
XC60	2010	IAM	●	●	●	●
XC60	2010	ICM	●	●	●	●
XC60	2010	KVM	●	●	●	●
XC60	2010	MMM	●	●	●	○
XC60	2010	PAC	●	●	●	○
XC60	2010	PAM	●	●	●	●
XC60	2010	PBM	●	●	●	●
XC60	2010	PDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC60	2010	PHM	●	●	●	●
XC60	2010	POT	●	●	●	●
XC60	2010	PSM	●	●	●	●
XC60	2010	RDAR	●	●	●	○
XC60	2010	SAS	●	●	●	●
XC60	2010	SRS	●	●	●	●
XC60	2010	SUB	●	●	●	○
XC60	2010	SUM	●	●	●	●
XC60	2010	TCM	●	●	●	●
XC60	2010	TCM	●	●	●	●
XC60	2010	TCM	●	●	●	●
XC60	2010	TCM	●	●	●	●
XC60	2010	TCM	●	●	●	●
XC60	2010	TCM	●	●	●	●
XC60	2010	TCM	●	●	●	●
XC60	2010	TCM	●	●	●	●
XC60	2010	TRM	●	●	●	●
XC60	2009	AUD	●	●	●	○
XC60	2009	AUU	●	●	●	●
XC60	2009	BCM	●	●	●	●
XC60	2009	BPM	●	●	●	●
XC60	2009	CCM	●	●	●	●
XC60	2009	CEM	●	●	●	●
XC60	2009	CPM	●	●	●	●
XC60	2009	CVM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC60	2009	DABM	●	●	●	○
XC60	2009	DDM	●	●	●	●
XC60	2009	DEM	●	●	●	●
XC60	2009	DEM	●	●	●	●
XC60	2009	DIM	●	●	●	●
XC60	2009	ECM	●	●	●	●
XC60	2009	ECM	●	●	●	●
XC60	2009	ECM	●	●	●	●
XC60	2009	FSM	●	●	●	●
XC60	2009	HCM	●	●	●	●
XC60	2009	HLDf	●	●	●	●
XC60	2009	IAM	●	●	●	●
XC60	2009	ICM	●	●	●	●
XC60	2009	KVM	●	●	●	●
XC60	2009	MMM	●	●	●	○
XC60	2009	PAC	●	●	●	●
XC60	2009	PAM	●	●	●	●
XC60	2009	PBM	●	●	●	●
XC60	2009	PDM	●	●	●	●
XC60	2009	PHM	●	●	●	●
XC60	2009	POT	●	●	●	●
XC60	2009	PSM	●	●	●	●
XC60	2009	RDAR	●	●	●	○
XC60	2009	SAS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC60	2009	SRS	●	●	●	●
XC60	2009	SUB	●	●	●	○
XC60	2009	SUM	●	●	●	●
XC60	2009	TCM	●	●	●	●
XC60	2009	TCM	●	●	●	●
XC60	2009	TCM	●	●	●	●
XC60	2009	TRM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	AEM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	AUM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	BCM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	CCM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	CEM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	CPM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	DDM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	DEM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	DEM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	DEM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	DEM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	DIM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	ECM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	ECM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	HCM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	PDM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	PHM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 XC (01-) / XC70 (-07)	2007	PSM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	REM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	RTI	●	●	●	○
V70 XC (01-) / XC70 (-07)	2007	SAS	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	SRS	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	SUM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	TCM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	TCM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2007	UEM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	AEM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	AUM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	BCM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	CCM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	CEM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	CPM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	DDM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	DEM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	DEM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	DEM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	DEM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	DIM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	ECM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	ECM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 XC (01-) / XC70 (-07)	2006	ECM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	PDM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	PHM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	PSM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	REM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	RTI	●	●	●	○
V70 XC (01-) / XC70 (-07)	2006	SAS	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	SRS	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	SUM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	TCM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	TCM	●	●	●	●
V70 XC (01-) / XC70 (-07)	2006	UEM	●	●	●	●
V70 (08-)	2015	AUD	●	●	●	○
V70 (08-)	2015	BCM	●	●	●	○
V70 (08-)	2015	CCM	●	●	●	●
V70 (08-)	2015	CEM	●	●	●	○
V70 (08-)	2015	CPM	●	●	●	●
V70 (08-)	2015	CVM	●	●	●	●
V70 (08-)	2015	DABM	●	●	●	●
V70 (08-)	2015	DDM	●	●	●	●
V70 (08-)	2015	DEM	●	●	●	○
V70 (08-)	2015	DIM	●	●	●	●
V70 (08-)	2015	ECM	●	●	●	●
V70 (08-)	2015	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (08-)	2015	ECM	●	●	●	●
V70 (08-)	2015	ECM	●	●	●	●
V70 (08-)	2015	ECM	●	●	●	●
V70 (08-)	2015	ECM	●	●	●	●
V70 (08-)	2015	ECM	●	●	●	●
V70 (08-)	2015	ECM	●	●	●	●
V70 (08-)	2015	ECM	●	●	●	●
V70 (08-)	2015	ECM	●	●	●	●
V70 (08-)	2015	ECM	●	●	●	●
V70 (08-)	2015	ECM	●	●	●	●
V70 (08-)	2015	ECM	●	●	●	●
V70 (08-)	2015	FLR	●	●	●	○
V70 (08-)	2015	FSM	●	●	●	●
V70 (08-)	2015	IAM	●	●	●	●
V70 (08-)	2015	ICM	●	●	●	●
V70 (08-)	2015	KVM	●	●	●	●
V70 (08-)	2015	PAC	●	●	●	○
V70 (08-)	2015	PAM	●	●	●	●
V70 (08-)	2015	PBM	●	●	●	●
V70 (08-)	2015	PDM	●	●	●	●
V70 (08-)	2015	PHM	●	●	●	●
V70 (08-)	2015	POT	●	●	●	●
V70 (08-)	2015	PSCM	●	●	●	●
V70 (08-)	2015	PSM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (08-)	2014	ECM	●	●	●	●
V70 (08-)	2014	ECM	●	●	●	●
V70 (08-)	2014	ECM	●	●	●	●
V70 (08-)	2014	ECM	●	●	●	●
V70 (08-)	2014	ECM	●	●	●	●
V70 (08-)	2014	ECM	●	●	●	●
V70 (08-)	2014	ECM	●	●	●	●
V70 (08-)	2014	ECM	●	●	●	●
V70 (08-)	2014	ECM	●	●	●	●
V70 (08-)	2014	ECM	●	●	●	●
V70 (08-)	2014	FLR	●	●	●	○
V70 (08-)	2014	FSM	●	●	●	●
V70 (08-)	2014	HLDf	●	●	●	○
V70 (08-)	2014	IAM	●	●	●	●
V70 (08-)	2014	ICM	●	●	●	●
V70 (08-)	2014	KVM	●	●	●	●
V70 (08-)	2014	PAC	●	●	●	●
V70 (08-)	2014	PAM	●	●	●	●
V70 (08-)	2014	PBM	●	●	●	●
V70 (08-)	2014	PDM	●	●	●	●
V70 (08-)	2014	PHM	●	●	●	●
V70 (08-)	2014	POT	●	●	●	●
V70 (08-)	2014	PSCM	●	●	●	●
V70 (08-)	2014	PSM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (08-)	2014	RDAR	●	●	●	○
V70 (08-)	2014	RSE	●	●	●	●
V70 (08-)	2014	SAS	●	●	●	●
V70 (08-)	2014	SRS	●	●	●	●
V70 (08-)	2014	SUB	●	●	●	○
V70 (08-)	2014	SUM	●	●	●	●
V70 (08-)	2014	TCM	●	●	●	●
V70 (08-)	2014	TCM	●	●	●	●
V70 (08-)	2014	TCM	●	●	●	○
V70 (08-)	2014	TRM	●	●	●	●
V70 (08-)	2014	TVM	●	●	●	○
V70 (08-)	2013	AUD	●	●	●	○
V70 (08-)	2013	BCM	●	●	●	●
V70 (08-)	2013	CCM	●	●	●	●
V70 (08-)	2013	CEM	●	●	●	●
V70 (08-)	2013	CPM	●	●	●	●
V70 (08-)	2013	CVM	●	●	●	●
V70 (08-)	2013	DABM	●	●	●	●
V70 (08-)	2013	DDM	●	●	●	●
V70 (08-)	2013	DEM	●	●	●	○
V70 (08-)	2013	DIM	●	●	●	●
V70 (08-)	2013	ECM	●	●	●	●
V70 (08-)	2013	ECM	●	●	●	●
V70 (08-)	2013	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (08-)	2013	ECM	●	●	●	●
V70 (08-)	2013	ECM	●	●	●	●
V70 (08-)	2013	ECM	●	●	●	●
V70 (08-)	2013	ECM	●	●	●	●
V70 (08-)	2013	ECM	●	●	●	●
V70 (08-)	2013	ECM	●	●	●	●
V70 (08-)	2013	ECM	●	●	●	●
V70 (08-)	2013	ECM	●	●	●	●
V70 (08-)	2013	ECM	●	●	●	●
V70 (08-)	2013	FLR	●	●	●	○
V70 (08-)	2013	FSM	●	●	●	●
V70 (08-)	2013	HLDF	●	●	●	○
V70 (08-)	2013	IAM	●	●	●	●
V70 (08-)	2013	ICM	●	●	●	●
V70 (08-)	2013	KVM	●	●	●	●
V70 (08-)	2013	PAC	●	●	●	●
V70 (08-)	2013	PAM	●	●	●	●
V70 (08-)	2013	PBM	●	●	●	●
V70 (08-)	2013	PDM	●	●	●	●
V70 (08-)	2013	PHM	●	●	●	●
V70 (08-)	2013	POT	●	●	●	●
V70 (08-)	2013	PSCM	●	●	●	●
V70 (08-)	2013	PSM	●	●	●	●
V70 (08-)	2013	RDAR	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (08-)	2013	RSE	●	●	●	●
V70 (08-)	2013	SAS	●	●	●	●
V70 (08-)	2013	SRS	●	●	●	●
V70 (08-)	2013	SUB	●	●	●	○
V70 (08-)	2013	SUM	●	●	●	●
V70 (08-)	2013	TCM	●	●	●	●
V70 (08-)	2013	TCM	●	●	●	●
V70 (08-)	2013	TCM	●	●	●	●
V70 (08-)	2013	TCM	●	●	●	●
V70 (08-)	2013	TRM	●	●	●	●
V70 (08-)	2013	TVM	●	●	●	●
V70 (08-)	2012	AUD	●	●	●	○
V70 (08-)	2012	BCM	●	●	●	●
V70 (08-)	2012	CCM	●	●	●	●
V70 (08-)	2012	CEM	●	●	●	●
V70 (08-)	2012	CPM	●	●	●	●
V70 (08-)	2012	CVM	●	●	●	○
V70 (08-)	2012	DABM	●	●	●	○
V70 (08-)	2012	DDM	●	●	●	●
V70 (08-)	2012	DEM	●	●	●	●
V70 (08-)	2012	DIM	●	●	●	●
V70 (08-)	2012	ECM	●	●	●	●
V70 (08-)	2012	ECM	●	●	●	●
V70 (08-)	2012	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (08-)	2012	ECM	●	●	●	●
V70 (08-)	2012	ECM	●	●	●	●
V70 (08-)	2012	ECM	●	●	●	●
V70 (08-)	2012	ECM	●	●	●	●
V70 (08-)	2012	ECM	●	●	●	●
V70 (08-)	2012	ECM	●	●	●	●
V70 (08-)	2012	ECM	●	●	●	●
V70 (08-)	2012	FLR	●	●	●	○
V70 (08-)	2012	FSM	●	●	●	●
V70 (08-)	2012	HLDf	●	●	●	○
V70 (08-)	2012	IAM	●	●	●	●
V70 (08-)	2012	ICM	●	●	●	●
V70 (08-)	2012	KVM	●	●	●	●
V70 (08-)	2012	PAC	●	●	●	●
V70 (08-)	2012	PAM	●	●	●	●
V70 (08-)	2012	PBM	●	●	●	●
V70 (08-)	2012	PDM	●	●	●	●
V70 (08-)	2012	PHM	●	●	●	●
V70 (08-)	2012	POT	●	●	●	●
V70 (08-)	2012	PSCM	●	●	●	●
V70 (08-)	2012	PSM	●	●	●	●
V70 (08-)	2012	RDAR	●	●	●	○
V70 (08-)	2012	RSE	●	●	●	●
V70 (08-)	2012	SAS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (08-)	2012	SRS	●	●	●	●
V70 (08-)	2012	SUB	●	●	●	○
V70 (08-)	2012	SUM	●	●	●	●
V70 (08-)	2012	TCM	●	●	●	●
V70 (08-)	2012	TCM	●	●	●	●
V70 (08-)	2012	TCM	●	●	●	●
V70 (08-)	2012	TCM	●	●	●	●
V70 (08-)	2012	TCM	●	●	●	●
V70 (08-)	2012	TRM	●	●	●	●
V70 (08-)	2012	TVM	●	●	●	●
V70 (08-)	2011	ADM	●	●	●	●
V70 (08-)	2011	AUD	●	●	●	○
V70 (08-)	2011	AUU	●	●	●	●
V70 (08-)	2011	BCM	●	●	●	●
V70 (08-)	2011	BPM	●	●	●	●
V70 (08-)	2011	CCM	●	●	●	●
V70 (08-)	2011	CEM	●	●	●	●
V70 (08-)	2011	CPM	●	●	●	●
V70 (08-)	2011	DABM	●	●	●	○
V70 (08-)	2011	DDM	●	●	●	●
V70 (08-)	2011	DEM	●	●	●	●
V70 (08-)	2011	DIM	●	●	●	●
V70 (08-)	2011	ECM	●	●	●	●
V70 (08-)	2011	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (08-)	2011	ECM	●	●	●	●
V70 (08-)	2011	ECM	●	●	●	●
V70 (08-)	2011	ECM	●	●	●	●
V70 (08-)	2011	ECM	●	●	●	●
V70 (08-)	2011	ECM	●	●	●	●
V70 (08-)	2011	ECM	●	●	●	●
V70 (08-)	2011	ECM	●	●	●	●
V70 (08-)	2011	ECM	●	●	●	●
V70 (08-)	2011	ECM	●	●	●	●
V70 (08-)	2011	ECM	●	●	●	●
V70 (08-)	2011	FLR	●	●	●	○
V70 (08-)	2011	FSM	●	●	●	●
V70 (08-)	2011	HCM	●	●	●	●
V70 (08-)	2011	HLDF	●	●	●	●
V70 (08-)	2011	IAM	●	●	●	●
V70 (08-)	2011	ICM	●	●	●	●
V70 (08-)	2011	KVM	●	●	●	●
V70 (08-)	2011	MMM	●	●	●	○
V70 (08-)	2011	PAC	●	●	●	●
V70 (08-)	2011	PAM	●	●	●	●
V70 (08-)	2011	PBM	●	●	●	●
V70 (08-)	2011	PDM	●	●	●	●
V70 (08-)	2011	PHM	●	●	●	●
V70 (08-)	2011	POT	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (08-)	2011	PSCM	●	●	●	●
V70 (08-)	2011	PSCM	●	●	●	●
V70 (08-)	2011	PSM	●	●	●	●
V70 (08-)	2011	RDAR	●	●	●	○
V70 (08-)	2011	SAS	●	●	●	●
V70 (08-)	2011	SRS	●	●	●	●
V70 (08-)	2011	SUB	●	●	●	○
V70 (08-)	2011	SUM	●	●	●	●
V70 (08-)	2011	TCM	●	●	●	●
V70 (08-)	2011	TCM	●	●	●	●
V70 (08-)	2011	TCM	●	●	●	●
V70 (08-)	2011	TCM	●	●	●	●
V70 (08-)	2011	TCM	●	●	●	●
V70 (08-)	2011	TCM	●	●	●	●
V70 (08-)	2011	TCM	●	●	●	●
V70 (08-)	2011	TCM	●	●	●	●
V70 (08-)	2011	TRM	●	●	●	●
V70 (08-)	2010	ADM	●	●	●	●
V70 (08-)	2010	AUD	●	●	●	○
V70 (08-)	2010	AUU	●	●	●	●
V70 (08-)	2010	BCM	●	●	●	●
V70 (08-)	2010	BPM	●	●	●	●
V70 (08-)	2010	CCM	●	●	●	●
V70 (08-)	2010	CEM	●	●	●	●
V70 (08-)	2010	CPM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (08-)	2010	DABM	●	●	●	○
V70 (08-)	2010	DDM	●	●	●	●
V70 (08-)	2010	DEM	●	●	●	●
V70 (08-)	2010	DIM	●	●	●	●
V70 (08-)	2010	ECM	●	●	●	●
V70 (08-)	2010	ECM	●	●	●	●
V70 (08-)	2010	ECM	●	●	●	●
V70 (08-)	2010	ECM	●	●	●	●
V70 (08-)	2010	ECM	●	●	●	●
V70 (08-)	2010	ECM	●	●	●	●
V70 (08-)	2010	ECM	●	●	●	●
V70 (08-)	2010	ECM	●	●	●	●
V70 (08-)	2010	ECM	●	●	●	●
V70 (08-)	2010	ECM	●	●	●	●
V70 (08-)	2010	ECM	●	●	●	●
V70 (08-)	2010	ECM	●	●	●	●
V70 (08-)	2010	ECM	●	●	●	●
V70 (08-)	2010	FLR	●	●	●	○
V70 (08-)	2010	FSM	●	●	●	●
V70 (08-)	2010	HCM	●	●	●	●
V70 (08-)	2010	HLDf	●	●	●	●
V70 (08-)	2010	IAM	●	●	●	●
V70 (08-)	2010	ICM	●	●	●	●
V70 (08-)	2010	KVM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (08-)	2010	TRM	●	●	●	●
V70 (08-)	2009	AUD	●	●	●	○
V70 (08-)	2009	AUU	●	●	●	●
V70 (08-)	2009	BCM	●	●	●	●
V70 (08-)	2009	BPM	●	●	●	●
V70 (08-)	2009	CCM	●	●	●	●
V70 (08-)	2009	CEM	●	●	●	●
V70 (08-)	2009	CPM	●	●	●	●
V70 (08-)	2009	DABM	●	●	●	○
V70 (08-)	2009	DDM	●	●	●	●
V70 (08-)	2009	DEM	●	●	●	●
V70 (08-)	2009	DEM	●	●	●	●
V70 (08-)	2009	DIM	●	●	●	●
V70 (08-)	2009	ECM	●	●	●	●
V70 (08-)	2009	ECM	●	●	●	●
V70 (08-)	2009	ECM	●	●	●	●
V70 (08-)	2009	ECM	●	●	●	●
V70 (08-)	2009	ECM	●	●	●	●
V70 (08-)	2009	ECM	●	●	●	●
V70 (08-)	2009	ECM	●	●	●	●
V70 (08-)	2009	ECM	●	●	●	●
V70 (08-)	2009	ECM	●	●	●	●
V70 (08-)	2009	ECM	●	●	●	●
V70 (08-)	2009	FSM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (08-)	2009	TCM	●	●	●	●
V70 (08-)	2009	TCM	●	●	●	●
V70 (08-)	2009	TRM	●	●	●	●
V70 (08-)	2008	AUD	●	●	●	○
V70 (08-)	2008	AUU	●	●	●	●
V70 (08-)	2008	BCM	●	●	●	●
V70 (08-)	2008	BPM	●	●	●	●
V70 (08-)	2008	CCM	●	●	●	●
V70 (08-)	2008	CEM	●	●	●	●
V70 (08-)	2008	CPM	●	●	●	●
V70 (08-)	2008	DDM	●	●	●	●
V70 (08-)	2008	DEM	●	●	●	●
V70 (08-)	2008	DEM	●	●	●	●
V70 (08-)	2008	DIM	●	●	●	●
V70 (08-)	2008	ECM	●	●	●	●
V70 (08-)	2008	ECM	●	●	●	●
V70 (08-)	2008	ECM	●	●	●	●
V70 (08-)	2008	ECM	●	●	●	●
V70 (08-)	2008	ECM	●	●	●	●
V70 (08-)	2008	ECM	●	●	●	●
V70 (08-)	2008	ECM	●	●	●	●
V70 (08-)	2008	ECM	●	●	●	●
V70 (08-)	2008	FSM	●	●	●	●
V70 (08-)	2008	HCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (08-)	2008	HLDF	●	●	●	●
V70 (08-)	2008	IAM	●	●	●	○
V70 (08-)	2008	ICM	●	●	●	●
V70 (08-)	2008	KVM	●	●	●	●
V70 (08-)	2008	MMM	●	●	●	○
V70 (08-)	2008	PAC	●	●	●	●
V70 (08-)	2008	PAM	●	●	●	●
V70 (08-)	2008	PBM	●	●	●	●
V70 (08-)	2008	PDM	●	●	●	●
V70 (08-)	2008	PHM	●	●	●	●
V70 (08-)	2008	POT	●	●	●	●
V70 (08-)	2008	PSM	●	●	●	●
V70 (08-)	2008	RDAR	●	●	●	○
V70 (08-)	2008	SAS	●	●	●	●
V70 (08-)	2008	SRS	●	●	●	●
V70 (08-)	2008	SUB	●	●	●	○
V70 (08-)	2008	SUM	●	●	●	●
V70 (08-)	2008	TCM	●	●	●	●
V70 (08-)	2008	TCM	●	●	●	●
V70 (08-)	2008	TCM	●	●	●	●
V70 (08-)	2008	TCM	●	●	●	●
V70 (08-)	2008	TCM	●	●	●	●
V70 (08-)	2008	TRM	●	●	●	●
V70 (00-08)	2008	AEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (00-08)	2008	AUM	●	●	●	●
V70 (00-08)	2008	AUU	●	●	●	○
V70 (00-08)	2008	BCM	●	●	●	●
V70 (00-08)	2008	CCM	●	●	●	●
V70 (00-08)	2008	CEM	●	●	●	●
V70 (00-08)	2008	CPM	●	●	●	●
V70 (00-08)	2008	DDM	●	●	●	●
V70 (00-08)	2008	DEM	●	●	●	●
V70 (00-08)	2008	DIM	●	●	●	●
V70 (00-08)	2008	ECM	●	●	●	●
V70 (00-08)	2008	ECM	●	●	●	●
V70 (00-08)	2008	ECM	●	●	●	●
V70 (00-08)	2008	ECM	●	●	●	●
V70 (00-08)	2008	ECM	●	●	●	●
V70 (00-08)	2008	ECM	●	●	●	●
V70 (00-08)	2008	ECM	●	●	●	●
V70 (00-08)	2008	ETM	●	●	●	●
V70 (00-08)	2008	HCM	●	●	●	●
V70 (00-08)	2008	PDM	●	●	●	●
V70 (00-08)	2008	PHM	●	●	●	●
V70 (00-08)	2008	PSM	●	●	●	●
V70 (00-08)	2008	REM	●	●	●	●
V70 (00-08)	2008	RTI	●	●	●	○
V70 (00-08)	2008	SAS	●	●	●	●
V70 (00-08)	2008	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (00-08)	2007	ECM	●	●	●	●
V70 (00-08)	2007	ECM	●	●	●	●
V70 (00-08)	2007	ETM	●	●	●	●
V70 (00-08)	2007	HCM	●	●	●	●
V70 (00-08)	2007	PDM	●	●	●	●
V70 (00-08)	2007	PHM	●	●	●	●
V70 (00-08)	2007	PSM	●	●	●	●
V70 (00-08)	2007	REM	●	●	●	●
V70 (00-08)	2007	RTI	●	●	●	○
V70 (00-08)	2007	SAS	●	●	●	●
V70 (00-08)	2007	SRS	●	●	●	●
V70 (00-08)	2007	SUM	●	●	●	●
V70 (00-08)	2007	TCM	●	●	●	●
V70 (00-08)	2007	TCM	●	●	●	●
V70 (00-08)	2007	TCM	●	●	●	●
V70 (00-08)	2007	TCM	●	●	●	●
V70 (00-08)	2007	TCM	●	●	●	●
V70 (00-08)	2007	TCM	●	●	●	●
V70 (00-08)	2007	UEM	●	●	●	●
V70 (00-08)	2006	AEM	●	●	●	●
V70 (00-08)	2006	AUM	●	●	●	●
V70 (00-08)	2006	BCM	●	●	●	●
V70 (00-08)	2006	CCM	●	●	●	●
V70 (00-08)	2006	CEM	●	●	●	●
V70 (00-08)	2006	CPM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (00-08)	2006	DDM	●	●	●	●
V70 (00-08)	2006	DEM	●	●	●	●
V70 (00-08)	2006	DEM	●	●	●	●
V70 (00-08)	2006	DEM	●	●	●	●
V70 (00-08)	2006	DEM	●	●	●	●
V70 (00-08)	2006	DIM	●	●	●	●
V70 (00-08)	2006	ECM	●	●	●	●
V70 (00-08)	2006	ECM	●	●	●	●
V70 (00-08)	2006	ECM	●	●	●	●
V70 (00-08)	2006	ECM	●	●	●	●
V70 (00-08)	2006	ECM	●	●	●	●
V70 (00-08)	2006	ECM	●	●	●	●
V70 (00-08)	2006	ECM	●	●	●	●
V70 (00-08)	2006	ECM	●	●	●	●
V70 (00-08)	2006	ECM	●	●	●	●
V70 (00-08)	2006	ECM	●	●	●	●
V70 (00-08)	2006	ECM	●	●	●	●
V70 (00-08)	2006	ECM	●	●	●	●
V70 (00-08)	2006	ECM	●	●	●	●
V70 (00-08)	2006	ETM	●	●	●	●
V70 (00-08)	2006	PDM	●	●	●	●
V70 (00-08)	2006	PHM	●	●	●	●
V70 (00-08)	2006	PSM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (00-08)	2006	REM	●	●	●	●
V70 (00-08)	2006	RTI	●	●	●	○
V70 (00-08)	2006	SAS	●	●	●	●
V70 (00-08)	2006	SRS	●	●	●	●
V70 (00-08)	2006	SUM	●	●	●	●
V70 (00-08)	2006	TCM	●	●	●	●
V70 (00-08)	2006	TCM	●	●	●	●
V70 (00-08)	2006	TCM	●	●	●	●
V70 (00-08)	2006	TCM	●	●	●	●
V70 (00-08)	2006	TCM	●	●	●	●
V70 (00-08)	2006	TCM	●	●	●	●
V70 (00-08)	2006	UEM	●	●	●	●
V60 Cross Country	2015	AUD	●	●	●	○
V60 Cross Country	2015	BCM	●	●	●	●
V60 Cross Country	2015	CCM	●	●	●	●
V60 Cross Country	2015	CEM	●	●	●	●
V60 Cross Country	2015	CPM	●	●	●	●
V60 Cross Country	2015	CVM	●	●	●	●
V60 Cross Country	2015	DABM	●	●	●	○
V60 Cross Country	2015	DDM	●	●	●	●
V60 Cross Country	2015	DEM	●	●	●	○
V60 Cross Country	2015	DIM	●	●	●	●
V60 Cross Country	2015	ECM	●	●	●	●
V60 Cross Country	2015	FLR	●	●	●	○
V60 Cross Country	2015	FSM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V60 Cross Country	2015	IAM	●	●	●	●
V60 Cross Country	2015	ICM	●	●	●	●
V60 Cross Country	2015	KVM	●	●	●	●
V60 Cross Country	2015	PAC	●	●	●	○
V60 Cross Country	2015	PAM	●	●	●	●
V60 Cross Country	2015	PBM	●	●	●	●
V60 Cross Country	2015	PDM	●	●	●	●
V60 Cross Country	2015	PHM	●	●	●	●
V60 Cross Country	2015	PSCM	●	●	●	○
V60 Cross Country	2015	PSM	●	●	●	●
V60 Cross Country	2015	RDAR	●	●	●	○
V60 Cross Country	2015	SAS	●	●	●	●
V60 Cross Country	2015	SODL	●	●	●	●
V60 Cross Country	2015	SODR	●	●	●	●
V60 Cross Country	2015	SRS	●	●	●	●
V60 Cross Country	2015	SUM	●	●	●	●
V60 Cross Country	2015	TCM	●	●	●	○
V60 Cross Country	2015	TRM	●	●	●	●
V60 Cross Country	2015	TVM	●	●	●	○
V60	2015A	AUD	●	●	●	○
V60	2015A	BCM	●	●	●	●
V60	2015A	CCM	●	●	●	●
V60	2015A	CEM	●	●	●	●
V60	2015A	CPM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V60	2015A	CVM	●	●	●	●
V60	2015A	DABM	●	●	●	○
V60	2015A	DDM	●	●	●	●
V60	2015A	DEM	●	●	●	○
V60	2015A	DIM	●	●	●	●
V60	2015A	ECM	●	●	●	●
V60	2015A	ECM	●	●	●	●
V60	2015A	ECM	●	●	●	●
V60	2015A	ECM	●	●	●	●
V60	2015A	FLR	●	●	●	○
V60	2015A	FSM	●	●	●	●
V60	2015A	IAM	●	●	●	●
V60	2015A	ICM	●	●	●	●
V60	2015A	KVM	●	●	●	●
V60	2015A	PAC	●	●	●	○
V60	2015A	PAM	●	●	●	●
V60	2015A	PBM	●	●	●	●
V60	2015A	PDM	●	●	●	●
V60	2015A	PHM	●	●	●	●
V60	2015A	PSCM	●	●	●	●
V60	2015A	PSCM	●	●	●	●
V60	2015A	PSCM	●	●	●	●
V60	2015A	PSM	●	●	●	●
V60	2015A	RDAR	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V60	2015A	SAS	●	●	●	●
V60	2015A	SODL	●	●	●	●
V60	2015A	SODR	●	●	●	●
V60	2015A	SRS	●	●	●	●
V60	2015A	SUM	●	●	●	●
V60	2015A	TCM	●	●	●	●
V60	2015A	TCM	●	●	●	○
V60	2015A	TRM	●	●	●	●
V60	2015A	TVM	●	●	●	○
V60	2015	ACCM	●	●	●	●
V60	2015	ACCM	●	●	●	●
V60	2015	AUD	●	●	●	○
V60	2015	BCM	●	●	●	○
V60	2015	BCM	●	●	●	●
V60	2015	BCM	●	●	●	●
V60	2015	BECM	●	●	●	●
V60	2015	BECM	●	●	●	●
V60	2015	CCM	●	●	●	●
V60	2015	CEM	●	●	●	●
V60	2015	CPM	●	●	●	●
V60	2015	CVM	●	●	●	●
V60	2015	DABM	●	●	●	●
V60	2015	DCDC	●	●	●	●
V60	2015	DCDC	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V60	2015	ECM	●	●	●	●
V60	2015	FLR	●	●	●	○
V60	2015	FSM	●	●	●	●
V60	2015	IAM	●	●	●	●
V60	2015	ICM	●	●	●	●
V60	2015	IEM	●	●	●	●
V60	2015	IEM	●	●	●	●
V60	2015	IGM	●	●	●	●
V60	2015	IGM	●	●	●	●
V60	2015	KVM	●	●	●	●
V60	2015	OBC	●	●	●	●
V60	2015	OBC	●	●	●	●
V60	2015	PAC	●	●	●	○
V60	2015	PAM	●	●	●	●
V60	2015	PBM	●	●	●	●
V60	2015	PDM	●	●	●	●
V60	2015	PHM	●	●	●	●
V60	2015	PSCM	●	●	●	●
V60	2015	PSCM	●	●	●	●
V60	2015	PSCM	●	●	●	●
V60	2015	PSCM	●	●	●	○
V60	2015	PSCM	●	●	●	○
V60	2015	PSCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V60	2015	PSM	●	●	●	●
V60	2015	RDAR	●	●	●	○
V60	2015	SAS	●	●	●	●
V60	2015	SODL	●	●	●	●
V60	2015	SODR	●	●	●	●
V60	2015	SRS	●	●	●	●
V60	2015	SUM	●	●	●	●
V60	2015	TCM	●	●	●	○
V60	2015	TCM	●	●	●	○
V60	2015	TCM	●	●	●	●
V60	2015	TCM	●	●	●	●
V60	2015	TCM	●	●	●	○
V60	2015	TRM	●	●	●	●
V60	2015	TVM	●	●	●	○
V60	2014	ACCM	●	●	●	●
V60	2014	AUD	●	●	●	○
V60	2014	BCM	●	●	●	●
V60	2014	BCM	●	●	●	●
V60	2014	BECM	●	●	●	●
V60	2014	CCM	●	●	●	●
V60	2014	CEM	●	●	●	●
V60	2014	CPM	●	●	●	●
V60	2014	CVM	●	●	●	●
V60	2014	DABM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V60	2014	ECM	●	●	●	●
V60	2014	FLR	●	●	●	○
V60	2014	FSM	●	●	●	●
V60	2014	IAM	●	●	●	●
V60	2014	ICM	●	●	●	●
V60	2014	IEM	●	●	●	●
V60	2014	IGM	●	●	●	●
V60	2014	KVM	●	●	●	●
V60	2014	OBC	●	●	●	●
V60	2014	PAC	●	●	●	○
V60	2014	PAM	●	●	●	●
V60	2014	PBM	●	●	●	●
V60	2014	PDM	●	●	●	●
V60	2014	PHM	●	●	●	●
V60	2014	PSCM	●	●	●	●
V60	2014	PSCM	●	●	●	●
V60	2014	PSCM	●	●	●	●
V60	2014	PSCM	●	●	●	●
V60	2014	PSCM	●	●	●	○
V60	2014	PSCM	●	●	●	●
V60	2014	PSM	●	●	●	●
V60	2014	RDAR	●	●	●	○
V60	2014	SAS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V60	2014	SODL	●	●	●	●
V60	2014	SODR	●	●	●	●
V60	2014	SRS	●	●	●	●
V60	2014	SUM	●	●	●	●
V60	2014	TCM	●	●	●	○
V60	2014	TCM	●	●	●	●
V60	2014	TCM	●	●	●	●
V60	2014	TCM	●	●	●	○
V60	2014	TRM	●	●	●	●
V60	2014	TVM	●	●	●	○
V60	2013	ACCM	●	●	●	●
V60	2013	AUD	●	●	●	○
V60	2013	BCM	●	●	●	●
V60	2013	BCM	●	●	●	●
V60	2013	BECM	●	●	●	●
V60	2013	CCM	●	●	●	●
V60	2013	CEM	●	●	●	○
V60	2013	CEM	●	●	●	●
V60	2013	CPM	●	●	●	●
V60	2013	CVM	●	●	●	●
V60	2013	DABM	●	●	●	●
V60	2013	DCDC	●	●	●	●
V60	2013	DDM	●	●	●	●
V60	2013	DEM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V60	2013	DIM	●	●	●	●
V60	2013	DIM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ECM	●	●	●	●
V60	2013	ESM	●	●	●	○
V60	2013	FLR	●	●	●	○
V60	2013	FSM	●	●	●	●
V60	2013	IAM	●	●	●	●
V60	2013	ICM	●	●	●	●
V60	2013	IEM	●	●	●	●
V60	2013	IGM	●	●	●	●
V60	2013	KVM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V60	2013	OBC	●	●	●	●
V60	2013	PAC	●	●	●	○
V60	2013	PAM	●	●	●	●
V60	2013	PBM	●	●	●	●
V60	2013	PDM	●	●	●	●
V60	2013	PHM	●	●	●	●
V60	2013	PSCM	●	●	●	●
V60	2013	PSM	●	●	●	●
V60	2013	RDAR	●	●	●	○
V60	2013	SAS	●	●	●	●
V60	2013	SRS	●	●	●	●
V60	2013	SUM	●	●	●	●
V60	2013	TCM	●	●	●	○
V60	2013	TCM	●	●	●	●
V60	2013	TCM	●	●	●	●
V60	2013	TCM	●	●	●	●
V60	2013	TCM	●	●	●	●
V60	2013	TRM	●	●	●	●
V60	2013	TVM	●	●	●	●
V60	2012	AUD	●	●	●	○
V60	2012	BCM	●	●	●	●
V60	2012	CCM	●	●	●	●
V60	2012	CEM	●	●	●	●
V60	2012	CPM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V60	2012	CVM	●	●	●	○
V60	2012	DABM	●	●	●	○
V60	2012	DDM	●	●	●	●
V60	2012	DEM	●	●	●	●
V60	2012	DIM	●	●	●	●
V60	2012	ECM	●	●	●	●
V60	2012	ECM	●	●	●	●
V60	2012	ECM	●	●	●	●
V60	2012	ECM	●	●	●	●
V60	2012	ECM	●	●	●	●
V60	2012	ECM	●	●	●	●
V60	2012	ECM	●	●	●	●
V60	2012	ECM	●	●	●	●
V60	2012	ECM	●	●	●	●
V60	2012	FLR	●	●	●	○
V60	2012	FSM	●	●	●	●
V60	2012	IAM	●	●	●	●
V60	2012	ICM	●	●	●	●
V60	2012	KVM	●	●	●	●
V60	2012	PAC	●	●	●	○
V60	2012	PAM	●	●	●	●
V60	2012	PBM	●	●	●	●
V60	2012	PDM	●	●	●	●
V60	2012	PHM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V60	2012	PSCM	●	●	●	●
V60	2012	PSM	●	●	●	●
V60	2012	RDAR	●	●	●	○
V60	2012	SAS	●	●	●	●
V60	2012	SRS	●	●	●	●
V60	2012	SUM	●	●	●	●
V60	2012	TCM	●	●	●	●
V60	2012	TCM	●	●	●	●
V60	2012	TCM	●	●	●	●
V60	2012	TCM	●	●	●	●
V60	2012	TRM	●	●	●	●
V60	2012	TVM	●	●	●	●
V60	2011	AUD	●	●	●	○
V60	2011	AUU	●	●	●	○
V60	2011	BCM	●	●	●	●
V60	2011	CCM	●	●	●	●
V60	2011	CEM	●	●	●	●
V60	2011	CPM	●	●	●	●
V60	2011	CVM	●	●	●	●
V60	2011	DABM	●	●	●	○
V60	2011	DDM	●	●	●	●
V60	2011	DEM	●	●	●	●
V60	2011	DIM	●	●	●	●
V60	2011	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V60	2011	ECM	●	●	●	●
V60	2011	ECM	●	●	●	●
V60	2011	ECM	●	●	●	●
V60	2011	ECM	●	●	●	●
V60	2011	ECM	●	●	●	●
V60	2011	ECM	●	●	●	●
V60	2011	ECM	●	●	●	●
V60	2011	FLR	●	●	●	○
V60	2011	FSM	●	●	●	●
V60	2011	HCM	●	●	●	●
V60	2011	HLDf	●	●	●	●
V60	2011	IAM	●	●	●	●
V60	2011	ICM	●	●	●	●
V60	2011	KVM	●	●	●	●
V60	2011	PAC	●	●	●	○
V60	2011	PAM	●	●	●	●
V60	2011	PBM	●	●	●	●
V60	2011	PDM	●	●	●	●
V60	2011	PHM	●	●	●	●
V60	2011	PSCM	●	●	●	●
V60	2011	PSM	●	●	●	●
V60	2011	RDAR	●	●	●	○
V60	2011	SAS	●	●	●	●
V60	2011	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V60	2011	SUM	●	●	●	●
V60	2011	TCM	●	●	●	●
V60	2011	TCM	●	●	●	●
V60	2011	TCM	●	●	●	●
V60	2011	TRM	●	●	●	●
V60	2011	TVM	●	●	●	●
V50	2012	AEM	●	●	●	●
V50	2012	AUD	●	●	●	○
V50	2012	AUU	●	●	●	●
V50	2012	BCM	●	●	●	●
V50	2012	BCM	●	●	●	●
V50	2012	BCM	●	●	●	●
V50	2012	BCM	●	●	●	●
V50	2012	BPM	●	●	●	●
V50	2012	CCM	●	●	●	●
V50	2012	CEM	●	●	●	●
V50	2012	CEM	●	●	●	●
V50	2012	CEM	●	●	●	●
V50	2012	CEM	●	●	●	●
V50	2012	CEM-HS	●	●	●	●
V50	2012	CEM-HS	●	●	●	●
V50	2012	CEM-HS	●	●	●	●
V50	2012	CEM-HS	●	●	●	●
V50	2012	CPM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2012	DDM	●	●	●	●
V50	2012	DIM	●	●	●	●
V50	2012	ECM	●	●	●	●
V50	2012	ECM	●	●	●	●
V50	2012	ECM	●	●	●	●
V50	2012	ECM	●	●	●	●
V50	2012	ECM	●	●	●	●
V50	2012	ECM	●	●	●	●
V50	2012	ECM	●	●	●	●
V50	2012	EPS	●	●	●	●
V50	2012	EPS	●	●	●	●
V50	2012	EPS	●	●	●	●
V50	2012	EPS	●	●	●	●
V50	2012	HCM	●	●	●	●
V50	2012	HCM	●	●	●	●
V50	2012	HCM	●	●	●	●
V50	2012	HCM	●	●	●	●
V50	2012	IAM	●	●	●	●
V50	2012	ICM	●	●	●	●
V50	2012	KVM	●	●	●	●
V50	2012	MMM	●	●	●	●
V50	2012	PAM	●	●	●	●
V50	2012	PDM	●	●	●	●
V50	2012	PHM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2012	PSM	●	●	●	●
V50	2012	RDAR	●	●	●	●
V50	2012	SAS	●	●	●	●
V50	2012	SAS	●	●	●	●
V50	2012	SAS	●	●	●	●
V50	2012	SRS	●	●	●	●
V50	2012	SUB	●	●	●	○
V50	2012	SWM	●	●	●	●
V50	2012	TCM	●	●	●	●
V50	2012	TCM	●	●	●	●
V50	2012	TCM	●	●	●	●
V50	2012	TCM	●	●	●	●
V50	2012	TRM	●	●	●	●
V50	2011	ADM	●	●	●	●
V50	2011	AEM	●	●	●	●
V50	2011	AUD	●	●	●	○
V50	2011	AUU	●	●	●	●
V50	2011	BCM	●	●	●	●
V50	2011	BCM	●	●	●	●
V50	2011	BCM	●	●	●	●
V50	2011	BCM	●	●	●	●
V50	2011	BPM	●	●	●	●
V50	2011	CCM	●	●	●	●
V50	2011	CEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2011	CEM	●	●	●	●
V50	2011	CEM	●	●	●	●
V50	2011	CEM	●	●	●	●
V50	2011	CEM-HS	●	●	●	●
V50	2011	CEM-HS	●	●	●	●
V50	2011	CEM-HS	●	●	●	●
V50	2011	CEM-HS	●	●	●	●
V50	2011	CPM	●	●	●	●
V50	2011	DDM	●	●	●	●
V50	2011	DIM	●	●	●	●
V50	2011	ECM	●	●	●	●
V50	2011	ECM	●	●	●	●
V50	2011	ECM	●	●	●	●
V50	2011	ECM	●	●	●	●
V50	2011	ECM	●	●	●	●
V50	2011	ECM	●	●	●	●
V50	2011	ECM	●	●	●	●
V50	2011	ECM	●	●	●	●
V50	2011	ECM	●	●	●	●
V50	2011	EPS	●	●	●	●
V50	2011	EPS	●	●	●	●
V50	2011	EPS	●	●	●	●
V50	2011	EPS	●	●	●	●
V50	2011	HCM	●	●	●	●
V50	2011	HCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2011	HCM	●	●	●	●
V50	2011	HCM	●	●	●	●
V50	2011	IAM	●	●	●	●
V50	2011	ICM	●	●	●	●
V50	2011	KVM	●	●	●	●
V50	2011	MMM	●	●	●	●
V50	2011	PAM	●	●	●	●
V50	2011	PDM	●	●	●	●
V50	2011	PHM	●	●	●	●
V50	2011	PSM	●	●	●	●
V50	2011	RDAR	●	●	●	●
V50	2011	SAS	●	●	●	●
V50	2011	SAS	●	●	●	●
V50	2011	SAS	●	●	●	●
V50	2011	SRS	●	●	●	●
V50	2011	SUB	●	●	●	○
V50	2011	SWM	●	●	●	●
V50	2011	TCM	●	●	●	●
V50	2011	TCM	●	●	●	●
V50	2011	TCM	●	●	●	●
V50	2011	TCM	●	●	●	●
V50	2011	TRM	●	●	●	●
V50	2010	ADM	●	●	●	●
V50	2010	ADM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2010	ECM	●	●	●	●
V50	2010	ECM	●	●	●	●
V50	2010	ECM	●	●	●	●
V50	2010	EPS	●	●	●	●
V50	2010	HCM	●	●	●	●
V50	2010	IAM	●	●	●	●
V50	2010	ICM	●	●	●	●
V50	2010	KVM	●	●	●	●
V50	2010	MMM	●	●	●	●
V50	2010	PAM	●	●	●	●
V50	2010	PDM	●	●	●	●
V50	2010	PHM	●	●	●	●
V50	2010	PSM	●	●	●	●
V50	2010	RDAR	●	●	●	●
V50	2010	SRS	●	●	●	●
V50	2010	SUB	●	●	●	○
V50	2010	SWM	●	●	●	●
V50	2010	TCM	●	●	●	●
V50	2010	TCM	●	●	●	●
V50	2010	TCM	●	●	●	●
V50	2010	TRM	●	●	●	●
V50	2009	ADM	●	●	●	●
V50	2009	ADM	●	●	●	●
V50	2009	AEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2009	ECM	●	●	●	●
V50	2009	EPS	●	●	●	●
V50	2009	HCM	●	●	●	●
V50	2009	IAM	●	●	●	●
V50	2009	ICM	●	●	●	●
V50	2009	KVM	●	●	●	●
V50	2009	MMM	●	●	●	●
V50	2009	PAM	●	●	●	●
V50	2009	PDM	●	●	●	●
V50	2009	PHM	●	●	●	●
V50	2009	PSM	●	●	●	●
V50	2009	RDAR	●	●	●	●
V50	2009	SRS	●	●	●	●
V50	2009	SUB	●	●	●	○
V50	2009	SWM	●	●	●	●
V50	2009	TCM	●	●	●	●
V50	2009	TCM	●	●	●	●
V50	2009	TCM	●	●	●	●
V50	2009	TRM	●	●	●	●
V50	2008	ADM	●	●	●	●
V50	2008	ADM	●	●	●	●
V50	2008	AEM	●	●	●	●
V50	2008	AUD	●	●	●	○
V50	2008	AUU	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2008	BCM	●	●	●	●
V50	2008	CCM	●	●	●	●
V50	2008	CEM	●	●	●	●
V50	2008	CEM-HS	○	○	○	○
V50	2008	CPM	●	●	●	●
V50	2008	DDM	●	●	●	●
V50	2008	DEM	●	●	●	●
V50	2008	DEM	●	●	●	●
V50	2008	DIM	●	●	●	●
V50	2008	ECM	●	●	●	●
V50	2008	ECM	●	●	●	●
V50	2008	ECM	●	●	●	●
V50	2008	ECM	●	●	●	●
V50	2008	ECM	●	●	●	●
V50	2008	ECM	●	●	●	●
V50	2008	ECM	●	●	●	●
V50	2008	ECM	●	●	●	●
V50	2008	ECM	●	●	●	●
V50	2008	ECM	●	●	●	●
V50	2008	ECM	●	●	●	●
V50	2008	ECM	●	●	●	●
V50	2008	ECM	●	●	●	●
V50	2008	EPS	●	●	●	●
V50	2008	HCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2008	IAM	●	●	●	●
V50	2008	ICM	●	●	●	●
V50	2008	KVM	●	●	●	●
V50	2008	MMM	●	●	●	○
V50	2008	PAM	●	●	●	●
V50	2008	PDM	●	●	●	●
V50	2008	PHM	●	●	●	●
V50	2008	PSM	●	●	●	●
V50	2008	RDAR	●	●	●	●
V50	2008	SRS	●	●	●	●
V50	2008	SUB	●	●	●	○
V50	2008	SWM	●	●	●	●
V50	2008	TCM	●	●	●	●
V50	2008	TCM	●	●	●	●
V50	2008	TCM	●	●	●	●
V50	2008	TRM	●	●	●	●
V50	2007	ADM	●	●	●	●
V50	2007	ADM	●	●	●	●
V50	2007	AEM	●	●	●	●
V50	2007	AUD	●	●	●	○
V50	2007	BCM	●	●	●	●
V50	2007	CCM	●	●	●	●
V50	2007	CEM	●	●	●	●
V50	2007	CEM-HS	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2007	CPM	●	●	●	●
V50	2007	DDM	●	●	●	●
V50	2007	DEM	●	●	●	●
V50	2007	DEM	●	●	●	●
V50	2007	DIM	●	●	●	●
V50	2007	ECM	●	●	●	●
V50	2007	ECM	●	●	●	●
V50	2007	ECM	●	●	●	●
V50	2007	ECM	●	●	●	●
V50	2007	ECM	●	●	●	●
V50	2007	ECM	●	●	●	●
V50	2007	ECM	●	●	●	●
V50	2007	ECM	●	●	●	●
V50	2007	ECM	●	●	●	●
V50	2007	ECM	●	●	●	●
V50	2007	ECM	●	●	●	●
V50	2007	EPS	●	●	●	●
V50	2007	GPS	●	●	●	●
V50	2007	IAM	●	●	●	●
V50	2007	ICM	●	●	●	●
V50	2007	KVM	●	●	●	●
V50	2007	MMM	●	●	●	○
V50	2007	PAM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2007	PDM	●	●	●	●
V50	2007	PHM	●	●	●	●
V50	2007	PSM	●	●	●	●
V50	2007	RDAR	●	●	●	●
V50	2007	SRS	●	●	●	●
V50	2007	SUB	●	●	●	○
V50	2007	SWM	●	●	●	●
V50	2007	TCM	●	●	●	●
V50	2007	TCM	●	●	●	●
V50	2007	TMC	●	●	●	●
V50	2007	TRM	●	●	●	●
V50	2006	ADM	●	●	●	●
V50	2006	ADM	●	●	●	●
V50	2006	ADM	●	●	●	●
V50	2006	AEM	●	●	●	●
V50	2006	AUD	●	●	●	○
V50	2006	BCM	●	●	●	●
V50	2006	CCM	●	●	●	●
V50	2006	CEM	●	●	●	●
V50	2006	CEM-HS	○	○	○	○
V50	2006	CPM	●	●	●	●
V50	2006	DDM	●	●	●	●
V50	2006	DEM	●	●	●	●
V50	2006	DEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2006	DIM	●	●	●	●
V50	2006	ECM	●	●	●	●
V50	2006	ECM	●	●	●	●
V50	2006	ECM	●	●	●	●
V50	2006	ECM	●	●	●	●
V50	2006	ECM	●	●	●	●
V50	2006	ECM	●	●	●	●
V50	2006	ECM	●	●	●	●
V50	2006	ECM	●	●	●	●
V50	2006	ECM	●	●	●	●
V50	2006	ECM	●	●	●	●
V50	2006	ECM	●	●	●	●
V50	2006	ECM	●	●	●	●
V50	2006	EPS	●	●	●	●
V50	2006	GPS	●	●	●	●
V50	2006	IAM	●	●	●	●
V50	2006	ICM	●	●	●	●
V50	2006	KVM	●	●	●	●
V50	2006	MMM	●	●	●	○
V50	2006	PAM	●	●	●	●
V50	2006	PDM	●	●	●	●
V50	2006	PHM	●	●	●	●
V50	2006	PSM	●	●	●	●
V50	2006	SRS	●	●	●	●
V50	2006	SUB	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40 Cross Country	2015	ECM	●	●	●	●
V40 Cross Country	2015	FLR	●	●	●	○
V40 Cross Country	2015	FSM	●	●	●	●
V40 Cross Country	2015	IAM	●	●	●	●
V40 Cross Country	2015	ICM	●	●	●	●
V40 Cross Country	2015	KVM	●	●	●	●
V40 Cross Country	2015	PAC	●	●	●	●
V40 Cross Country	2015	PAM	●	●	●	●
V40 Cross Country	2015	PBM	●	●	●	●
V40 Cross Country	2015	PDM	●	●	●	●
V40 Cross Country	2015	PHM	●	●	●	●
V40 Cross Country	2015	PPM	●	●	●	●
V40 Cross Country	2015	PSCM	●	●	●	●
V40 Cross Country	2015	PSM	●	●	●	●
V40 Cross Country	2015	SAS	●	●	●	●
V40 Cross Country	2015	SODL	●	●	●	●
V40 Cross Country	2015	SODR	●	●	●	●
V40 Cross Country	2015	SRS	●	●	●	●
V40 Cross Country	2015	TCM	●	●	●	●
V40 Cross Country	2015	TCM	●	●	●	●
V40 Cross Country	2015	TCM	●	●	●	●
V40 Cross Country	2015	TCM	●	●	●	○
V40 Cross Country	2015	TRM	●	●	●	●
V40 Cross Country	2015	TVM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40 Cross Country	2014	AUD	●	○	●	○
V40 Cross Country	2014	BCM	●	●	●	●
V40 Cross Country	2014	CCM	●	●	●	●
V40 Cross Country	2014	CEM	●	●	●	●
V40 Cross Country	2014	CPM	●	●	●	●
V40 Cross Country	2014	CVM	●	●	●	●
V40 Cross Country	2014	DABM	●	●	●	●
V40 Cross Country	2014	DDM	●	●	●	●
V40 Cross Country	2014	DEM	●	●	●	○
V40 Cross Country	2014	DIM	●	●	●	●
V40 Cross Country	2014	ECM	●	●	●	●
V40 Cross Country	2014	ECM	●	●	●	●
V40 Cross Country	2014	ECM	●	●	●	●
V40 Cross Country	2014	ECM	●	●	●	●
V40 Cross Country	2014	ECM	●	●	●	●
V40 Cross Country	2014	ECM	●	●	●	●
V40 Cross Country	2014	ECM	●	●	●	●
V40 Cross Country	2014	ECM	●	●	●	●
V40 Cross Country	2014	ECM	●	●	●	●
V40 Cross Country	2014	FLR	●	●	●	○
V40 Cross Country	2014	FSM	●	●	●	●
V40 Cross Country	2014	IAM	●	●	●	●
V40 Cross Country	2014	ICM	●	●	●	●
V40 Cross Country	2014	KVM	●	●	●	●
V40 Cross Country	2014	PAC	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40 Cross Country	2014	PAM	●	●	●	●
V40 Cross Country	2014	PDM	●	●	●	●
V40 Cross Country	2014	PHM	●	●	●	●
V40 Cross Country	2014	PPM	●	●	●	●
V40 Cross Country	2014	PSCM	●	●	●	●
V40 Cross Country	2014	PSM	●	●	●	●
V40 Cross Country	2014	RDAR	●	●	●	○
V40 Cross Country	2014	SAS	●	●	●	●
V40 Cross Country	2014	SODL	●	●	●	●
V40 Cross Country	2014	SODR	●	●	●	●
V40 Cross Country	2014	SRS	●	●	●	●
V40 Cross Country	2014	TCM	●	●	●	●
V40 Cross Country	2014	TCM	●	●	●	○
V40 Cross Country	2014	TRM	●	●	●	●
V40 Cross Country	2014	TVM	●	●	●	●
V40 Cross Country	2013	AUD	●	○	●	○
V40 Cross Country	2013	BCM	●	●	●	●
V40 Cross Country	2013	CCM	●	●	●	●
V40 Cross Country	2013	CEM	●	●	●	●
V40 Cross Country	2013	CPM	●	●	●	●
V40 Cross Country	2013	CVM	●	●	●	●
V40 Cross Country	2013	DABM	●	●	●	●
V40 Cross Country	2013	DDM	●	●	●	●
V40 Cross Country	2013	DEM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40 Cross Country	2013	DIM	●	●	●	●
V40 Cross Country	2013	ECM	●	●	●	●
V40 Cross Country	2013	ECM	●	●	●	●
V40 Cross Country	2013	ECM	●	●	●	●
V40 Cross Country	2013	ECM	●	●	●	●
V40 Cross Country	2013	ECM	●	●	●	●
V40 Cross Country	2013	ECM	●	●	●	●
V40 Cross Country	2013	ECM	●	●	●	●
V40 Cross Country	2013	ECM	●	●	●	●
V40 Cross Country	2013	FLR	●	●	●	○
V40 Cross Country	2013	FSM	●	●	●	●
V40 Cross Country	2013	IAM	●	●	●	●
V40 Cross Country	2013	ICM	●	●	●	●
V40 Cross Country	2013	KVM	●	●	●	●
V40 Cross Country	2013	PAC	●	●	●	●
V40 Cross Country	2013	PAM	●	●	●	●
V40 Cross Country	2013	PDM	●	●	●	●
V40 Cross Country	2013	PHM	●	●	●	●
V40 Cross Country	2013	PPM	●	●	●	●
V40 Cross Country	2013	PSCM	●	●	●	●
V40 Cross Country	2013	PSM	●	●	●	●
V40 Cross Country	2013	RDAR	●	●	●	○
V40 Cross Country	2013	SAS	●	●	●	●
V40 Cross Country	2013	SODL	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40 Cross Country	2013	SODR	●	●	●	●
V40 Cross Country	2013	SRS	●	●	●	●
V40 Cross Country	2013	TCM	●	●	●	●
V40 Cross Country	2013	TCM	●	●	●	●
V40 Cross Country	2013	TCM	●	●	●	●
V40 Cross Country	2013	TRM	●	●	●	●
V40 Cross Country	2013	TVM	●	●	●	●
V40 (13-)	2015	AUD	●	○	●	○
V40 (13-)	2015	BCM	●	●	●	○
V40 (13-)	2015	CCM	●	●	●	●
V40 (13-)	2015	CEM	●	●	●	●
V40 (13-)	2015	CPM	●	●	●	●
V40 (13-)	2015	CVM	●	●	●	●
V40 (13-)	2015	DABM	●	●	●	●
V40 (13-)	2015	DDM	●	●	●	●
V40 (13-)	2015	DIM	●	●	●	●
V40 (13-)	2015	ECM	●	●	●	●
V40 (13-)	2015	ECM	●	●	●	●
V40 (13-)	2015	ECM	●	●	●	●
V40 (13-)	2015	ECM	●	●	●	○
V40 (13-)	2015	ECM	●	●	●	●
V40 (13-)	2015	ECM	●	●	●	●
V40 (13-)	2015	ECM	●	●	●	●
V40 (13-)	2015	ECM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40 (13-)	2015	ECM	●	●	●	●
V40 (13-)	2015	FLR	●	●	●	○
V40 (13-)	2015	FSM	●	●	●	●
V40 (13-)	2015	IAM	●	●	●	●
V40 (13-)	2015	ICM	●	●	●	●
V40 (13-)	2015	KVM	●	●	●	●
V40 (13-)	2015	PAC	●	●	●	●
V40 (13-)	2015	PAM	●	●	●	●
V40 (13-)	2015	PBM	●	●	●	●
V40 (13-)	2015	PDM	●	●	●	●
V40 (13-)	2015	PHM	●	●	●	●
V40 (13-)	2015	PPM	●	●	●	●
V40 (13-)	2015	PSCM	●	●	●	●
V40 (13-)	2015	PSM	●	●	●	●
V40 (13-)	2015	SAS	●	●	●	●
V40 (13-)	2015	SODL	●	●	●	●
V40 (13-)	2015	SODR	●	●	●	●
V40 (13-)	2015	SRS	●	●	●	●
V40 (13-)	2015	TCM	●	●	●	●
V40 (13-)	2015	TCM	●	●	●	○
V40 (13-)	2015	TCM	●	●	●	●
V40 (13-)	2015	TCM	●	●	●	○
V40 (13-)	2015	TRM	●	●	●	●
V40 (13-)	2015	TVM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40 (13-)	2014	AUD	●	○	●	○
V40 (13-)	2014	BCM	●	●	●	●
V40 (13-)	2014	CCM	●	●	●	●
V40 (13-)	2014	CEM	●	●	●	●
V40 (13-)	2014	CPM	●	●	●	●
V40 (13-)	2014	CVM	●	●	●	●
V40 (13-)	2014	DABM	●	●	●	●
V40 (13-)	2014	DDM	●	●	●	●
V40 (13-)	2014	DIM	●	●	●	●
V40 (13-)	2014	ECM	●	●	●	●
V40 (13-)	2014	ECM	●	●	●	●
V40 (13-)	2014	ECM	●	●	●	●
V40 (13-)	2014	ECM	●	●	●	●
V40 (13-)	2014	ECM	●	●	●	●
V40 (13-)	2014	ECM	●	●	●	●
V40 (13-)	2014	ECM	●	●	●	●
V40 (13-)	2014	ECM	●	●	●	●
V40 (13-)	2014	ECM	●	●	●	●
V40 (13-)	2014	ECM	●	●	●	●
V40 (13-)	2014	FLR	●	●	●	○
V40 (13-)	2014	FSM	●	●	●	●
V40 (13-)	2014	IAM	●	●	●	●
V40 (13-)	2014	ICM	●	●	●	●
V40 (13-)	2014	KVM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40 (13-)	2014	PAC	●	●	●	●
V40 (13-)	2014	PAM	●	●	●	●
V40 (13-)	2014	PDM	●	●	●	●
V40 (13-)	2014	PHM	●	●	●	●
V40 (13-)	2014	PPM	●	●	●	●
V40 (13-)	2014	PSCM	●	●	●	●
V40 (13-)	2014	PSM	●	●	●	●
V40 (13-)	2014	RDAR	●	●	●	○
V40 (13-)	2014	SAS	●	●	●	●
V40 (13-)	2014	SODL	●	●	●	●
V40 (13-)	2014	SODR	●	●	●	●
V40 (13-)	2014	SRS	●	●	●	●
V40 (13-)	2014	TCM	●	●	●	●
V40 (13-)	2014	TCM	●	●	●	○
V40 (13-)	2014	TRM	●	●	●	●
V40 (13-)	2014	TVM	●	●	●	○
V40 (13-)	2013	AUD	●	○	●	○
V40 (13-)	2013	BCM	●	●	●	●
V40 (13-)	2013	CCM	●	●	●	●
V40 (13-)	2013	CEM	●	●	●	●
V40 (13-)	2013	CPM	●	●	●	●
V40 (13-)	2013	CVM	●	●	●	●
V40 (13-)	2013	DABM	●	●	●	●
V40 (13-)	2013	DDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40 (13-)	2013	DIM	●	●	●	●
V40 (13-)	2013	ECM	●	●	●	●
V40 (13-)	2013	ECM	●	●	●	●
V40 (13-)	2013	ECM	●	●	●	●
V40 (13-)	2013	ECM	●	●	●	●
V40 (13-)	2013	ECM	●	●	●	●
V40 (13-)	2013	ECM	●	●	●	●
V40 (13-)	2013	ECM	●	●	●	●
V40 (13-)	2013	ECM	●	●	●	●
V40 (13-)	2013	ECM	●	●	●	●
V40 (13-)	2013	FLR	●	●	●	○
V40 (13-)	2013	FSM	●	●	●	●
V40 (13-)	2013	IAM	●	●	●	●
V40 (13-)	2013	ICM	●	●	●	●
V40 (13-)	2013	KVM	●	●	●	●
V40 (13-)	2013	PAC	●	●	●	●
V40 (13-)	2013	PAM	●	●	●	●
V40 (13-)	2013	PDM	●	●	●	●
V40 (13-)	2013	PHM	●	●	●	●
V40 (13-)	2013	PPM	●	●	●	●
V40 (13-)	2013	PSCM	●	●	●	●
V40 (13-)	2013	PSM	●	●	●	●
V40 (13-)	2013	RDAR	●	●	●	○
V40 (13-)	2013	SAS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40 (13-)	2013	SODL	●	●	●	●
V40 (13-)	2013	SODR	●	●	●	●
V40 (13-)	2013	SRS	●	●	●	●
V40 (13-)	2013	TCM	●	●	●	●
V40 (13-)	2013	TCM	●	●	●	●
V40 (13-)	2013	TRM	●	●	●	●
V40 (13-)	2013	TVM	●	●	●	●
S80L	2015	AUD	●	●	●	○
S80L	2015	BCM	●	●	●	●
S80L	2015	CCM	●	●	●	●
S80L	2015	CEM	●	●	●	●
S80L	2015	CPM	●	●	●	●
S80L	2015	CVM	●	●	●	●
S80L	2015	DABM	●	●	●	●
S80L	2015	DDM	●	●	●	●
S80L	2015	DIM	●	●	●	●
S80L	2015	ECM	●	●	●	●
S80L	2015	FLR	●	●	●	○
S80L	2015	FSM	●	●	●	●
S80L	2015	HLDf	●	●	●	○
S80L	2015	IAM	●	●	●	●
S80L	2015	ICM	●	●	●	●
S80L	2015	KVM	●	●	●	●
S80L	2015	PAC	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80L	2015	PAM	●	●	●	●
S80L	2015	PBM	●	●	●	●
S80L	2015	PDM	●	●	●	●
S80L	2015	PHM	●	●	●	●
S80L	2015	PSCM	●	●	●	●
S80L	2015	PSM	●	●	●	●
S80L	2015	RDAR	●	●	●	○
S80L	2015	RSE	●	●	●	●
S80L	2015	SAS	●	●	●	●
S80L	2015	SRS	●	●	●	●
S80L	2015	SUM	●	●	●	●
S80L	2015	TCM	●	●	●	○
S80L	2015	TRM	●	●	●	●
S80L	2015	TVM	●	●	●	○
S80L	2014	AUD	●	●	●	○
S80L	2014	BCM	●	●	●	●
S80L	2014	CCM	●	●	●	●
S80L	2014	CEM	●	●	●	●
S80L	2014	CPM	●	●	●	●
S80L	2014	CVM	●	●	●	●
S80L	2014	DABM	●	●	●	●
S80L	2014	DDM	●	●	●	●
S80L	2014	DEM	●	●	●	○
S80L	2014	DIM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80L	2014	ECM	●	●	●	●
S80L	2014	ECM	●	●	●	●
S80L	2014	ECM	●	●	●	●
S80L	2014	FLR	●	●	●	○
S80L	2014	FSM	●	●	●	●
S80L	2014	HLDf	●	●	●	○
S80L	2014	IAM	●	●	●	●
S80L	2014	ICM	●	●	●	●
S80L	2014	KVM	●	●	●	●
S80L	2014	PAC	●	●	●	●
S80L	2014	PAM	●	●	●	●
S80L	2014	PBM	●	●	●	●
S80L	2014	PDM	●	●	●	●
S80L	2014	PHM	●	●	●	●
S80L	2014	PSCM	●	●	●	●
S80L	2014	PSM	●	●	●	●
S80L	2014	RDAR	●	●	●	○
S80L	2014	RSE	●	●	●	●
S80L	2014	SAS	●	●	●	●
S80L	2014	SRS	●	●	●	●
S80L	2014	SUM	●	●	●	●
S80L	2014	TCM	●	●	●	○
S80L	2014	TRM	●	●	●	●
S80L	2014	TVM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80L	2013	AUD	●	●	●	○
S80L	2013	BCM	●	●	●	●
S80L	2013	CCM	●	●	●	●
S80L	2013	CEM	●	●	●	●
S80L	2013	CPM	●	●	●	●
S80L	2013	CVM	●	●	●	●
S80L	2013	DABM	●	●	●	●
S80L	2013	DDM	●	●	●	●
S80L	2013	DEM	●	●	●	○
S80L	2013	DIM	●	●	●	●
S80L	2013	ECM	●	●	●	●
S80L	2013	ECM	●	●	●	●
S80L	2013	ECM	●	●	●	●
S80L	2013	ECM	●	●	●	●
S80L	2013	ECM	●	●	●	●
S80L	2013	FLR	●	●	●	○
S80L	2013	FSM	●	●	●	●
S80L	2013	HLDf	●	●	●	○
S80L	2013	IAM	●	●	●	●
S80L	2013	ICM	●	●	●	●
S80L	2013	KVM	●	●	●	●
S80L	2013	PAC	●	●	●	●
S80L	2013	PAM	●	●	●	●
S80L	2013	PBM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80L	2013	PDM	●	●	●	●
S80L	2013	PHM	●	●	●	●
S80L	2013	PSCM	●	●	●	●
S80L	2013	PSM	●	●	●	●
S80L	2013	RDAR	●	●	●	○
S80L	2013	RSE	●	●	●	●
S80L	2013	SAS	●	●	●	●
S80L	2013	SRS	●	●	●	●
S80L	2013	SUM	●	●	●	●
S80L	2013	TCM	●	●	●	●
S80L	2013	TCM	●	●	●	●
S80L	2013	TCM	●	●	●	●
S80L	2013	TRM	●	●	●	●
S80L	2013	TVM	●	●	●	○
S80L	2012	AUD	●	●	●	○
S80L	2012	AUU	●	●	●	○
S80L	2012	BCM	●	●	●	●
S80L	2012	BPM	●	●	●	○
S80L	2012	CCM	●	●	●	●
S80L	2012	CEM	●	●	●	●
S80L	2012	CPM	●	●	●	●
S80L	2012	CVM	●	●	●	○
S80L	2012	DABM	●	●	●	○
S80L	2012	DDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80L	2012	DEM	●	●	●	●
S80L	2012	DIM	●	●	●	●
S80L	2012	ECM	●	●	●	●
S80L	2012	ECM	●	●	●	●
S80L	2012	ECM	●	●	●	●
S80L	2012	ECM	●	●	●	●
S80L	2012	ECM	●	●	●	●
S80L	2012	ECM	●	●	●	●
S80L	2012	FLR	●	●	●	○
S80L	2012	FSM	●	●	●	●
S80L	2012	HCM	●	●	●	○
S80L	2012	HLDf	●	●	●	○
S80L	2012	IAM	●	●	●	●
S80L	2012	ICM	●	●	●	●
S80L	2012	KVM	●	●	●	●
S80L	2012	MMM	●	●	●	○
S80L	2012	PAC	●	●	●	●
S80L	2012	PAM	●	●	●	●
S80L	2012	PBM	●	●	●	●
S80L	2012	PDM	●	●	●	●
S80L	2012	PHM	●	●	●	●
S80L	2012	PSCM	●	●	●	●
S80L	2012	PSM	●	●	●	●
S80L	2012	RDAR	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80L	2012	RSE	●	●	●	●
S80L	2012	SAS	●	●	●	●
S80L	2012	SRS	●	●	●	●
S80L	2012	SUM	●	●	●	●
S80L	2012	TCM	●	●	●	●
S80L	2012	TCM	●	●	●	●
S80L	2012	TCM	●	●	●	●
S80L	2012	TRM	●	●	●	●
S80L	2011	AUD	●	●	●	○
S80L	2011	AUU	●	●	●	●
S80L	2011	BCM	●	●	●	●
S80L	2011	BPM	●	●	●	●
S80L	2011	CCM	●	●	●	●
S80L	2011	CEM	●	●	●	●
S80L	2011	CPM	●	●	●	●
S80L	2011	DABM	●	●	●	○
S80L	2011	DDM	●	●	●	●
S80L	2011	DEM	●	●	●	●
S80L	2011	DIM	●	●	●	●
S80L	2011	ECM	●	●	●	●
S80L	2011	ECM	●	●	●	●
S80L	2011	FLR	●	●	●	○
S80L	2011	FSM	●	●	●	●
S80L	2011	HCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80L	2011	HLDf	●	●	●	●
S80L	2011	IAM	●	●	●	●
S80L	2011	ICM	●	●	●	●
S80L	2011	KVM	●	●	●	●
S80L	2011	MMM	●	●	●	○
S80L	2011	PAC	●	●	●	●
S80L	2011	PAM	●	●	●	●
S80L	2011	PBM	●	●	●	●
S80L	2011	PDM	●	●	●	●
S80L	2011	PHM	●	●	●	●
S80L	2011	PSCM	●	●	●	●
S80L	2011	PSM	●	●	●	●
S80L	2011	RDAR	●	●	●	○
S80L	2011	SAS	●	●	●	●
S80L	2011	SRS	●	●	●	●
S80L	2011	SUM	●	●	●	●
S80L	2011	TCM	●	●	●	●
S80L	2011	TCM	●	●	●	●
S80L	2011	TRM	●	●	●	●
S80L	2010	AUD	●	●	●	○
S80L	2010	AUU	●	●	●	●
S80L	2010	BCM	●	●	●	●
S80L	2010	BPM	●	●	●	●
S80L	2010	CCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80L	2010	CEM	●	●	●	●
S80L	2010	CPM	●	●	●	●
S80L	2010	DABM	●	●	●	○
S80L	2010	DDM	●	●	●	●
S80L	2010	DEM	●	●	●	●
S80L	2010	DIM	●	●	●	●
S80L	2010	ECM	●	●	●	●
S80L	2010	ECM	●	●	●	●
S80L	2010	ECM	●	●	●	●
S80L	2010	ECM	●	●	●	●
S80L	2010	FLR	●	●	●	○
S80L	2010	FSM	●	●	●	●
S80L	2010	HCM	●	●	●	●
S80L	2010	HLDf	●	●	●	●
S80L	2010	IAM	●	●	●	●
S80L	2010	ICM	●	●	●	●
S80L	2010	KVM	●	●	●	●
S80L	2010	MMM	●	●	●	○
S80L	2010	PAC	●	●	●	●
S80L	2010	PAM	●	●	●	●
S80L	2010	PBM	●	●	●	●
S80L	2010	PDM	●	●	●	●
S80L	2010	PHM	●	●	●	●
S80L	2010	PSM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80L	2010	RDAR	●	●	●	○
S80L	2010	SAS	●	●	●	●
S80L	2010	SRS	●	●	●	●
S80L	2010	SUM	●	●	●	●
S80L	2010	TCM	●	●	●	●
S80L	2010	TCM	●	●	●	●
S80L	2010	TCM	●	●	●	●
S80L	2010	TCM	●	●	●	●
S80L	2010	TCM	●	●	●	●
S80L	2010	TRM	●	●	●	●
S80L	2009	AUD	●	●	●	○
S80L	2009	AUU	●	●	●	●
S80L	2009	BCM	●	●	●	●
S80L	2009	BPM	●	●	●	●
S80L	2009	CCM	●	●	●	●
S80L	2009	CEM	●	●	●	●
S80L	2009	CPM	●	●	●	●
S80L	2009	DABM	●	●	●	○
S80L	2009	DDM	●	●	●	●
S80L	2009	DEM	●	●	●	●
S80L	2009	DIM	●	●	●	●
S80L	2009	ECM	●	●	●	●
S80L	2009	ECM	●	●	●	●
S80L	2009	FSM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80L	2009	HCM	●	●	●	●
S80L	2009	HLDf	●	●	●	●
S80L	2009	IAM	●	●	●	●
S80L	2009	ICM	●	●	●	●
S80L	2009	KVM	●	●	●	●
S80L	2009	MMM	●	●	●	○
S80L	2009	PAC	●	●	●	●
S80L	2009	PAM	●	●	●	●
S80L	2009	PBM	●	●	●	●
S80L	2009	PDM	●	●	●	●
S80L	2009	PHM	●	●	●	●
S80L	2009	PSM	●	●	●	●
S80L	2009	RDAR	●	●	●	○
S80L	2009	SAS	●	●	●	●
S80L	2009	SRS	●	●	●	●
S80L	2009	SUM	●	●	●	●
S80L	2009	TCM	●	●	●	●
S80L	2009	TCM	●	●	●	●
S80L	2009	TCM	●	●	●	●
S80L	2009	TCM	●	●	●	●
S80L	2009	TRM	●	●	●	●
S80 (07-)	2015A	AUD	●	●	●	○
S80 (07-)	2015A	BCM	●	●	●	●
S80 (07-)	2015A	CCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2015A	CEM	●	●	●	●
S80 (07-)	2015A	CPM	●	●	●	●
S80 (07-)	2015A	CVM	●	●	●	●
S80 (07-)	2015A	DABM	●	●	●	○
S80 (07-)	2015A	DDM	●	●	●	●
S80 (07-)	2015A	DEM	●	●	●	○
S80 (07-)	2015A	DIM	●	●	●	●
S80 (07-)	2015A	ECM	●	●	●	●
S80 (07-)	2015A	ECM	●	●	●	●
S80 (07-)	2015A	ECM	●	●	●	●
S80 (07-)	2015A	ECM	●	●	●	●
S80 (07-)	2015A	ECM	●	●	●	●
S80 (07-)	2015A	FLR	●	●	●	○
S80 (07-)	2015A	FSM	●	●	●	●
S80 (07-)	2015A	HLDf	●	●	●	○
S80 (07-)	2015A	IAM	●	●	●	●
S80 (07-)	2015A	ICM	●	●	●	●
S80 (07-)	2015A	KVM	●	●	●	●
S80 (07-)	2015A	PAC	●	●	●	●
S80 (07-)	2015A	PAM	●	●	●	●
S80 (07-)	2015A	PBM	●	●	●	●
S80 (07-)	2015A	PDM	●	●	●	●
S80 (07-)	2015A	PHM	●	●	●	●
S80 (07-)	2015A	PSCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2015A	PSM	●	●	●	●
S80 (07-)	2015A	RDAR	●	●	●	○
S80 (07-)	2015A	RSE	●	●	●	●
S80 (07-)	2015A	SAS	●	●	●	●
S80 (07-)	2015A	SRS	●	●	●	●
S80 (07-)	2015A	SUM	●	●	●	●
S80 (07-)	2015A	TCM	●	●	●	●
S80 (07-)	2015A	TCM	●	●	●	○
S80 (07-)	2015A	TRM	●	●	●	●
S80 (07-)	2015A	TVM	●	●	●	○
S80 (07-)	2015	AUD	●	●	●	○
S80 (07-)	2015	BCM	●	●	●	○
S80 (07-)	2015	CCM	●	●	●	●
S80 (07-)	2015	CEM	●	●	●	○
S80 (07-)	2015	CPM	●	●	●	●
S80 (07-)	2015	CVM	●	●	●	●
S80 (07-)	2015	DABM	●	●	●	●
S80 (07-)	2015	DDM	●	●	●	●
S80 (07-)	2015	DEM	●	●	●	○
S80 (07-)	2015	DIM	●	●	●	●
S80 (07-)	2015	ECM	●	●	●	●
S80 (07-)	2015	ECM	●	●	●	●
S80 (07-)	2015	ECM	●	●	●	●
S80 (07-)	2015	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2015	ECM	●	●	●	●
S80 (07-)	2015	ECM	●	●	●	●
S80 (07-)	2015	ECM	●	●	●	●
S80 (07-)	2015	ECM	●	●	●	●
S80 (07-)	2015	FLR	●	●	●	○
S80 (07-)	2015	FSM	●	●	●	●
S80 (07-)	2015	IAM	●	●	●	●
S80 (07-)	2015	ICM	●	●	●	●
S80 (07-)	2015	KVM	●	●	●	●
S80 (07-)	2015	PAC	●	●	●	●
S80 (07-)	2015	PAM	●	●	●	●
S80 (07-)	2015	PBM	●	●	●	●
S80 (07-)	2015	PDM	●	●	●	●
S80 (07-)	2015	PHM	●	●	●	●
S80 (07-)	2015	PSCM	●	●	●	●
S80 (07-)	2015	PSM	●	●	●	●
S80 (07-)	2015	RDAR	●	●	●	○
S80 (07-)	2015	SAS	●	●	●	●
S80 (07-)	2015	SRS	●	●	●	●
S80 (07-)	2015	SUM	●	●	●	●
S80 (07-)	2015	TCM	●	●	●	●
S80 (07-)	2015	TCM	●	●	●	●
S80 (07-)	2015	TCM	●	●	●	○
S80 (07-)	2015	TRM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2014	ECM	●	●	●	●
S80 (07-)	2014	ECM	●	●	●	●
S80 (07-)	2014	ECM	●	●	●	●
S80 (07-)	2014	ECM	●	●	●	●
S80 (07-)	2014	ECM	●	●	●	●
S80 (07-)	2014	FLR	●	●	●	○
S80 (07-)	2014	FSM	●	●	●	●
S80 (07-)	2014	HLDf	●	●	●	○
S80 (07-)	2014	IAM	●	●	●	●
S80 (07-)	2014	ICM	●	●	●	●
S80 (07-)	2014	KVM	●	●	●	●
S80 (07-)	2014	PAC	●	●	●	●
S80 (07-)	2014	PAM	●	●	●	●
S80 (07-)	2014	PBM	●	●	●	●
S80 (07-)	2014	PDM	●	●	●	●
S80 (07-)	2014	PHM	●	●	●	●
S80 (07-)	2014	PSCM	●	●	●	●
S80 (07-)	2014	PSM	●	●	●	●
S80 (07-)	2014	RDAR	●	●	●	○
S80 (07-)	2014	RSE	●	●	●	●
S80 (07-)	2014	SAS	●	●	●	●
S80 (07-)	2014	SRS	●	●	●	●
S80 (07-)	2014	SUM	●	●	●	●
S80 (07-)	2014	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2013	ECM	●	●	●	●
S80 (07-)	2013	ECM	●	●	●	●
S80 (07-)	2013	ECM	●	●	●	●
S80 (07-)	2013	ECM	●	●	●	●
S80 (07-)	2013	FLR	●	●	●	○
S80 (07-)	2013	FSM	●	●	●	●
S80 (07-)	2013	HLDf	●	●	●	○
S80 (07-)	2013	IAM	●	●	●	●
S80 (07-)	2013	ICM	●	●	●	●
S80 (07-)	2013	KVM	●	●	●	●
S80 (07-)	2013	PAC	●	●	●	●
S80 (07-)	2013	PAM	●	●	●	●
S80 (07-)	2013	PBM	●	●	●	●
S80 (07-)	2013	PDM	●	●	●	●
S80 (07-)	2013	PHM	●	●	●	●
S80 (07-)	2013	PSCM	●	●	●	●
S80 (07-)	2013	PSM	●	●	●	●
S80 (07-)	2013	RDAR	●	●	●	○
S80 (07-)	2013	RSE	●	●	●	●
S80 (07-)	2013	SAS	●	●	●	●
S80 (07-)	2013	SRS	●	●	●	●
S80 (07-)	2013	SUM	●	●	●	●
S80 (07-)	2013	TCM	●	●	●	●
S80 (07-)	2013	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2012	ECM	●	●	●	●
S80 (07-)	2012	ECM	●	●	●	●
S80 (07-)	2012	FLR	●	●	●	○
S80 (07-)	2012	FSM	●	●	●	●
S80 (07-)	2012	HLDf	●	●	●	○
S80 (07-)	2012	IAM	●	●	●	●
S80 (07-)	2012	ICM	●	●	●	●
S80 (07-)	2012	KVM	●	●	●	●
S80 (07-)	2012	PAC	●	●	●	●
S80 (07-)	2012	PAM	●	●	●	●
S80 (07-)	2012	PBM	●	●	●	●
S80 (07-)	2012	PDM	●	●	●	●
S80 (07-)	2012	PHM	●	●	●	●
S80 (07-)	2012	PSCM	●	●	●	●
S80 (07-)	2012	PSM	●	●	●	●
S80 (07-)	2012	RDAR	●	●	●	○
S80 (07-)	2012	RSE	●	●	●	●
S80 (07-)	2012	SAS	●	●	●	●
S80 (07-)	2012	SRS	●	●	●	●
S80 (07-)	2012	SUM	●	●	●	●
S80 (07-)	2012	TCM	●	●	●	●
S80 (07-)	2012	TCM	●	●	●	●
S80 (07-)	2012	TCM	●	●	●	●
S80 (07-)	2012	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2011	ECM	●	●	●	●
S80 (07-)	2011	ECM	●	●	●	●
S80 (07-)	2011	ECM	●	●	●	●
S80 (07-)	2011	ECM	●	●	●	●
S80 (07-)	2011	ECM	●	●	●	●
S80 (07-)	2011	ECM	●	●	●	●
S80 (07-)	2011	FLR	●	●	●	○
S80 (07-)	2011	FSM	●	●	●	●
S80 (07-)	2011	HCM	●	●	●	●
S80 (07-)	2011	HLDf	●	●	●	●
S80 (07-)	2011	IAM	●	●	●	●
S80 (07-)	2011	ICM	●	●	●	●
S80 (07-)	2011	KVM	●	●	●	●
S80 (07-)	2011	MMM	●	●	●	○
S80 (07-)	2011	PAC	●	●	●	●
S80 (07-)	2011	PAM	●	●	●	●
S80 (07-)	2011	PBM	●	●	●	●
S80 (07-)	2011	PDM	●	●	●	●
S80 (07-)	2011	PHM	●	●	●	●
S80 (07-)	2011	PSCM	●	●	●	●
S80 (07-)	2011	PSCM	●	●	●	●
S80 (07-)	2011	PSM	●	●	●	●
S80 (07-)	2011	RDAR	●	●	●	○
S80 (07-)	2011	SAS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2011	SRS	●	●	●	●
S80 (07-)	2011	SUM	●	●	●	●
S80 (07-)	2011	TCM	●	●	●	●
S80 (07-)	2011	TCM	●	●	●	●
S80 (07-)	2011	TCM	●	●	●	●
S80 (07-)	2011	TCM	●	●	●	●
S80 (07-)	2011	TCM	●	●	●	●
S80 (07-)	2011	TCM	●	●	●	●
S80 (07-)	2011	TCM	●	●	●	●
S80 (07-)	2011	TCM	●	●	●	●
S80 (07-)	2011	TRM	●	●	●	●
S80 (07-)	2010	ADM	●	●	●	●
S80 (07-)	2010	AUD	●	●	●	○
S80 (07-)	2010	AUU	●	●	●	●
S80 (07-)	2010	BCM	●	●	●	●
S80 (07-)	2010	BPM	●	●	●	●
S80 (07-)	2010	CCM	●	●	●	●
S80 (07-)	2010	CEM	●	●	●	●
S80 (07-)	2010	CPM	●	●	●	●
S80 (07-)	2010	DABM	●	●	●	○
S80 (07-)	2010	DDM	●	●	●	●
S80 (07-)	2010	DEM	●	●	●	●
S80 (07-)	2010	DIM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	ECM	●	●	●	●
S80 (07-)	2010	FLR	●	●	●	○
S80 (07-)	2010	FSM	●	●	●	●
S80 (07-)	2010	HCM	●	●	●	●
S80 (07-)	2010	HLDf	●	●	●	●
S80 (07-)	2010	IAM	●	●	●	●
S80 (07-)	2010	ICM	●	●	●	●
S80 (07-)	2010	KVM	●	●	●	●
S80 (07-)	2010	MMM	●	●	●	○
S80 (07-)	2010	PAC	●	●	●	●
S80 (07-)	2010	PAM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2010	PBM	●	●	●	●
S80 (07-)	2010	PDM	●	●	●	●
S80 (07-)	2010	PHM	●	●	●	●
S80 (07-)	2010	PSCM	●	●	●	●
S80 (07-)	2010	PSM	●	●	●	●
S80 (07-)	2010	RDAR	●	●	●	○
S80 (07-)	2010	SAS	●	●	●	●
S80 (07-)	2010	SRS	●	●	●	●
S80 (07-)	2010	SUM	●	●	●	●
S80 (07-)	2010	TCM	●	●	●	●
S80 (07-)	2010	TCM	●	●	●	●
S80 (07-)	2010	TCM	●	●	●	●
S80 (07-)	2010	TCM	●	●	●	●
S80 (07-)	2010	TCM	●	●	●	●
S80 (07-)	2010	TCM	●	●	●	●
S80 (07-)	2010	TCM	●	●	●	●
S80 (07-)	2010	TCM	●	●	●	●
S80 (07-)	2010	TCM	●	●	●	●
S80 (07-)	2010	TCM	●	●	●	●
S80 (07-)	2010	TCM	●	●	●	●
S80 (07-)	2010	TCM	●	●	●	●
S80 (07-)	2010	TRM	●	●	●	●
S80 (07-)	2009	AUD	●	●	●	○
S80 (07-)	2009	AUU	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2009	BCM	●	●	●	●
S80 (07-)	2009	BPM	●	●	●	●
S80 (07-)	2009	CCM	●	●	●	●
S80 (07-)	2009	CEM	●	●	●	●
S80 (07-)	2009	CPM	●	●	●	●
S80 (07-)	2009	DABM	●	●	●	○
S80 (07-)	2009	DDM	●	●	●	●
S80 (07-)	2009	DEM	●	●	●	●
S80 (07-)	2009	DEM	●	●	●	●
S80 (07-)	2009	DIM	●	●	●	●
S80 (07-)	2009	ECM	●	●	●	●
S80 (07-)	2009	ECM	●	●	●	●
S80 (07-)	2009	ECM	●	●	●	●
S80 (07-)	2009	ECM	●	●	●	●
S80 (07-)	2009	ECM	●	●	●	●
S80 (07-)	2009	ECM	●	●	●	●
S80 (07-)	2009	ECM	●	●	●	●
S80 (07-)	2009	ECM	●	●	●	●
S80 (07-)	2009	ECM	●	●	●	●
S80 (07-)	2009	ECM	●	●	●	●
S80 (07-)	2009	ECM	●	●	●	●
S80 (07-)	2009	FSM	●	●	●	●
S80 (07-)	2009	HCM	●	●	●	●
S80 (07-)	2009	HLDF	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2009	IAM	●	●	●	●
S80 (07-)	2009	ICM	●	●	●	●
S80 (07-)	2009	KVM	●	●	●	●
S80 (07-)	2009	MMM	●	●	●	○
S80 (07-)	2009	PAC	●	●	●	●
S80 (07-)	2009	PAM	●	●	●	●
S80 (07-)	2009	PBM	●	●	●	●
S80 (07-)	2009	PDM	●	●	●	●
S80 (07-)	2009	PHM	●	●	●	●
S80 (07-)	2009	PSM	●	●	●	●
S80 (07-)	2009	RDAR	●	●	●	○
S80 (07-)	2009	SAS	●	●	●	●
S80 (07-)	2009	SRS	●	●	●	●
S80 (07-)	2009	SUM	●	●	●	●
S80 (07-)	2009	TCM	●	●	●	●
S80 (07-)	2009	TCM	●	●	●	●
S80 (07-)	2009	TCM	●	●	●	●
S80 (07-)	2009	TCM	●	●	●	●
S80 (07-)	2009	TCM	●	●	●	●
S80 (07-)	2009	TCM	●	●	●	●
S80 (07-)	2009	TCM	●	●	●	●
S80 (07-)	2009	TCM	●	●	●	●
S80 (07-)	2009	TCM	●	●	●	●
S80 (07-)	2009	TRM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2008	AUD	●	●	●	○
S80 (07-)	2008	AUU	●	●	●	●
S80 (07-)	2008	BCM	●	●	●	●
S80 (07-)	2008	BPM	●	●	●	●
S80 (07-)	2008	CCM	●	●	●	●
S80 (07-)	2008	CEM	●	●	●	●
S80 (07-)	2008	CPM	●	●	●	●
S80 (07-)	2008	DDM	●	●	●	●
S80 (07-)	2008	DEM	●	●	●	●
S80 (07-)	2008	DEM	●	●	●	●
S80 (07-)	2008	DIM	●	●	●	●
S80 (07-)	2008	ECM	●	●	●	●
S80 (07-)	2008	ECM	●	●	●	●
S80 (07-)	2008	ECM	●	●	●	●
S80 (07-)	2008	ECM	●	●	●	●
S80 (07-)	2008	ECM	●	●	●	●
S80 (07-)	2008	ECM	●	●	●	●
S80 (07-)	2008	ECM	●	●	●	●
S80 (07-)	2008	ECM	●	●	●	●
S80 (07-)	2008	ECM	●	●	●	●
S80 (07-)	2008	FSM	●	●	●	●
S80 (07-)	2008	HCM	●	●	●	●
S80 (07-)	2008	HLDf	●	●	●	●
S80 (07-)	2008	IAM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2008	ICM	●	●	●	●
S80 (07-)	2008	KVM	●	●	●	●
S80 (07-)	2008	MMM	●	●	●	○
S80 (07-)	2008	PAC	●	●	●	●
S80 (07-)	2008	PAM	●	●	●	●
S80 (07-)	2008	PBM	●	●	●	●
S80 (07-)	2008	PDM	●	●	●	●
S80 (07-)	2008	PHM	●	●	●	●
S80 (07-)	2008	PSM	●	●	●	●
S80 (07-)	2008	RDAR	●	●	●	○
S80 (07-)	2008	SAS	●	●	●	●
S80 (07-)	2008	SRS	●	●	●	●
S80 (07-)	2008	SUM	●	●	●	●
S80 (07-)	2008	TCM	●	●	●	●
S80 (07-)	2008	TCM	●	●	●	●
S80 (07-)	2008	TCM	●	●	●	●
S80 (07-)	2008	TCM	●	●	●	●
S80 (07-)	2008	TCM	●	●	●	●
S80 (07-)	2008	TCM	●	●	●	●
S80 (07-)	2008	TRM	●	●	●	●
S80 (07-)	2007	AUD	●	●	●	○
S80 (07-)	2007	AUU	●	●	●	●
S80 (07-)	2007	BCM	●	●	●	●
S80 (07-)	2007	BPM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (07-)	2007	CCM	●	●	●	●
S80 (07-)	2007	CEM	●	●	●	●
S80 (07-)	2007	CPM	●	●	●	●
S80 (07-)	2007	DDM	●	●	●	●
S80 (07-)	2007	DEM	●	●	●	●
S80 (07-)	2007	DIM	●	●	●	●
S80 (07-)	2007	ECM	●	●	●	●
S80 (07-)	2007	ECM	●	●	●	●
S80 (07-)	2007	ECM	●	●	●	●
S80 (07-)	2007	ECM	●	●	●	●
S80 (07-)	2007	ECM	●	●	●	●
S80 (07-)	2007	ECM	●	●	●	●
S80 (07-)	2007	FSM	●	●	●	●
S80 (07-)	2007	HCM	●	●	●	●
S80 (07-)	2007	HLDF	●	●	●	●
S80 (07-)	2007	IAM	●	●	●	○
S80 (07-)	2007	ICM	●	●	●	●
S80 (07-)	2007	KVM	●	●	●	●
S80 (07-)	2007	MMM	●	●	●	○
S80 (07-)	2007	PAC	●	●	●	●
S80 (07-)	2007	PAM	●	●	●	●
S80 (07-)	2007	PBM	●	●	●	●
S80 (07-)	2007	PDM	●	●	●	●
S80 (07-)	2007	PHM	●	●	●	●
S80 (07-)	2007	PSM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80 (-06)	2006	ECM	●	●	●	●
S80 (-06)	2006	ECM	●	●	●	●
S80 (-06)	2006	ECM	●	●	●	●
S80 (-06)	2006	ECM	●	●	●	●
S80 (-06)	2006	ECM	●	●	●	●
S80 (-06)	2006	ETM	●	●	●	●
S80 (-06)	2006	PDM	●	●	●	●
S80 (-06)	2006	PHM	●	●	●	●
S80 (-06)	2006	PSM	●	●	●	●
S80 (-06)	2006	REM	●	●	●	●
S80 (-06)	2006	RTI	●	●	●	○
S80 (-06)	2006	SAS	●	●	●	●
S80 (-06)	2006	SRS	●	●	●	●
S80 (-06)	2006	SUM	●	●	●	●
S80 (-06)	2006	TCM	●	●	●	●
S80 (-06)	2006	TCM	●	●	●	●
S80 (-06)	2006	TCM	●	●	●	●
S80 (-06)	2006	TCM	●	●	●	●
S80 (-06)	2006	UEM	●	●	●	●
S60L	2015	AUD	●	●	●	○
S60L	2015	BCM	●	●	●	○
S60L	2015	CCM	●	●	●	●
S60L	2015	CEM	●	●	●	●
S60L	2015	CPM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60L	2015	CVM	●	●	●	●
S60L	2015	DDM	●	●	●	●
S60L	2015	DEM	●	●	●	○
S60L	2015	DIM	●	●	●	●
S60L	2015	ECM	●	●	●	●
S60L	2015	ECM	●	●	●	●
S60L	2015	FLR	●	●	●	○
S60L	2015	FSM	●	●	●	●
S60L	2015	IAM	●	●	●	●
S60L	2015	ICM	●	●	●	●
S60L	2015	KVM	●	●	●	●
S60L	2015	PAC	●	●	●	○
S60L	2015	PAM	●	●	●	●
S60L	2015	PBM	●	●	●	●
S60L	2015	PDM	●	●	●	●
S60L	2015	PHM	●	●	●	●
S60L	2015	PSCM	●	●	●	●
S60L	2015	PSM	●	●	●	●
S60L	2015	SAS	●	●	●	●
S60L	2015	SODL	●	●	●	●
S60L	2015	SODR	●	●	●	●
S60L	2015	SRS	●	●	●	●
S60L	2015	SUM	●	●	●	●
S60L	2015	TCM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60L	2015	TRM	●	●	●	●
S60L	2015	TVM	●	●	●	○
S60L	2014	AUD	●	●	●	●
S60L	2014	BCM	●	●	●	●
S60L	2014	CCM	●	●	●	●
S60L	2014	CEM	●	●	●	●
S60L	2014	CPM	●	●	●	●
S60L	2014	CVM	●	●	●	●
S60L	2014	DDM	●	●	●	●
S60L	2014	DIM	●	●	●	○
S60L	2014	ECM	●	●	●	●
S60L	2014	ECM	●	●	●	●
S60L	2014	FLR	●	●	●	○
S60L	2014	FSM	●	●	●	●
S60L	2014	IAM	●	●	●	●
S60L	2014	ICM	●	●	●	●
S60L	2014	KVM	●	●	●	●
S60L	2014	PAC	●	●	●	○
S60L	2014	PAM	●	●	●	●
S60L	2014	PBM	●	●	●	●
S60L	2014	PDM	●	●	●	●
S60L	2014	PHM	●	●	●	●
S60L	2014	PSCM	●	●	●	●
S60L	2014	PSM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60L	2014	RDAR	●	●	●	○
S60L	2014	RSE	●	●	●	○
S60L	2014	SAS	●	●	●	●
S60L	2014	SODL	●	●	●	●
S60L	2014	SODR	●	●	●	●
S60L	2014	SRS	●	●	●	●
S60L	2014	SUM	●	●	●	●
S60L	2014	TCM	●	●	●	○
S60L	2014	TRM	●	●	●	●
S60L	2014	TVM	●	●	●	○
S60 (11-)	2015A	AUD	●	●	●	○
S60 (11-)	2015A	BCM	●	●	●	●
S60 (11-)	2015A	CCM	●	●	●	●
S60 (11-)	2015A	CEM	●	●	●	●
S60 (11-)	2015A	CPM	●	●	●	●
S60 (11-)	2015A	CVM	●	●	●	●
S60 (11-)	2015A	DABM	●	●	●	○
S60 (11-)	2015A	DDM	●	●	●	●
S60 (11-)	2015A	DEM	●	●	●	○
S60 (11-)	2015A	DIM	●	●	●	●
S60 (11-)	2015A	ECM	●	●	●	●
S60 (11-)	2015A	ECM	●	●	●	●
S60 (11-)	2015A	ECM	●	●	●	●
S60 (11-)	2015A	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (11-)	2015A	ECM	●	●	●	●
S60 (11-)	2015A	ECM	●	●	●	●
S60 (11-)	2015A	FLR	●	●	●	○
S60 (11-)	2015A	FSM	●	●	●	●
S60 (11-)	2015A	IAM	●	●	●	●
S60 (11-)	2015A	ICM	●	●	●	●
S60 (11-)	2015A	KVM	●	●	●	●
S60 (11-)	2015A	PAC	●	●	●	○
S60 (11-)	2015A	PAM	●	●	●	●
S60 (11-)	2015A	PBM	●	●	●	●
S60 (11-)	2015A	PDM	●	●	●	●
S60 (11-)	2015A	PHM	●	●	●	●
S60 (11-)	2015A	PSCM	●	●	●	●
S60 (11-)	2015A	PSCM	●	●	●	●
S60 (11-)	2015A	PSCM	●	●	●	●
S60 (11-)	2015A	PSCM	●	●	●	●
S60 (11-)	2015A	PSCM	●	●	●	●
S60 (11-)	2015A	PSM	●	●	●	●
S60 (11-)	2015A	RDAR	●	●	●	○
S60 (11-)	2015A	SAS	●	●	●	●
S60 (11-)	2015A	SODL	●	●	●	●
S60 (11-)	2015A	SODR	●	●	●	●
S60 (11-)	2015A	SRS	●	●	●	●
S60 (11-)	2015A	SUM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (11-)	2015	ECM	●	●	●	●
S60 (11-)	2015	ECM	●	●	●	●
S60 (11-)	2015	ECM	●	●	●	●
S60 (11-)	2015	ECM	●	●	●	●
S60 (11-)	2015	ECM	●	●	●	●
S60 (11-)	2015	ECM	●	●	●	●
S60 (11-)	2015	ECM	●	●	●	●
S60 (11-)	2015	ECM	●	●	●	●
S60 (11-)	2015	ECM	●	●	●	●
S60 (11-)	2015	ECM	●	●	●	●
S60 (11-)	2015	ECM	●	●	●	●
S60 (11-)	2015	FLR	●	●	●	○
S60 (11-)	2015	FSM	●	●	●	●
S60 (11-)	2015	IAM	●	●	●	●
S60 (11-)	2015	ICM	●	●	●	●
S60 (11-)	2015	KVM	●	●	●	●
S60 (11-)	2015	PAC	●	●	●	○
S60 (11-)	2015	PAM	●	●	●	●
S60 (11-)	2015	PBM	●	●	●	●
S60 (11-)	2015	PDM	●	●	●	●
S60 (11-)	2015	PHM	●	●	●	●
S60 (11-)	2015	PSCM	●	●	●	●
S60 (11-)	2015	PSCM	●	●	●	●
S60 (11-)	2015	PSCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (11-)	2015	PSCM	●	●	●	●
S60 (11-)	2015	PSCM	●	●	●	●
S60 (11-)	2015	PSCM	●	●	●	●
S60 (11-)	2015	PSM	●	●	●	●
S60 (11-)	2015	RDAR	●	●	●	○
S60 (11-)	2015	SAS	●	●	●	●
S60 (11-)	2015	SODL	●	●	●	●
S60 (11-)	2015	SODR	●	●	●	●
S60 (11-)	2015	SRS	●	●	●	●
S60 (11-)	2015	SUM	●	●	●	●
S60 (11-)	2015	TCM	●	●	●	●
S60 (11-)	2015	TCM	●	●	●	●
S60 (11-)	2015	TCM	●	●	●	○
S60 (11-)	2015	TRM	●	●	●	●
S60 (11-)	2015	TVM	●	●	●	○
S60 (11-)	2014	AUD	●	●	●	○
S60 (11-)	2014	BCM	●	●	●	●
S60 (11-)	2014	CCM	●	●	●	●
S60 (11-)	2014	CEM	●	●	●	●
S60 (11-)	2014	CPM	●	●	●	●
S60 (11-)	2014	CVM	●	●	●	●
S60 (11-)	2014	DABM	●	●	●	●
S60 (11-)	2014	DDM	●	●	●	●
S60 (11-)	2014	DEM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (11-)	2014	DIM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	ECM	●	●	●	●
S60 (11-)	2014	FLR	●	●	●	○
S60 (11-)	2014	FSM	●	●	●	●
S60 (11-)	2014	IAM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (11-)	2014	ICM	●	●	●	●
S60 (11-)	2014	KVM	●	●	●	●
S60 (11-)	2014	PAC	●	●	●	○
S60 (11-)	2014	PAM	●	●	●	●
S60 (11-)	2014	PBM	●	●	●	●
S60 (11-)	2014	PDM	●	●	●	●
S60 (11-)	2014	PHM	●	●	●	●
S60 (11-)	2014	PSCM	●	●	●	●
S60 (11-)	2014	PSCM	●	●	●	●
S60 (11-)	2014	PSCM	●	●	●	●
S60 (11-)	2014	PSCM	●	●	●	●
S60 (11-)	2014	PSCM	●	●	●	●
S60 (11-)	2014	PSCM	●	●	●	●
S60 (11-)	2014	PSCM	●	●	●	●
S60 (11-)	2014	PSM	●	●	●	●
S60 (11-)	2014	RDAR	●	●	●	○
S60 (11-)	2014	SAS	●	●	●	●
S60 (11-)	2014	SODL	●	●	●	●
S60 (11-)	2014	SODR	●	●	●	●
S60 (11-)	2014	SRS	●	●	●	●
S60 (11-)	2014	SUM	●	●	●	●
S60 (11-)	2014	TCM	●	●	●	●
S60 (11-)	2014	TCM	●	●	●	●
S60 (11-)	2014	TCM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (11-)	2013	ECM	●	●	●	●
S60 (11-)	2013	ECM	●	●	●	●
S60 (11-)	2013	FLR	●	●	●	○
S60 (11-)	2013	FSM	●	●	●	●
S60 (11-)	2013	IAM	●	●	●	●
S60 (11-)	2013	ICM	●	●	●	●
S60 (11-)	2013	KVM	●	●	●	●
S60 (11-)	2013	PAC	●	●	●	○
S60 (11-)	2013	PAM	●	●	●	●
S60 (11-)	2013	PBM	●	●	●	●
S60 (11-)	2013	PDM	●	●	●	●
S60 (11-)	2013	PHM	●	●	●	●
S60 (11-)	2013	PSCM	●	●	●	●
S60 (11-)	2013	PSM	●	●	●	●
S60 (11-)	2013	RDAR	●	●	●	○
S60 (11-)	2013	SAS	●	●	●	●
S60 (11-)	2013	SRS	●	●	●	●
S60 (11-)	2013	SUM	●	●	●	●
S60 (11-)	2013	TCM	●	●	●	●
S60 (11-)	2013	TCM	●	●	●	●
S60 (11-)	2013	TCM	●	●	●	●
S60 (11-)	2013	TCM	●	●	●	●
S60 (11-)	2013	TCM	●	●	●	○
S60 (11-)	2013	TRM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (11-)	2013	TVM	●	●	●	●
S60 (11-)	2012A	AUD	●	●	●	○
S60 (11-)	2012A	AUU	●	●	●	○
S60 (11-)	2012A	BCM	●	●	●	●
S60 (11-)	2012A	CCM	●	●	●	●
S60 (11-)	2012A	CEM	●	●	●	●
S60 (11-)	2012A	CPM	●	●	●	●
S60 (11-)	2012A	CVM	●	●	●	●
S60 (11-)	2012A	DABM	●	●	●	○
S60 (11-)	2012A	DDM	●	●	●	●
S60 (11-)	2012A	DEM	●	●	●	●
S60 (11-)	2012A	DIM	●	●	●	●
S60 (11-)	2012A	ECM	●	●	●	●
S60 (11-)	2012A	ECM	●	●	●	●
S60 (11-)	2012A	FLR	●	●	●	○
S60 (11-)	2012A	FSM	●	●	●	●
S60 (11-)	2012A	HCM	●	●	●	●
S60 (11-)	2012A	HLDf	●	●	●	●
S60 (11-)	2012A	IAM	●	●	●	●
S60 (11-)	2012A	ICM	●	●	●	●
S60 (11-)	2012A	KVM	●	●	●	●
S60 (11-)	2012A	PAC	●	●	●	○
S60 (11-)	2012A	PAM	●	●	●	●
S60 (11-)	2012A	PBM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (11-)	2012A	PDM	●	●	●	●
S60 (11-)	2012A	PHM	●	●	●	●
S60 (11-)	2012A	PSCM	●	●	●	●
S60 (11-)	2012A	PSM	●	●	●	●
S60 (11-)	2012A	RDAR	●	●	●	○
S60 (11-)	2012A	SAS	●	●	●	●
S60 (11-)	2012A	SRS	●	●	●	●
S60 (11-)	2012A	SUM	●	●	●	●
S60 (11-)	2012A	TCM	●	●	●	●
S60 (11-)	2012A	TCM	●	●	●	●
S60 (11-)	2012A	TCM	●	●	●	●
S60 (11-)	2012A	TRM	●	●	●	●
S60 (11-)	2012A	TVM	●	●	●	●
S60 (11-)	2012	AUD	●	●	●	○
S60 (11-)	2012	BCM	●	●	●	●
S60 (11-)	2012	CCM	●	●	●	●
S60 (11-)	2012	CEM	●	●	●	●
S60 (11-)	2012	CPM	●	●	●	●
S60 (11-)	2012	CVM	●	●	●	○
S60 (11-)	2012	DABM	●	●	●	○
S60 (11-)	2012	DDM	●	●	●	●
S60 (11-)	2012	DEM	●	●	●	●
S60 (11-)	2012	DIM	●	●	●	●
S60 (11-)	2012	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (11-)	2012	ECM	●	●	●	●
S60 (11-)	2012	ECM	●	●	●	●
S60 (11-)	2012	ECM	●	●	●	●
S60 (11-)	2012	ECM	●	●	●	●
S60 (11-)	2012	ECM	●	●	●	●
S60 (11-)	2012	ECM	●	●	●	●
S60 (11-)	2012	ECM	●	●	●	●
S60 (11-)	2012	ECM	●	●	●	●
S60 (11-)	2012	ECM	●	●	●	●
S60 (11-)	2012	FLR	●	●	●	○
S60 (11-)	2012	FSM	●	●	●	●
S60 (11-)	2012	IAM	●	●	●	●
S60 (11-)	2012	ICM	●	●	●	●
S60 (11-)	2012	KVM	●	●	●	●
S60 (11-)	2012	PAC	●	●	●	○
S60 (11-)	2012	PAM	●	●	●	●
S60 (11-)	2012	PBM	●	●	●	●
S60 (11-)	2012	PDM	●	●	●	●
S60 (11-)	2012	PHM	●	●	●	●
S60 (11-)	2012	PSCM	●	●	●	●
S60 (11-)	2012	PSM	●	●	●	●
S60 (11-)	2012	RDAR	●	●	●	○
S60 (11-)	2012	SAS	●	●	●	●
S60 (11-)	2012	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (11-)	2011	ECM	●	●	●	●
S60 (11-)	2011	ECM	●	●	●	●
S60 (11-)	2011	ECM	●	●	●	●
S60 (11-)	2011	ECM	●	●	●	●
S60 (11-)	2011	FLR	●	●	●	○
S60 (11-)	2011	FSM	●	●	●	●
S60 (11-)	2011	HCM	●	●	●	●
S60 (11-)	2011	HLDf	●	●	●	●
S60 (11-)	2011	IAM	●	●	●	●
S60 (11-)	2011	ICM	●	●	●	●
S60 (11-)	2011	KVM	●	●	●	●
S60 (11-)	2011	PAC	●	●	●	○
S60 (11-)	2011	PAM	●	●	●	●
S60 (11-)	2011	PBM	●	●	●	●
S60 (11-)	2011	PDM	●	●	●	●
S60 (11-)	2011	PHM	●	●	●	●
S60 (11-)	2011	PSCM	●	●	●	●
S60 (11-)	2011	PSM	●	●	●	●
S60 (11-)	2011	RDAR	●	●	●	○
S60 (11-)	2011	SAS	●	●	●	●
S60 (11-)	2011	SRS	●	●	●	●
S60 (11-)	2011	SUM	●	●	●	●
S60 (11-)	2011	TCM	●	●	●	●
S60 (11-)	2011	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (11-)	2011	TCM	●	●	●	●
S60 (11-)	2011	TCM	●	●	●	●
S60 (11-)	2011	TRM	●	●	●	●
S60 (11-)	2011	TVM	●	●	●	●
S60 (-09)	2009	AEM	●	●	●	●
S60 (-09)	2009	AUM	●	●	●	●
S60 (-09)	2009	BCM	●	●	●	●
S60 (-09)	2009	CCM	●	●	●	●
S60 (-09)	2009	CEM	●	●	●	●
S60 (-09)	2009	CPM	●	●	●	●
S60 (-09)	2009	DDM	●	●	●	●
S60 (-09)	2009	DEM	●	●	●	●
S60 (-09)	2009	DEM	●	●	●	●
S60 (-09)	2009	DIM	●	●	●	●
S60 (-09)	2009	ECM	●	●	●	●
S60 (-09)	2009	ECM	●	●	●	●
S60 (-09)	2009	ECM	●	●	●	●
S60 (-09)	2009	ECM	●	●	●	●
S60 (-09)	2009	ECM	●	●	●	●
S60 (-09)	2009	ECM	●	●	●	●
S60 (-09)	2009	ECM	●	●	●	●
S60 (-09)	2009	ECM	●	●	●	●
S60 (-09)	2009	HCM	●	●	●	●
S60 (-09)	2009	PDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (-09)	2009	PHM	●	●	●	●
S60 (-09)	2009	PSM	●	●	●	●
S60 (-09)	2009	REM	●	●	●	●
S60 (-09)	2009	RTI	●	●	●	○
S60 (-09)	2009	SAS	●	●	●	●
S60 (-09)	2009	SRS	●	●	●	●
S60 (-09)	2009	SUM	●	●	●	●
S60 (-09)	2009	TCM	●	●	●	●
S60 (-09)	2009	TCM	●	●	●	●
S60 (-09)	2009	TCM	●	●	●	●
S60 (-09)	2009	UEM	●	●	●	●
S60 (-09)	2008	AEM	●	●	●	●
S60 (-09)	2008	AUM	●	●	●	●
S60 (-09)	2008	BCM	●	●	●	●
S60 (-09)	2008	CCM	●	●	●	●
S60 (-09)	2008	CEM	●	●	●	●
S60 (-09)	2008	CPM	●	●	●	●
S60 (-09)	2008	DDM	●	●	●	●
S60 (-09)	2008	DEM	●	●	●	●
S60 (-09)	2008	DEM	●	●	●	●
S60 (-09)	2008	DIM	●	●	●	●
S60 (-09)	2008	ECM	●	●	●	●
S60 (-09)	2008	ECM	●	●	●	●
S60 (-09)	2008	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (-09)	2008	ECM	●	●	●	●
S60 (-09)	2008	ECM	●	●	●	●
S60 (-09)	2008	ECM	●	●	●	●
S60 (-09)	2008	ECM	●	●	●	●
S60 (-09)	2008	ECM	●	●	●	●
S60 (-09)	2008	ECM	●	●	●	●
S60 (-09)	2008	ETM	●	●	●	●
S60 (-09)	2008	HCM	●	●	●	●
S60 (-09)	2008	PDM	●	●	●	●
S60 (-09)	2008	PHM	●	●	●	●
S60 (-09)	2008	PSM	●	●	●	●
S60 (-09)	2008	REM	●	●	●	●
S60 (-09)	2008	RTI	●	●	●	○
S60 (-09)	2008	SAS	●	●	●	●
S60 (-09)	2008	SRS	●	●	●	●
S60 (-09)	2008	SUM	●	●	●	●
S60 (-09)	2008	TCM	●	●	●	●
S60 (-09)	2008	TCM	●	●	●	●
S60 (-09)	2008	TCM	●	●	●	●
S60 (-09)	2008	UEM	●	●	●	●
S60 (-09)	2007	AEM	●	●	●	●
S60 (-09)	2007	AUM	●	●	●	●
S60 (-09)	2007	BCM	●	●	●	●
S60 (-09)	2007	CCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (-09)	2007	CEM	●	●	●	●
S60 (-09)	2007	CPM	●	●	●	●
S60 (-09)	2007	DDM	●	●	●	●
S60 (-09)	2007	DEM	●	●	●	●
S60 (-09)	2007	DEM	●	●	●	●
S60 (-09)	2007	DEM	●	●	●	●
S60 (-09)	2007	DEM	●	●	●	●
S60 (-09)	2007	DIM	●	●	●	●
S60 (-09)	2007	ECM	●	●	●	●
S60 (-09)	2007	ECM	●	●	●	●
S60 (-09)	2007	ECM	●	●	●	●
S60 (-09)	2007	ECM	●	●	●	●
S60 (-09)	2007	ECM	●	●	●	●
S60 (-09)	2007	ECM	●	●	●	●
S60 (-09)	2007	ECM	●	●	●	●
S60 (-09)	2007	ECM	●	●	●	●
S60 (-09)	2007	ETM	●	●	●	●
S60 (-09)	2007	HCM	●	●	●	●
S60 (-09)	2007	PDM	●	●	●	●
S60 (-09)	2007	PHM	●	●	●	●
S60 (-09)	2007	PSM	●	●	●	●
S60 (-09)	2007	REM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (-09)	2007	RTI	●	●	●	○
S60 (-09)	2007	SAS	●	●	●	●
S60 (-09)	2007	SRS	●	●	●	●
S60 (-09)	2007	SUM	●	●	●	●
S60 (-09)	2007	TCM	●	●	●	●
S60 (-09)	2007	TCM	●	●	●	●
S60 (-09)	2007	TCM	●	●	●	●
S60 (-09)	2007	TCM	●	●	●	●
S60 (-09)	2007	TCM	●	●	●	●
S60 (-09)	2007	UEM	●	●	●	●
S60 (-09)	2006	AEM	●	●	●	●
S60 (-09)	2006	AUM	●	●	●	●
S60 (-09)	2006	BCM	●	●	●	●
S60 (-09)	2006	CCM	●	●	●	●
S60 (-09)	2006	CEM	●	●	●	●
S60 (-09)	2006	CPM	●	●	●	●
S60 (-09)	2006	DDM	●	●	●	●
S60 (-09)	2006	DEM	●	●	●	●
S60 (-09)	2006	DEM	●	●	●	●
S60 (-09)	2006	DEM	●	●	●	●
S60 (-09)	2006	DEM	●	●	●	●
S60 (-09)	2006	DIM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ECM	●	●	●	●
S60 (-09)	2006	ETM	●	●	●	●
S60 (-09)	2006	PDM	●	●	●	●
S60 (-09)	2006	PHM	●	●	●	●
S60 (-09)	2006	PSM	●	●	●	●
S60 (-09)	2006	REM	●	●	●	●
S60 (-09)	2006	RTI	●	●	●	○
S60 (-09)	2006	SAS	●	●	●	●
S60 (-09)	2006	SRS	●	●	●	●
S60 (-09)	2006	SUM	●	●	●	●
S60 (-09)	2006	TCM	●	●	●	●
S60 (-09)	2006	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60 (-09)	2006	TCM	●	●	●	●
S60 (-09)	2006	TCM	●	●	●	●
S60 (-09)	2006	TCM	●	●	●	●
S60 (-09)	2006	UEM	●	●	●	●
S40 (04-)	2012	AEM	●	●	●	●
S40 (04-)	2012	AUD	●	●	●	○
S40 (04-)	2012	AUU	●	●	●	●
S40 (04-)	2012	BCM	●	●	●	●
S40 (04-)	2012	BCM	●	●	●	●
S40 (04-)	2012	BCM	●	●	●	●
S40 (04-)	2012	BCM	●	●	●	●
S40 (04-)	2012	BPM	●	●	●	●
S40 (04-)	2012	CCM	●	●	●	●
S40 (04-)	2012	CEM	●	●	●	●
S40 (04-)	2012	CEM	●	●	●	●
S40 (04-)	2012	CEM	●	●	●	●
S40 (04-)	2012	CEM	●	●	●	●
S40 (04-)	2012	CEM-HS	●	●	●	●
S40 (04-)	2012	CEM-HS	●	●	●	●
S40 (04-)	2012	CEM-HS	●	●	●	●
S40 (04-)	2012	CEM-HS	●	●	●	●
S40 (04-)	2012	CPM	●	●	●	●
S40 (04-)	2012	DDM	●	●	●	●
S40 (04-)	2012	DIM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2012	ECM	●	●	●	●
S40 (04-)	2012	ECM	●	●	●	●
S40 (04-)	2012	ECM	●	●	●	●
S40 (04-)	2012	ECM	●	●	●	●
S40 (04-)	2012	ECM	●	●	●	●
S40 (04-)	2012	ECM	●	●	●	●
S40 (04-)	2012	ECM	●	●	●	●
S40 (04-)	2012	EPS	●	●	●	●
S40 (04-)	2012	EPS	●	●	●	●
S40 (04-)	2012	EPS	●	●	●	●
S40 (04-)	2012	EPS	●	●	●	●
S40 (04-)	2012	EPS	●	●	●	●
S40 (04-)	2012	HCM	●	●	●	●
S40 (04-)	2012	HCM	●	●	●	●
S40 (04-)	2012	HCM	●	●	●	●
S40 (04-)	2012	HCM	●	●	●	●
S40 (04-)	2012	IAM	●	●	●	●
S40 (04-)	2012	ICM	●	●	●	●
S40 (04-)	2012	KVM	●	●	●	●
S40 (04-)	2012	MMM	●	●	●	●
S40 (04-)	2012	PAM	●	●	●	●
S40 (04-)	2012	PDM	●	●	●	●
S40 (04-)	2012	PHM	●	●	●	●
S40 (04-)	2012	PSM	●	●	●	●
S40 (04-)	2012	RDAR	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2012	SAS	●	●	●	●
S40 (04-)	2012	SAS	●	●	●	●
S40 (04-)	2012	SAS	●	●	●	●
S40 (04-)	2012	SRS	●	●	●	●
S40 (04-)	2012	SUB	●	●	●	○
S40 (04-)	2012	SWM	●	●	●	●
S40 (04-)	2012	TCM	●	●	●	●
S40 (04-)	2012	TCM	●	●	●	●
S40 (04-)	2012	TCM	●	●	●	●
S40 (04-)	2012	TCM	●	●	●	●
S40 (04-)	2012	TRM	●	●	●	●
S40 (04-)	2011	ADM	●	●	●	●
S40 (04-)	2011	AEM	●	●	●	●
S40 (04-)	2011	AUD	●	●	●	○
S40 (04-)	2011	AUU	●	●	●	●
S40 (04-)	2011	BCM	●	●	●	●
S40 (04-)	2011	BCM	●	●	●	●
S40 (04-)	2011	BCM	●	●	●	●
S40 (04-)	2011	BCM	●	●	●	●
S40 (04-)	2011	BPM	●	●	●	●
S40 (04-)	2011	CCM	●	●	●	●
S40 (04-)	2011	CEM	●	●	●	●
S40 (04-)	2011	CEM	●	●	●	●
S40 (04-)	2011	CEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2011	CEM	●	●	●	●
S40 (04-)	2011	CEM-HS	●	●	●	●
S40 (04-)	2011	CEM-HS	●	●	●	●
S40 (04-)	2011	CEM-HS	●	●	●	●
S40 (04-)	2011	CEM-HS	●	●	●	●
S40 (04-)	2011	CPM	●	●	●	●
S40 (04-)	2011	DDM	●	●	●	●
S40 (04-)	2011	DIM	●	●	●	●
S40 (04-)	2011	ECM	●	●	●	●
S40 (04-)	2011	ECM	●	●	●	●
S40 (04-)	2011	ECM	●	●	●	●
S40 (04-)	2011	ECM	●	●	●	●
S40 (04-)	2011	ECM	●	●	●	●
S40 (04-)	2011	ECM	●	●	●	●
S40 (04-)	2011	ECM	●	●	●	●
S40 (04-)	2011	ECM	●	●	●	●
S40 (04-)	2011	EPS	●	●	●	●
S40 (04-)	2011	EPS	●	●	●	●
S40 (04-)	2011	EPS	●	●	●	●
S40 (04-)	2011	EPS	●	●	●	●
S40 (04-)	2011	HCM	●	●	●	●
S40 (04-)	2011	HCM	●	●	●	●
S40 (04-)	2011	HCM	●	●	●	●
S40 (04-)	2011	HCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2011	IAM	●	●	●	●
S40 (04-)	2011	ICM	●	●	●	●
S40 (04-)	2011	KVM	●	●	●	●
S40 (04-)	2011	MMM	●	●	●	●
S40 (04-)	2011	PAM	●	●	●	●
S40 (04-)	2011	PDM	●	●	●	●
S40 (04-)	2011	PHM	●	●	●	●
S40 (04-)	2011	PSM	●	●	●	●
S40 (04-)	2011	RDAR	●	●	●	●
S40 (04-)	2011	SAS	●	●	●	●
S40 (04-)	2011	SAS	●	●	●	●
S40 (04-)	2011	SAS	●	●	●	●
S40 (04-)	2011	SRS	●	●	●	●
S40 (04-)	2011	SUB	●	●	●	○
S40 (04-)	2011	SWM	●	●	●	●
S40 (04-)	2011	TCM	●	●	●	●
S40 (04-)	2011	TCM	●	●	●	●
S40 (04-)	2011	TCM	●	●	●	●
S40 (04-)	2011	TCM	●	●	●	●
S40 (04-)	2011	TRM	●	●	●	●
S40 (04-)	2010	ADM	●	●	●	●
S40 (04-)	2010	ADM	●	●	●	●
S40 (04-)	2010	AEM	●	●	●	●
S40 (04-)	2010	AUD	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2010	ECM	●	●	●	●
S40 (04-)	2010	EPS	●	●	●	●
S40 (04-)	2010	HCM	●	●	●	●
S40 (04-)	2010	IAM	●	●	●	●
S40 (04-)	2010	ICM	●	●	●	●
S40 (04-)	2010	KVM	●	●	●	●
S40 (04-)	2010	MMM	●	●	●	●
S40 (04-)	2010	PAM	●	●	●	●
S40 (04-)	2010	PDM	●	●	●	●
S40 (04-)	2010	PHM	●	●	●	●
S40 (04-)	2010	PSM	●	●	●	●
S40 (04-)	2010	RDAR	●	●	●	●
S40 (04-)	2010	SRS	●	●	●	●
S40 (04-)	2010	SUB	●	●	●	○
S40 (04-)	2010	SWM	●	●	●	●
S40 (04-)	2010	TCM	●	●	●	●
S40 (04-)	2010	TCM	●	●	●	●
S40 (04-)	2010	TCM	●	●	●	●
S40 (04-)	2010	TRM	●	●	●	●
S40 (04-)	2009	ADM	●	●	●	●
S40 (04-)	2009	ADM	●	●	●	●
S40 (04-)	2009	AEM	●	●	●	●
S40 (04-)	2009	AUD	●	●	●	○
S40 (04-)	2009	AUU	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2009	BCM	●	●	●	●
S40 (04-)	2009	BPM	●	●	●	●
S40 (04-)	2009	CCM	●	●	●	●
S40 (04-)	2009	CEM	●	●	●	●
S40 (04-)	2009	CEM-HS	○	○	○	○
S40 (04-)	2009	CPM	●	●	●	●
S40 (04-)	2009	DDM	●	●	●	●
S40 (04-)	2009	DEM	●	●	●	●
S40 (04-)	2009	DEM	●	●	●	●
S40 (04-)	2009	DIM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	ECM	●	●	●	●
S40 (04-)	2009	EPS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2009	HCM	●	●	●	●
S40 (04-)	2009	IAM	●	●	●	●
S40 (04-)	2009	ICM	●	●	●	●
S40 (04-)	2009	KVM	●	●	●	●
S40 (04-)	2009	MMM	●	●	●	●
S40 (04-)	2009	PAM	●	●	●	●
S40 (04-)	2009	PDM	●	●	●	●
S40 (04-)	2009	PHM	●	●	●	●
S40 (04-)	2009	PSM	●	●	●	●
S40 (04-)	2009	RDAR	●	●	●	●
S40 (04-)	2009	SRS	●	●	●	●
S40 (04-)	2009	SUB	●	●	●	○
S40 (04-)	2009	SWM	●	●	●	●
S40 (04-)	2009	TCM	●	●	●	●
S40 (04-)	2009	TCM	●	●	●	●
S40 (04-)	2009	TCM	●	●	●	●
S40 (04-)	2009	TRM	●	●	●	●
S40 (04-)	2008	ADM	●	●	●	●
S40 (04-)	2008	ADM	●	●	●	●
S40 (04-)	2008	AEM	●	●	●	●
S40 (04-)	2008	AUD	●	●	●	○
S40 (04-)	2008	AUU	●	●	●	●
S40 (04-)	2008	BCM	●	●	●	●
S40 (04-)	2008	CCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2008	CEM	●	●	●	●
S40 (04-)	2008	CEM-HS	○	○	○	○
S40 (04-)	2008	CPM	●	●	●	●
S40 (04-)	2008	DDM	●	●	●	●
S40 (04-)	2008	DEM	●	●	●	●
S40 (04-)	2008	DEM	●	●	●	●
S40 (04-)	2008	DIM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	ECM	●	●	●	●
S40 (04-)	2008	EPS	●	●	●	●
S40 (04-)	2008	HCM	●	●	●	●
S40 (04-)	2008	IAM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2008	ICM	●	●	●	●
S40 (04-)	2008	KVM	●	●	●	●
S40 (04-)	2008	MMM	●	●	●	○
S40 (04-)	2008	PAM	●	●	●	●
S40 (04-)	2008	PDM	●	●	●	●
S40 (04-)	2008	PHM	●	●	●	●
S40 (04-)	2008	PSM	●	●	●	●
S40 (04-)	2008	RDAR	●	●	●	●
S40 (04-)	2008	SRS	●	●	●	●
S40 (04-)	2008	SUB	●	●	●	○
S40 (04-)	2008	SWM	●	●	●	●
S40 (04-)	2008	TCM	●	●	●	●
S40 (04-)	2008	TCM	●	●	●	●
S40 (04-)	2008	TCM	●	●	●	●
S40 (04-)	2008	TRM	●	●	●	●
S40 (04-)	2007	ADM	●	●	●	●
S40 (04-)	2007	ADM	●	●	●	●
S40 (04-)	2007	AEM	●	●	●	●
S40 (04-)	2007	AUD	●	●	●	○
S40 (04-)	2007	BCM	●	●	●	●
S40 (04-)	2007	CCM	●	●	●	●
S40 (04-)	2007	CEM	●	●	●	●
S40 (04-)	2007	CEM-HS	●	●	●	○
S40 (04-)	2007	CPM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2007	DDM	●	●	●	●
S40 (04-)	2007	DEM	●	●	●	●
S40 (04-)	2007	DEM	●	●	●	●
S40 (04-)	2007	DIM	●	●	●	●
S40 (04-)	2007	ECM	●	●	●	●
S40 (04-)	2007	ECM	●	●	●	●
S40 (04-)	2007	ECM	●	●	●	●
S40 (04-)	2007	ECM	●	●	●	●
S40 (04-)	2007	ECM	●	●	●	●
S40 (04-)	2007	ECM	●	●	●	●
S40 (04-)	2007	ECM	●	●	●	●
S40 (04-)	2007	ECM	●	●	●	●
S40 (04-)	2007	ECM	●	●	●	●
S40 (04-)	2007	ECM	●	●	●	●
S40 (04-)	2007	ECM	●	●	●	●
S40 (04-)	2007	ECM	●	●	●	●
S40 (04-)	2007	EPS	●	●	●	●
S40 (04-)	2007	GPS	●	●	●	●
S40 (04-)	2007	IAM	●	●	●	●
S40 (04-)	2007	ICM	●	●	●	●
S40 (04-)	2007	KVM	●	●	●	●
S40 (04-)	2007	MMM	●	●	●	○
S40 (04-)	2007	PAM	●	●	●	●
S40 (04-)	2007	PDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2007	PHM	●	●	●	●
S40 (04-)	2007	PSM	●	●	●	●
S40 (04-)	2007	RDAR	●	●	●	●
S40 (04-)	2007	SRS	●	●	●	●
S40 (04-)	2007	SUB	●	●	●	○
S40 (04-)	2007	SWM	●	●	●	●
S40 (04-)	2007	TCM	●	●	●	●
S40 (04-)	2007	TCM	●	●	●	●
S40 (04-)	2007	TMC	●	●	●	●
S40 (04-)	2007	TRM	●	●	●	●
S40 (04-)	2006	ADM	●	●	●	●
S40 (04-)	2006	ADM	●	●	●	●
S40 (04-)	2006	ADM	●	●	●	●
S40 (04-)	2006	AEM	●	●	●	●
S40 (04-)	2006	AUD	●	●	●	○
S40 (04-)	2006	BCM	●	●	●	●
S40 (04-)	2006	CCM	●	●	●	●
S40 (04-)	2006	CEM	●	●	●	●
S40 (04-)	2006	CEM-HS	○	○	○	○
S40 (04-)	2006	CPM	●	●	●	●
S40 (04-)	2006	DDM	●	●	●	●
S40 (04-)	2006	DEM	●	●	●	●
S40 (04-)	2006	DEM	●	●	●	●
S40 (04-)	2006	DIM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2006	ECM	●	●	●	●
S40 (04-)	2006	ECM	●	●	●	●
S40 (04-)	2006	ECM	●	●	●	●
S40 (04-)	2006	ECM	●	●	●	●
S40 (04-)	2006	ECM	●	●	●	●
S40 (04-)	2006	ECM	●	●	●	●
S40 (04-)	2006	ECM	●	●	●	●
S40 (04-)	2006	ECM	●	●	●	●
S40 (04-)	2006	ECM	●	●	●	●
S40 (04-)	2006	ECM	●	●	●	●
S40 (04-)	2006	ECM	●	●	●	●
S40 (04-)	2006	ECM	●	●	●	●
S40 (04-)	2006	ECM	●	●	●	●
S40 (04-)	2006	EPS	●	●	●	●
S40 (04-)	2006	GPS	●	●	●	●
S40 (04-)	2006	IAM	●	●	●	●
S40 (04-)	2006	ICM	●	●	●	●
S40 (04-)	2006	KVM	●	●	●	●
S40 (04-)	2006	MMM	●	●	●	○
S40 (04-)	2006	PAM	●	●	●	●
S40 (04-)	2006	PDM	●	●	●	●
S40 (04-)	2006	PHM	●	●	●	●
S40 (04-)	2006	PSM	●	●	●	●
S40 (04-)	2006	SRS	●	●	●	●
S40 (04-)	2006	SUB	●	●	●	○
S40 (04-)	2006	SWM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2006	TCM	●	●	●	●
S40 (04-)	2006	TCM	●	●	●	●
S40 (04-)	2006	TMC	●	●	●	●
S40 (04-)	2006	TRM	●	●	●	●
C70 (06-)	2013	AEM	●	●	●	●
C70 (06-)	2013	AUD	●	●	●	○
C70 (06-)	2013	AUU	●	●	●	●
C70 (06-)	2013	BCM	●	●	●	●
C70 (06-)	2013	BCM	●	●	●	●
C70 (06-)	2013	BCM	●	●	●	●
C70 (06-)	2013	BPM	●	●	●	●
C70 (06-)	2013	CCM	●	●	●	●
C70 (06-)	2013	CEM	●	●	●	●
C70 (06-)	2013	CEM	●	●	●	●
C70 (06-)	2013	CEM	●	●	●	●
C70 (06-)	2013	CEM-HS	●	●	●	●
C70 (06-)	2013	CEM-HS	●	●	●	●
C70 (06-)	2013	CEM-HS	●	●	●	●
C70 (06-)	2013	CPM	●	●	●	●
C70 (06-)	2013	CRM	●	●	●	●
C70 (06-)	2013	DDM	●	●	●	●
C70 (06-)	2013	DIM	●	●	●	●
C70 (06-)	2013	ECM	●	●	●	●
C70 (06-)	2013	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 (06-)	2013	ECM	●	●	●	●
C70 (06-)	2013	EPS	●	●	●	●
C70 (06-)	2013	EPS	●	●	●	●
C70 (06-)	2013	EPS	●	●	●	●
C70 (06-)	2013	HCM	●	●	●	●
C70 (06-)	2013	HCM	●	●	●	●
C70 (06-)	2013	HCM	●	●	●	●
C70 (06-)	2013	IAM	●	●	●	●
C70 (06-)	2013	ICM	●	●	●	●
C70 (06-)	2013	KVM	●	●	●	●
C70 (06-)	2013	MMM	●	●	●	●
C70 (06-)	2013	PAM	●	●	●	●
C70 (06-)	2013	PDM	●	●	●	●
C70 (06-)	2013	PHM	●	●	●	●
C70 (06-)	2013	PSL	●	●	●	●
C70 (06-)	2013	PSR	●	●	●	●
C70 (06-)	2013	RDAR	●	●	●	●
C70 (06-)	2013	SAS	●	●	●	●
C70 (06-)	2013	SAS	●	●	●	●
C70 (06-)	2013	SRS	●	●	●	●
C70 (06-)	2013	SUB	●	●	●	○
C70 (06-)	2013	SWM	●	●	●	●
C70 (06-)	2013	TCM	●	●	●	●
C70 (06-)	2013	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 (06-)	2013	TCM	●	●	●	●
C70 (06-)	2012	AEM	●	●	●	●
C70 (06-)	2012	AUD	●	●	●	○
C70 (06-)	2012	AUU	●	●	●	●
C70 (06-)	2012	BCM	●	●	●	●
C70 (06-)	2012	BCM	●	●	●	●
C70 (06-)	2012	BCM	●	●	●	●
C70 (06-)	2012	BPM	●	●	●	●
C70 (06-)	2012	CCM	●	●	●	●
C70 (06-)	2012	CEM	●	●	●	●
C70 (06-)	2012	CEM	●	●	●	●
C70 (06-)	2012	CEM	●	●	●	●
C70 (06-)	2012	CEM-HS	●	●	●	●
C70 (06-)	2012	CEM-HS	●	●	●	●
C70 (06-)	2012	CEM-HS	●	●	●	●
C70 (06-)	2012	CPM	●	●	●	●
C70 (06-)	2012	CRM	●	●	●	●
C70 (06-)	2012	DDM	●	●	●	●
C70 (06-)	2012	DIM	●	●	●	●
C70 (06-)	2012	ECM	●	●	●	●
C70 (06-)	2012	ECM	●	●	●	●
C70 (06-)	2012	ECM	●	●	●	●
C70 (06-)	2012	EPS	●	●	●	●
C70 (06-)	2012	EPS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 (06-)	2012	EPS	●	●	●	●
C70 (06-)	2012	HCM	●	●	●	●
C70 (06-)	2012	HCM	●	●	●	●
C70 (06-)	2012	HCM	●	●	●	●
C70 (06-)	2012	IAM	●	●	●	●
C70 (06-)	2012	ICM	●	●	●	●
C70 (06-)	2012	KVM	●	●	●	●
C70 (06-)	2012	MMM	●	●	●	●
C70 (06-)	2012	PAM	●	●	●	●
C70 (06-)	2012	PDM	●	●	●	●
C70 (06-)	2012	PHM	●	●	●	●
C70 (06-)	2012	PSL	●	●	●	●
C70 (06-)	2012	PSR	●	●	●	●
C70 (06-)	2012	RDAR	●	●	●	●
C70 (06-)	2012	SAS	●	●	●	●
C70 (06-)	2012	SAS	●	●	●	●
C70 (06-)	2012	SRS	●	●	●	●
C70 (06-)	2012	SUB	●	●	●	○
C70 (06-)	2012	SWM	●	●	●	●
C70 (06-)	2012	TCM	●	●	●	●
C70 (06-)	2012	TCM	●	●	●	●
C70 (06-)	2012	TCM	●	●	●	●
C70 (06-)	2012	TRM	●	●	●	●
C70 (06-)	2011A	AEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 (06-)	2011A	AUD	●	●	●	○
C70 (06-)	2011A	AUU	●	●	●	●
C70 (06-)	2011A	BCM	●	●	●	●
C70 (06-)	2011A	BPM	●	●	●	●
C70 (06-)	2011A	CCM	●	●	●	●
C70 (06-)	2011A	CEM	●	●	●	●
C70 (06-)	2011A	CEM-HS	●	●	●	●
C70 (06-)	2011A	CPM	●	●	●	●
C70 (06-)	2011A	CRM	●	●	●	●
C70 (06-)	2011A	DDM	●	●	●	●
C70 (06-)	2011A	DIM	●	●	●	●
C70 (06-)	2011A	ECM	●	●	●	●
C70 (06-)	2011A	ECM	●	●	●	●
C70 (06-)	2011A	EPS	●	●	●	●
C70 (06-)	2011A	HCM	●	●	●	●
C70 (06-)	2011A	IAM	●	●	●	●
C70 (06-)	2011A	ICM	●	●	●	●
C70 (06-)	2011A	KVM	●	●	●	●
C70 (06-)	2011A	MMM	●	●	●	●
C70 (06-)	2011A	PAM	●	●	●	●
C70 (06-)	2011A	PDM	●	●	●	●
C70 (06-)	2011A	PHM	●	●	●	●
C70 (06-)	2011A	PSL	●	●	●	●
C70 (06-)	2011A	PSR	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 (06-)	2011A	RDAR	●	●	●	●
C70 (06-)	2011A	SRS	●	●	●	●
C70 (06-)	2011A	SUB	●	●	●	○
C70 (06-)	2011A	SWM	●	●	●	●
C70 (06-)	2011A	TCM	●	●	●	●
C70 (06-)	2011A	TRM	●	●	●	●
C70 (06-)	2011	AEM	●	●	●	●
C70 (06-)	2011	AUD	●	●	●	○
C70 (06-)	2011	AUU	●	●	●	●
C70 (06-)	2011	BCM	●	●	●	●
C70 (06-)	2011	BCM	●	●	●	●
C70 (06-)	2011	BCM	●	●	●	●
C70 (06-)	2011	BPM	●	●	●	●
C70 (06-)	2011	CCM	●	●	●	●
C70 (06-)	2011	CEM	●	●	●	●
C70 (06-)	2011	CEM	●	●	●	●
C70 (06-)	2011	CEM	●	●	●	●
C70 (06-)	2011	CEM-HS	●	●	●	●
C70 (06-)	2011	CEM-HS	●	●	●	●
C70 (06-)	2011	CEM-HS	●	●	●	●
C70 (06-)	2011	CPM	●	●	●	●
C70 (06-)	2011	CRM	●	●	●	●
C70 (06-)	2011	DDM	●	●	●	●
C70 (06-)	2011	DIM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 (06-)	2011	ECM	●	●	●	●
C70 (06-)	2011	ECM	●	●	●	●
C70 (06-)	2011	ECM	●	●	●	●
C70 (06-)	2011	EPS	●	●	●	●
C70 (06-)	2011	EPS	●	●	●	●
C70 (06-)	2011	EPS	●	●	●	●
C70 (06-)	2011	HCM	●	●	●	●
C70 (06-)	2011	HCM	●	●	●	●
C70 (06-)	2011	HCM	●	●	●	●
C70 (06-)	2011	IAM	●	●	●	●
C70 (06-)	2011	ICM	●	●	●	●
C70 (06-)	2011	KVM	●	●	●	●
C70 (06-)	2011	MMM	●	●	●	●
C70 (06-)	2011	PAM	●	●	●	●
C70 (06-)	2011	PDM	●	●	●	●
C70 (06-)	2011	PHM	●	●	●	●
C70 (06-)	2011	PSL	●	●	●	●
C70 (06-)	2011	PSR	●	●	●	●
C70 (06-)	2011	RDAR	●	●	●	●
C70 (06-)	2011	SAS	●	●	●	●
C70 (06-)	2011	SAS	●	●	●	●
C70 (06-)	2011	SRS	●	●	●	●
C70 (06-)	2011	SUB	●	●	●	○
C70 (06-)	2011	SWM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 (06-)	2010	EPS	●	●	●	●
C70 (06-)	2010	HCM	●	●	●	●
C70 (06-)	2010	IAM	●	●	●	●
C70 (06-)	2010	ICM	●	●	●	●
C70 (06-)	2010	KVM	●	●	●	●
C70 (06-)	2010	MMM	●	●	●	●
C70 (06-)	2010	PAM	●	●	●	●
C70 (06-)	2010	PDM	●	●	●	●
C70 (06-)	2010	PHM	●	●	●	●
C70 (06-)	2010	PSL	●	●	●	●
C70 (06-)	2010	PSR	●	●	●	●
C70 (06-)	2010	RDAR	●	●	●	●
C70 (06-)	2010	SRS	●	●	●	●
C70 (06-)	2010	SUB	●	●	●	○
C70 (06-)	2010	SWM	●	●	●	●
C70 (06-)	2010	TCM	●	●	●	●
C70 (06-)	2010	TCM	●	●	●	●
C70 (06-)	2010	TRM	●	●	●	●
C70 (06-)	2009	ADM	●	●	●	●
C70 (06-)	2009	AEM	●	●	●	●
C70 (06-)	2009	AUD	●	●	●	○
C70 (06-)	2009	AUU	●	●	●	●
C70 (06-)	2009	BCM	●	●	●	●
C70 (06-)	2009	BPM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 (06-)	2009	CCM	●	●	●	●
C70 (06-)	2009	CEM	●	●	●	●
C70 (06-)	2009	CEM-HS	○	○	○	○
C70 (06-)	2009	CPM	●	●	●	●
C70 (06-)	2009	CRM	●	●	●	●
C70 (06-)	2009	DDM	●	●	●	●
C70 (06-)	2009	DIM	●	●	●	●
C70 (06-)	2009	ECM	●	●	●	●
C70 (06-)	2009	ECM	●	●	●	●
C70 (06-)	2009	ECM	●	●	●	●
C70 (06-)	2009	ECM	●	●	●	●
C70 (06-)	2009	ECM	●	●	●	●
C70 (06-)	2009	ECM	●	●	●	●
C70 (06-)	2009	ECM	●	●	●	●
C70 (06-)	2009	EPS	●	●	●	●
C70 (06-)	2009	IAM	●	●	●	●
C70 (06-)	2009	ICM	●	●	●	●
C70 (06-)	2009	KVM	●	●	●	●
C70 (06-)	2009	MMM	●	●	●	●
C70 (06-)	2009	PAM	●	●	●	●
C70 (06-)	2009	PDM	●	●	●	●
C70 (06-)	2009	PHM	●	●	●	●
C70 (06-)	2009	PSL	●	●	●	●
C70 (06-)	2009	PSR	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 (06-)	2008	ECM	●	●	●	●
C70 (06-)	2008	ECM	●	●	●	●
C70 (06-)	2008	EPS	●	●	●	●
C70 (06-)	2008	IAM	●	●	●	●
C70 (06-)	2008	ICM	●	●	●	●
C70 (06-)	2008	KVM	●	●	●	●
C70 (06-)	2008	MMM	●	●	●	○
C70 (06-)	2008	PAM	●	●	●	●
C70 (06-)	2008	PDM	●	●	●	●
C70 (06-)	2008	PHM	●	●	●	●
C70 (06-)	2008	PSL	●	●	●	●
C70 (06-)	2008	PSR	●	●	●	●
C70 (06-)	2008	RDAR	●	●	●	●
C70 (06-)	2008	SRS	●	●	●	●
C70 (06-)	2008	SUB	●	●	●	○
C70 (06-)	2008	SWM	●	●	●	●
C70 (06-)	2008	TCM	●	●	●	●
C70 (06-)	2008	TRM	●	●	●	●
C70 (06-)	2007	AEM	●	●	●	●
C70 (06-)	2007	AUD	●	●	●	○
C70 (06-)	2007	BCM	●	●	●	●
C70 (06-)	2007	CCM	●	●	●	●
C70 (06-)	2007	CEM	●	●	●	●
C70 (06-)	2007	CEM-HS	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 (06-)	2007	CPM	●	●	●	●
C70 (06-)	2007	CRM	●	●	●	●
C70 (06-)	2007	DDM	●	●	●	●
C70 (06-)	2007	DIM	●	●	●	●
C70 (06-)	2007	ECM	●	●	●	●
C70 (06-)	2007	ECM	●	●	●	●
C70 (06-)	2007	ECM	●	●	●	●
C70 (06-)	2007	ECM	●	●	●	●
C70 (06-)	2007	ECM	●	●	●	●
C70 (06-)	2007	ECM	●	●	●	●
C70 (06-)	2007	EPS	●	●	●	●
C70 (06-)	2007	GPS	●	●	●	●
C70 (06-)	2007	IAM	●	●	●	●
C70 (06-)	2007	ICM	●	●	●	●
C70 (06-)	2007	KVM	●	●	●	●
C70 (06-)	2007	MMM	●	●	●	○
C70 (06-)	2007	PAM	●	●	●	●
C70 (06-)	2007	PDM	●	●	●	●
C70 (06-)	2007	PHM	●	●	●	●
C70 (06-)	2007	PSL	●	●	●	●
C70 (06-)	2007	PSR	●	●	●	●
C70 (06-)	2007	RDAR	●	●	●	●
C70 (06-)	2007	SRS	●	●	●	●
C70 (06-)	2007	SUB	●	●	●	○
C70 (06-)	2007	SWM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 (06-)	2007	TCM	●	●	●	●
C70 (06-)	2007	TMC	●	●	●	●
C70 (06-)	2007	TRM	●	●	●	●
C70 (06-)	2006	AEM	●	●	●	●
C70 (06-)	2006	AUD	●	●	●	○
C70 (06-)	2006	BCM	●	●	●	●
C70 (06-)	2006	CCM	●	●	●	●
C70 (06-)	2006	CEM	●	●	●	●
C70 (06-)	2006	CEM-HS	○	○	○	○
C70 (06-)	2006	CPM	●	●	●	●
C70 (06-)	2006	CRM	●	●	●	●
C70 (06-)	2006	DDM	●	●	●	●
C70 (06-)	2006	DIM	●	●	●	●
C70 (06-)	2006	ECM	●	●	●	●
C70 (06-)	2006	ECM	●	●	●	●
C70 (06-)	2006	ECM	●	●	●	●
C70 (06-)	2006	EPS	●	●	●	●
C70 (06-)	2006	GPS	●	●	●	●
C70 (06-)	2006	IAM	●	●	●	●
C70 (06-)	2006	ICM	●	●	●	●
C70 (06-)	2006	KVM	●	●	●	●
C70 (06-)	2006	MMM	●	●	●	○
C70 (06-)	2006	PAM	●	●	●	●
C70 (06-)	2006	PDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 (06-)	2006	PHM	●	●	●	●
C70 (06-)	2006	PSL	●	●	●	●
C70 (06-)	2006	PSR	●	●	●	●
C70 (06-)	2006	SRS	●	●	●	●
C70 (06-)	2006	SUB	●	●	●	○
C70 (06-)	2006	SWM	●	●	●	●
C70 (06-)	2006	TCM	●	●	●	●
C70 (06-)	2006	TMC	●	●	●	●
C70 (06-)	2006	TRM	●	●	●	●
C30 Electric	2013	AEM	●	●	●	●
C30 Electric	2013	AUD	●	●	●	○
C30 Electric	2013	AUU	●	●	●	●
C30 Electric	2013	BCM	●	●	●	●
C30 Electric	2013	BPM	●	●	●	●
C30 Electric	2013	CCM	●	●	●	●
C30 Electric	2013	CEM	●	●	●	●
C30 Electric	2013	CEM-HS	●	●	●	●
C30 Electric	2013	CPM	●	●	●	●
C30 Electric	2013	DDM	●	●	●	●
C30 Electric	2013	DIM	●	●	●	●
C30 Electric	2013	EPS	●	●	●	●
C30 Electric	2013	HCM	●	●	●	●
C30 Electric	2013	IAM	●	●	●	●
C30 Electric	2013	ICM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30 Electric	2013	KVM	●	●	●	●
C30 Electric	2013	MMM	●	●	●	●
C30 Electric	2013	PAM	●	●	●	●
C30 Electric	2013	PDM	●	●	●	●
C30 Electric	2013	PHM	●	●	●	●
C30 Electric	2013	RDAR	●	●	●	●
C30 Electric	2013	SRS	●	●	●	●
C30 Electric	2013	SWM	●	●	●	●
C30 Electric	2012	AEM	●	●	●	●
C30 Electric	2012	AUD	●	●	●	○
C30 Electric	2012	AUU	●	●	●	●
C30 Electric	2012	BCM	●	●	●	●
C30 Electric	2012	BPM	●	●	●	●
C30 Electric	2012	CCM	●	●	●	●
C30 Electric	2012	CEM	●	●	●	●
C30 Electric	2012	CEM-HS	●	●	●	●
C30 Electric	2012	CPM	●	●	●	●
C30 Electric	2012	DDM	●	●	●	●
C30 Electric	2012	DIM	●	●	●	●
C30 Electric	2012	EPS	●	●	●	●
C30 Electric	2012	HCM	●	●	●	●
C30 Electric	2012	IAM	●	●	●	●
C30 Electric	2012	ICM	●	●	●	●
C30 Electric	2012	KVM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30 Electric	2012	MMM	●	●	●	●
C30 Electric	2012	PAM	●	●	●	●
C30 Electric	2012	PDM	●	●	●	●
C30 Electric	2012	PHM	●	●	●	●
C30 Electric	2012	RDAR	●	●	●	●
C30 Electric	2012	SRS	●	●	●	●
C30 Electric	2012	SWM	●	●	●	●
C30 Electric	2011	AEM	●	●	●	●
C30 Electric	2011	AUD	●	●	●	○
C30 Electric	2011	AUU	●	●	●	●
C30 Electric	2011	BCM	●	●	●	●
C30 Electric	2011	BPM	●	●	●	●
C30 Electric	2011	CCM	●	●	●	●
C30 Electric	2011	CEM	●	●	●	●
C30 Electric	2011	CEM-HS	●	●	●	●
C30 Electric	2011	CPM	●	●	●	●
C30 Electric	2011	DDM	●	●	●	●
C30 Electric	2011	DIM	●	●	●	●
C30 Electric	2011	EPS	●	●	●	●
C30 Electric	2011	HCM	●	●	●	●
C30 Electric	2011	IAM	●	●	●	●
C30 Electric	2011	ICM	●	●	●	●
C30 Electric	2011	KVM	●	●	●	●
C30 Electric	2011	MMM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30 Electric	2011	PAM	●	●	●	●
C30 Electric	2011	PDM	●	●	●	●
C30 Electric	2011	PHM	●	●	●	●
C30 Electric	2011	RDAR	●	●	●	●
C30 Electric	2011	SRS	●	●	●	●
C30 Electric	2011	SWM	●	●	●	●
C30	2013	AEM	●	●	●	●
C30	2013	AUD	●	●	●	○
C30	2013	AUU	●	●	●	●
C30	2013	BCM	●	●	●	●
C30	2013	BCM	●	●	●	●
C30	2013	BCM	●	●	●	●
C30	2013	BCM	●	●	●	●
C30	2013	BPM	●	●	●	●
C30	2013	CCM	●	●	●	●
C30	2013	CEM	●	●	●	●
C30	2013	CEM	●	●	●	●
C30	2013	CEM	●	●	●	●
C30	2013	CEM	●	●	●	●
C30	2013	CEM-HS	●	●	●	●
C30	2013	CEM-HS	●	●	●	●
C30	2013	CEM-HS	●	●	●	●
C30	2013	CEM-HS	●	●	●	●
C30	2013	CPM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2013	DDM	●	●	●	●
C30	2013	DIM	●	●	●	●
C30	2013	ECM	●	●	●	●
C30	2013	ECM	●	●	●	●
C30	2013	ECM	●	●	●	●
C30	2013	ECM	●	●	●	●
C30	2013	ECM	●	●	●	●
C30	2013	ECM	●	●	●	●
C30	2013	EPS	●	●	●	●
C30	2013	EPS	●	●	●	●
C30	2013	EPS	●	●	●	●
C30	2013	EPS	●	●	●	●
C30	2013	HCM	●	●	●	●
C30	2013	HCM	●	●	●	●
C30	2013	HCM	●	●	●	●
C30	2013	HCM	●	●	●	●
C30	2013	IAM	●	●	●	●
C30	2013	ICM	●	●	●	●
C30	2013	KVM	●	●	●	●
C30	2013	MMM	●	●	●	●
C30	2013	PAM	●	●	●	●
C30	2013	PDM	●	●	●	●
C30	2013	PHM	●	●	●	●
C30	2013	PSL	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2013	PSR	●	●	●	●
C30	2013	RDAR	●	●	●	●
C30	2013	SAS	●	●	●	●
C30	2013	SAS	●	●	●	●
C30	2013	SAS	●	●	●	●
C30	2013	SRS	●	●	●	●
C30	2013	SWM	●	●	●	●
C30	2013	TCM	●	●	●	●
C30	2013	TCM	●	●	●	●
C30	2013	TCM	●	●	●	●
C30	2013	TCM	●	●	●	●
C30	2012	AEM	●	●	●	●
C30	2012	AUD	●	●	●	○
C30	2012	AUU	●	●	●	●
C30	2012	BCM	●	●	●	●
C30	2012	BCM	●	●	●	●
C30	2012	BCM	●	●	●	●
C30	2012	BCM	●	●	●	●
C30	2012	BPM	●	●	●	●
C30	2012	CCM	●	●	●	●
C30	2012	CEM	●	●	●	●
C30	2012	CEM	●	●	●	●
C30	2012	CEM	●	●	●	●
C30	2012	CEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2012	CEM-HS	●	●	●	●
C30	2012	CEM-HS	●	●	●	●
C30	2012	CEM-HS	●	●	●	●
C30	2012	CEM-HS	●	●	●	●
C30	2012	CPM	●	●	●	●
C30	2012	DDM	●	●	●	●
C30	2012	DIM	●	●	●	●
C30	2012	ECM	●	●	●	●
C30	2012	ECM	●	●	●	●
C30	2012	ECM	●	●	●	●
C30	2012	ECM	●	●	●	●
C30	2012	ECM	●	●	●	●
C30	2012	ECM	●	●	●	●
C30	2012	ECM	●	●	●	●
C30	2012	EPS	●	●	●	●
C30	2012	EPS	●	●	●	●
C30	2012	EPS	●	●	●	●
C30	2012	EPS	●	●	●	●
C30	2012	HCM	●	●	●	●
C30	2012	HCM	●	●	●	●
C30	2012	HCM	●	●	●	●
C30	2012	HCM	●	●	●	●
C30	2012	IAM	●	●	●	●
C30	2012	ICM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2012	KVM	●	●	●	●
C30	2012	MMM	●	●	●	●
C30	2012	PAM	●	●	●	●
C30	2012	PDM	●	●	●	●
C30	2012	PHM	●	●	●	●
C30	2012	PSL	●	●	●	●
C30	2012	PSR	●	●	●	●
C30	2012	RDAR	●	●	●	●
C30	2012	SAS	●	●	●	●
C30	2012	SAS	●	●	●	●
C30	2012	SAS	●	●	●	●
C30	2012	SRS	●	●	●	●
C30	2012	SWM	●	●	●	●
C30	2012	TCM	●	●	●	●
C30	2012	TCM	●	●	●	●
C30	2012	TCM	●	●	●	●
C30	2012	TCM	●	●	●	●
C30	2012	TRM	●	●	●	●
C30	2011A	AEM	●	●	●	●
C30	2011A	AUD	●	●	●	○
C30	2011A	AUU	●	●	●	●
C30	2011A	BCM	●	●	●	●
C30	2011A	BPM	●	●	●	●
C30	2011A	CCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2011A	CEM	●	●	●	●
C30	2011A	CEM-HS	●	●	●	●
C30	2011A	CPM	●	●	●	●
C30	2011A	DDM	●	●	●	●
C30	2011A	DIM	●	●	●	●
C30	2011A	ECM	●	●	●	●
C30	2011A	ECM	●	●	●	●
C30	2011A	ECM	●	●	●	●
C30	2011A	ECM	●	●	●	●
C30	2011A	EPS	●	●	●	●
C30	2011A	HCM	●	●	●	●
C30	2011A	IAM	●	●	●	●
C30	2011A	ICM	●	●	●	●
C30	2011A	KVM	●	●	●	●
C30	2011A	MMM	●	●	●	●
C30	2011A	PAM	●	●	●	●
C30	2011A	PDM	●	●	●	●
C30	2011A	PHM	●	●	●	●
C30	2011A	PSL	●	●	●	●
C30	2011A	PSR	●	●	●	●
C30	2011A	RDAR	●	●	●	●
C30	2011A	SRS	●	●	●	●
C30	2011A	SWM	●	●	●	●
C30	2011A	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2011A	TCM	●	●	●	●
C30	2011A	TRM	●	●	●	●
C30	2011	ADM	●	●	●	●
C30	2011	AEM	●	●	●	●
C30	2011	AUD	●	●	●	○
C30	2011	AUU	●	●	●	●
C30	2011	BCM	●	●	●	●
C30	2011	BCM	●	●	●	●
C30	2011	BCM	●	●	●	●
C30	2011	BCM	●	●	●	●
C30	2011	BPM	●	●	●	●
C30	2011	CCM	●	●	●	●
C30	2011	CEM	●	●	●	●
C30	2011	CEM	●	●	●	●
C30	2011	CEM	●	●	●	●
C30	2011	CEM	●	●	●	●
C30	2011	CEM-HS	●	●	●	●
C30	2011	CEM-HS	●	●	●	●
C30	2011	CEM-HS	●	●	●	●
C30	2011	CEM-HS	●	●	●	●
C30	2011	CPM	●	●	●	●
C30	2011	DDM	●	●	●	●
C30	2011	DIM	●	●	●	●
C30	2011	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2011	ECM	●	●	●	●
C30	2011	ECM	●	●	●	●
C30	2011	ECM	●	●	●	●
C30	2011	ECM	●	●	●	●
C30	2011	ECM	●	●	●	●
C30	2011	ECM	●	●	●	●
C30	2011	ECM	●	●	●	●
C30	2011	EPS	●	●	●	●
C30	2011	EPS	●	●	●	●
C30	2011	EPS	●	●	●	●
C30	2011	EPS	●	●	●	●
C30	2011	HCM	●	●	●	●
C30	2011	HCM	●	●	●	●
C30	2011	HCM	●	●	●	●
C30	2011	HCM	●	●	●	●
C30	2011	IAM	●	●	●	●
C30	2011	ICM	●	●	●	●
C30	2011	KVM	●	●	●	●
C30	2011	MMM	●	●	●	●
C30	2011	PAM	●	●	●	●
C30	2011	PDM	●	●	●	●
C30	2011	PHM	●	●	●	●
C30	2011	PSL	●	●	●	●
C30	2011	PSR	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2011	RDAR	●	●	●	●
C30	2011	SAS	●	●	●	●
C30	2011	SAS	●	●	●	●
C30	2011	SAS	●	●	●	●
C30	2011	SRS	●	●	●	●
C30	2011	SWM	●	●	●	●
C30	2011	TCM	●	●	●	●
C30	2011	TCM	●	●	●	●
C30	2011	TCM	●	●	●	●
C30	2011	TCM	●	●	●	●
C30	2011	TRM	●	●	●	●
C30	2010	ADM	●	●	●	●
C30	2010	ADM	●	●	●	●
C30	2010	AEM	●	●	●	●
C30	2010	AUD	●	●	●	○
C30	2010	AUU	●	●	●	●
C30	2010	BCM	●	●	●	●
C30	2010	BPM	●	●	●	●
C30	2010	CCM	●	●	●	●
C30	2010	CEM	●	●	●	●
C30	2010	CEM-HS	●	●	●	●
C30	2010	CPM	●	●	●	●
C30	2010	DDM	●	●	●	●
C30	2010	DIM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2010	ECM	●	●	●	●
C30	2010	ECM	●	●	●	●
C30	2010	ECM	●	●	●	●
C30	2010	ECM	●	●	●	●
C30	2010	ECM	●	●	●	●
C30	2010	ECM	●	●	●	●
C30	2010	ECM	●	●	●	●
C30	2010	ECM	●	●	●	●
C30	2010	ECM	●	●	●	●
C30	2010	ECM	●	●	●	●
C30	2010	ECM	●	●	●	●
C30	2010	ECM	●	●	●	●
C30	2010	ECM	●	●	●	●
C30	2010	EPS	●	●	●	●
C30	2010	HCM	●	●	●	●
C30	2010	IAM	●	●	●	●
C30	2010	ICM	●	●	●	●
C30	2010	KVM	●	●	●	●
C30	2010	MMM	●	●	●	●
C30	2010	PAM	●	●	●	●
C30	2010	PDM	●	●	●	●
C30	2010	PHM	●	●	●	●
C30	2010	PSL	●	●	●	●
C30	2010	PSR	●	●	●	●
C30	2010	RDAR	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2009	ECM	●	●	●	●
C30	2009	ECM	●	●	●	●
C30	2009	ECM	●	●	●	●
C30	2009	ECM	●	●	●	●
C30	2009	ECM	●	●	●	●
C30	2009	EPS	●	●	●	●
C30	2009	IAM	●	●	●	●
C30	2009	ICM	●	●	●	●
C30	2009	KVM	●	●	●	●
C30	2009	MMM	●	●	●	●
C30	2009	PAM	●	●	●	●
C30	2009	PDM	●	●	●	●
C30	2009	PHM	●	●	●	●
C30	2009	PSL	●	●	●	●
C30	2009	PSR	●	●	●	●
C30	2009	RDAR	●	●	●	●
C30	2009	SRS	●	●	●	●
C30	2009	SWM	●	●	●	●
C30	2009	TCM	●	●	●	●
C30	2009	TCM	●	●	●	●
C30	2009	TRM	●	●	●	●
C30	2008	ADM	●	●	●	●
C30	2008	ADM	●	●	●	●
C30	2008	AEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2008	AUD	●	●	●	○
C30	2008	AUU	●	●	●	●
C30	2008	BCM	●	●	●	●
C30	2008	CCM	●	●	●	●
C30	2008	CEM	●	●	●	●
C30	2008	CEM-HS	○	○	○	○
C30	2008	CPM	●	●	●	●
C30	2008	DDM	●	●	●	●
C30	2008	DIM	●	●	●	●
C30	2008	ECM	●	●	●	●
C30	2008	ECM	●	●	●	●
C30	2008	ECM	●	●	●	●
C30	2008	ECM	●	●	●	●
C30	2008	ECM	●	●	●	●
C30	2008	ECM	●	●	●	●
C30	2008	ECM	●	●	●	●
C30	2008	ECM	●	●	●	●
C30	2008	ECM	●	●	●	●
C30	2008	ECM	●	●	●	●
C30	2008	ECM	●	●	●	●
C30	2008	EPS	●	●	●	●
C30	2008	IAM	●	●	●	●
C30	2008	ICM	●	●	●	●
C30	2008	KVM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2008	MMM	●	●	●	○
C30	2008	PAM	●	●	●	●
C30	2008	PDM	●	●	●	●
C30	2008	PHM	●	●	●	●
C30	2008	PSL	●	●	●	●
C30	2008	PSR	●	●	●	●
C30	2008	RDAR	●	●	●	●
C30	2008	SRS	●	●	●	●
C30	2008	SWM	●	●	●	●
C30	2008	TCM	●	●	●	●
C30	2008	TCM	●	●	●	●
C30	2008	TRM	●	●	●	●
C30	2007	ADM	●	●	●	●
C30	2007	ADM	●	●	●	●
C30	2007	AEM	●	●	●	●
C30	2007	AUD	●	●	●	○
C30	2007	BCM	●	●	●	●
C30	2007	CCM	●	●	●	●
C30	2007	CEM	●	●	●	●
C30	2007	CEM-HS	●	●	●	○
C30	2007	CPM	●	●	●	●
C30	2007	DDM	●	●	●	●
C30	2007	DIM	●	●	●	●
C30	2007	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2007	ECM	●	●	●	●
C30	2007	ECM	●	●	●	●
C30	2007	ECM	●	●	●	●
C30	2007	ECM	●	●	●	●
C30	2007	ECM	●	●	●	●
C30	2007	ECM	●	●	●	●
C30	2007	ECM	●	●	●	●
C30	2007	ECM	●	●	●	●
C30	2007	ECM	●	●	●	●
C30	2007	EPS	●	●	●	●
C30	2007	GPS	●	●	●	●
C30	2007	IAM	●	●	●	●
C30	2007	ICM	●	●	●	●
C30	2007	KVM	●	●	●	●
C30	2007	MMM	●	●	●	○
C30	2007	PAM	●	●	●	●
C30	2007	PDM	●	●	●	●
C30	2007	PHM	●	●	●	●
C30	2007	PSL	●	●	●	●
C30	2007	PSR	●	●	●	●
C30	2007	RDAR	●	●	●	●
C30	2007	SRS	●	●	●	●
C30	2007	SWM	●	●	●	●
C30	2007	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C30	2007	TMC	●	●	●	●
C30	2007	TRM	●	●	●	●
XC90	2005	ABS/BCM	●	●	●	●
XC90	2005	AEM	●	●	●	●
XC90	2005	ATM	●	●	●	●
XC90	2005	AUD	●	●	●	○
XC90	2005	CCM	●	●	●	●
XC90	2005	CEM	●	●	●	●
XC90	2005	DDM	●	●	●	●
XC90	2005	DEM	●	●	●	●
XC90	2005	Diesel	●	●	●	●
XC90	2005	DIM	●	●	●	●
XC90	2005	ICM	●	●	●	●
XC90	2005	MMM	●	●	●	○
XC90	2005	MP1	●	●	●	●
XC90	2005	MP2	●	●	●	●
XC90	2005	PDM	●	●	●	●
XC90	2005	Petrol	●	●	●	●
XC90	2005	Petrol	●	●	●	●
XC90	2005	Petrol	●	●	●	●
XC90	2005	PHM	●	●	●	●
XC90	2005	PSM	●	●	●	●
XC90	2005	REM	●	●	●	●
XC90	2005	SAS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2005	SRS	●	●	●	●
XC90	2005	SUB	●	●	●	○
XC90	2005	TCM	●	●	●	●
XC90	2005	TCM	●	●	●	●
XC90	2005	TCM	●	●	●	●
XC90	2005	UEM	●	●	●	●
XC90	2004	ABS/BCM	●	●	●	●
XC90	2004	AEM	●	●	●	●
XC90	2004	ATM	●	●	●	●
XC90	2004	AUD	●	●	●	○
XC90	2004	CCM	●	●	●	●
XC90	2004	CEM	●	●	●	●
XC90	2004	DDM	●	●	●	●
XC90	2004	DEM	●	●	●	●
XC90	2004	Diesel	●	●	●	●
XC90	2004	DIM	●	●	●	●
XC90	2004	ICM	●	●	●	●
XC90	2004	MMM	●	●	●	○
XC90	2004	MP1	●	●	●	●
XC90	2004	MP2	●	●	●	●
XC90	2004	PDM	●	●	●	●
XC90	2004	Petrol	●	●	●	●
XC90	2004	Petrol	●	●	●	●
XC90	2004	PHM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2004	PSM	●	●	●	●
XC90	2004	REM	●	●	●	●
XC90	2004	SAS	●	●	●	●
XC90	2004	SRS	●	●	●	●
XC90	2004	SUB	●	●	●	○
XC90	2004	SWM	●	●	●	●
XC90	2004	TCM	●	●	●	●
XC90	2004	TCM	●	●	●	●
XC90	2004	UEM	●	●	●	●
XC90	2003	ABS/BCM	●	●	●	●
XC90	2003	AEM	●	●	●	●
XC90	2003	ATM	●	●	●	●
XC90	2003	AUD	●	●	●	○
XC90	2003	CCM	●	●	●	●
XC90	2003	CEM	●	●	●	●
XC90	2003	DDM	●	●	●	●
XC90	2003	DEM	●	●	●	●
XC90	2003	Diesel	●	●	●	●
XC90	2003	DIM	●	●	●	●
XC90	2003	ICM	●	●	●	●
XC90	2003	MMM	●	●	●	○
XC90	2003	MP1	●	●	●	●
XC90	2003	MP2	●	●	●	●
XC90	2003	PDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
XC90	2003	Petrol	●	●	●	●
XC90	2003	Petrol	●	●	●	●
XC90	2003	PHM	●	●	●	●
XC90	2003	PSM	●	●	●	●
XC90	2003	REM	●	●	●	●
XC90	2003	SAS	●	●	●	●
XC90	2003	SRS	●	●	●	●
XC90	2003	SUB	●	●	●	○
XC90	2003	SWM	●	●	●	●
XC90	2003	TCM	●	●	●	●
XC90	2003	TCM	●	●	●	●
XC90	2003	UEM	●	●	●	●
V70 XC (01-) / XC70	2005	ABS/BCM	●	●	●	●
V70 XC (01-) / XC70	2005	AEM	●	●	●	●
V70 XC (01-) / XC70	2005	AUM	●	●	●	●
V70 XC (01-) / XC70	2005	CCM	●	●	●	●
V70 XC (01-) / XC70	2005	CEM	●	●	●	●
V70 XC (01-) / XC70	2005	DDM	●	●	●	●
V70 XC (01-) / XC70	2005	DEM	●	●	●	●
V70 XC (01-) / XC70	2005	Diesel	●	●	●	●
V70 XC (01-) / XC70	2005	DIM	●	●	●	●
V70 XC (01-) / XC70	2005	PDM	●	●	●	●
V70 XC (01-) / XC70	2005	Petrol	●	●	●	●
V70 XC (01-) / XC70	2005	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 XC (01-) / XC70	2005	PHM	●	●	●	●
V70 XC (01-) / XC70	2005	PSM	●	●	●	●
V70 XC (01-) / XC70	2005	REM	●	●	●	●
V70 XC (01-) / XC70	2005	RTI	●	●	●	○
V70 XC (01-) / XC70	2005	SAS	●	●	●	●
V70 XC (01-) / XC70	2005	SRS	●	●	●	●
V70 XC (01-) / XC70	2005	SUM	●	●	●	●
V70 XC (01-) / XC70	2005	TCM	●	●	●	●
V70 XC (01-) / XC70	2005	UEM	●	●	●	●
V70 XC (01-) / XC70	2004	ABS/BCM	●	●	●	●
V70 XC (01-) / XC70	2004	AEM	●	●	●	●
V70 XC (01-) / XC70	2004	AUM	●	●	●	●
V70 XC (01-) / XC70	2004	CCM	●	●	●	●
V70 XC (01-) / XC70	2004	CEM	●	●	●	●
V70 XC (01-) / XC70	2004	DDM	●	●	●	●
V70 XC (01-) / XC70	2004	DEM	●	●	●	●
V70 XC (01-) / XC70	2004	Diesel	●	●	●	●
V70 XC (01-) / XC70	2004	DIM	●	●	●	●
V70 XC (01-) / XC70	2004	PDM	●	●	●	●
V70 XC (01-) / XC70	2004	Petrol	●	●	●	●
V70 XC (01-) / XC70	2004	Petrol	●	●	●	●
V70 XC (01-) / XC70	2004	PHM	●	●	●	●
V70 XC (01-) / XC70	2004	PSM	●	●	●	●
V70 XC (01-) / XC70	2004	REM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 XC (01-) / XC70	2004	RTI	●	●	●	○
V70 XC (01-) / XC70	2004	SAS	●	●	●	●
V70 XC (01-) / XC70	2004	SRS	●	●	●	●
V70 XC (01-) / XC70	2004	SWM	●	●	●	●
V70 XC (01-) / XC70	2004	TCM	●	●	●	●
V70 XC (01-) / XC70	2004	UEM	●	●	●	●
V70 XC (01-) / XC70	2003	ABS/BCM	●	●	●	●
V70 XC (01-) / XC70	2003	AEM	●	●	●	●
V70 XC (01-) / XC70	2003	AUM	●	●	●	●
V70 XC (01-) / XC70	2003	CCM	●	●	●	●
V70 XC (01-) / XC70	2003	CEM	●	●	●	●
V70 XC (01-) / XC70	2003	DDM	●	●	●	●
V70 XC (01-) / XC70	2003	DEM	●	●	●	●
V70 XC (01-) / XC70	2003	Diesel	●	●	●	●
V70 XC (01-) / XC70	2003	DIM	●	●	●	●
V70 XC (01-) / XC70	2003	PDM	●	●	●	●
V70 XC (01-) / XC70	2003	Petrol	●	●	●	●
V70 XC (01-) / XC70	2003	Petrol	●	●	●	●
V70 XC (01-) / XC70	2003	PHM	●	●	●	●
V70 XC (01-) / XC70	2003	PSM	●	●	●	●
V70 XC (01-) / XC70	2003	REM	●	●	●	●
V70 XC (01-) / XC70	2003	RTI	●	●	●	○
V70 XC (01-) / XC70	2003	SAS	●	●	●	●
V70 XC (01-) / XC70	2003	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 XC (01-) / XC70	2003	SWM	●	●	●	●
V70 XC (01-) / XC70	2003	TCM	●	●	●	●
V70 XC (01-) / XC70	2003	UEM	●	●	●	●
V70 XC (01-) / XC70	2002	ABS/BCM	●	●	●	●
V70 XC (01-) / XC70	2002	AEM	●	●	●	●
V70 XC (01-) / XC70	2002	AUM	●	●	●	●
V70 XC (01-) / XC70	2002	CCM	●	●	●	●
V70 XC (01-) / XC70	2002	CEM	●	●	●	●
V70 XC (01-) / XC70	2002	DDM	●	●	●	●
V70 XC (01-) / XC70	2001	ABS/BCM	●	●	●	●
V70 XC (01-) / XC70	2001	AEM	●	●	●	●
V70 XC (01-) / XC70	2001	AUM	●	●	●	○
V70 XC (01-) / XC70	2001	CCM	●	●	●	●
V70 XC (01-) / XC70	2001	CEM	●	●	●	●
V70 XC (01-) / XC70	2001	DDM	●	●	●	●
V70 XC (-00)	2000	ABS/BCM	●	●	●	●
V70 XC (-00)	2000	CCM	●	●	●	●
V70 XC (-00)	2000	Combined instrument	●	●	●	●
V70 XC (-00)	2000	CPM	●	●	●	●
V70 XC (-00)	2000	Lock and alarm	●	●	●	●
V70 XC (-00)	2000	Petrol	●	●	●	●
V70 XC (-00)	2000	Power seat module, left	●	●	●	●
V70 XC (-00)	2000	RTI	●	●	●	●
V70 XC (-00)	2000	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (-00)	1999	Petrol	●	●	●	●
V70 (-00)	1999	Petrol	●	●	●	●
V70 (-00)	1999	Power seat module, left	●	●	●	●
V70 (-00)	1999	Power seat module, right	●	●	●	●
V70 (-00)	1999	RTI	●	●	●	●
V70 (-00)	1999	SRS	●	●	●	●
V70 (-00)	1999	TCM	●	●	●	●
V70 (-00)	1999	TCM	●	●	●	●
V70 (00-)	2005	ABS/BCM	●	●	●	●
V70 (00-)	2005	AEM	●	●	●	●
V70 (00-)	2005	AUM	●	●	●	●
V70 (00-)	2005	CCM	●	●	●	●
V70 (00-)	2005	CEM	●	●	●	●
V70 (00-)	2005	DDM	●	●	●	●
V70 (00-)	2005	DEM	●	●	●	●
V70 (00-)	2005	Diesel	●	●	●	●
V70 (00-)	2005	Diesel	●	●	●	●
V70 (00-)	2005	Diesel	●	●	●	●
V70 (00-)	2005	DIM	●	●	●	●
V70 (00-)	2005	PDM	●	●	●	●
V70 (00-)	2005	Petrol	●	●	●	●
V70 (00-)	2005	Petrol	●	●	●	●
V70 (00-)	2005	Petrol	●	●	●	●
V70 (00-)	2005	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (00-)	2005	Petrol	●	●	●	●
V70 (00-)	2005	Petrol	●	●	●	●
V70 (00-)	2005	Petrol	●	●	●	●
V70 (00-)	2005	Petrol	●	●	●	●
V70 (00-)	2005	Petrol	●	●	●	●
V70 (00-)	2005	PHM	●	●	●	●
V70 (00-)	2005	PSM	●	●	●	●
V70 (00-)	2005	REM	●	●	●	●
V70 (00-)	2005	RTI	●	●	●	○
V70 (00-)	2005	SAS	●	●	●	●
V70 (00-)	2005	SRS	●	●	●	●
V70 (00-)	2005	SUM	●	●	●	●
V70 (00-)	2005	TCM	●	●	●	●
V70 (00-)	2005	TCM	●	●	●	●
V70 (00-)	2005	UEM	●	●	●	●
V70 (00-)	2004	ABS/BCM	●	●	●	●
V70 (00-)	2004	AEM	●	●	●	●
V70 (00-)	2004	AUM	●	●	●	●
V70 (00-)	2004	CCM	●	●	●	●
V70 (00-)	2004	CEM	●	●	●	●
V70 (00-)	2004	DDM	●	●	●	●
V70 (00-)	2004	DEM	●	●	●	●
V70 (00-)	2004	Diesel	●	●	●	●
V70 (00-)	2004	Diesel	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (00-)	2004	DIM	●	●	●	●
V70 (00-)	2003	ABS/BCM	●	●	●	●
V70 (00-)	2003	AEM	●	●	●	●
V70 (00-)	2003	AUM	●	●	●	●
V70 (00-)	2003	CCM	●	●	●	●
V70 (00-)	2003	CEM	●	●	●	●
V70 (00-)	2003	DDM	●	●	●	●
V70 (00-)	2003	DEM	●	●	●	●
V70 (00-)	2003	Diesel	●	●	●	●
V70 (00-)	2003	Diesel	●	●	●	●
V70 (00-)	2003	DIM	●	●	●	●
V70 (00-)	2003	PDM	●	●	●	●
V70 (00-)	2003	Petrol	●	●	●	●
V70 (00-)	2003	Petrol	●	●	●	●
V70 (00-)	2003	Petrol	●	●	●	●
V70 (00-)	2003	Petrol	●	●	●	●
V70 (00-)	2003	Petrol	●	●	●	●
V70 (00-)	2003	Petrol	●	●	●	●
V70 (00-)	2003	Petrol	●	●	●	●
V70 (00-)	2003	Petrol	●	●	●	●
V70 (00-)	2003	PHM	●	●	●	●
V70 (00-)	2003	PSM	●	●	●	●
V70 (00-)	2003	REM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70 (00-)	2003	RTI	●	●	●	○
V70 (00-)	2003	SAS	●	●	●	●
V70 (00-)	2003	SRS	●	●	●	●
V70 (00-)	2003	SWM	●	●	●	●
V70 (00-)	2003	TCM	●	●	●	●
V70 (00-)	2003	TCM	●	●	●	●
V70 (00-)	2003	UEM	●	●	●	●
V70 (00-)	2002	ABS/BCM	●	●	●	●
V70 (00-)	2002	AEM	●	●	●	●
V70 (00-)	2002	AUM	●	●	●	●
V70 (00-)	2002	CCM	●	●	●	●
V70 (00-)	2002	CEM	●	●	●	●
V70 (00-)	2002	DDM	●	●	●	●
V70 (00-)	2001	ABS/BCM	●	●	●	●
V70 (00-)	2001	AEM	●	●	●	●
V70 (00-)	2001	AUM	●	●	●	●
V70 (00-)	2001	CCM	●	●	●	●
V70 (00-)	2001	CEM	●	●	●	●
V70 (00-)	2001	DDM	●	●	●	●
V70 (00-)	2000	ABS/BCM	●	●	●	●
V70 (00-)	2000	AUM	●	●	●	●
V70 (00-)	2000	CCM	●	●	●	●
V70 (00-)	2000	CEM	●	●	●	●
V70 (00-)	2000	DDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2005	ABS/BCM	●	●	●	●
V50	2005	AEM	●	●	●	●
V50	2005	AFM	●	●	●	●
V50	2005	AUD	●	●	●	○
V50	2005	CCM	●	●	●	●
V50	2005	CEM	●	●	●	●
V50	2005	DDM	●	●	●	●
V50	2005	DEM	●	●	●	●
V50	2005	Diesel	●	●	●	●
V50	2005	Diesel	●	●	●	●
V50	2005	Diesel	●	●	●	●
V50	2005	DIM	●	●	●	●
V50	2005	EPS	●	●	●	●
V50	2005	GPS	●	●	●	●
V50	2005	IAM	●	●	●	●
V50	2005	ICM	●	●	●	●
V50	2005	KVM	●	●	●	●
V50	2005	MMM	●	●	●	●
V50	2005	MPM	●	●	●	●
V50	2005	PAM	●	●	●	●
V50	2005	PDM	●	●	●	●
V50	2005	Petrol	●	●	●	●
V50	2005	Petrol	●	●	●	●
V50	2005	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2005	Petrol	●	●	●	●
V50	2005	Petrol	●	●	●	●
V50	2005	PHM	●	●	●	●
V50	2005	PSM	●	●	●	●
V50	2005	SRS	●	●	●	●
V50	2005	SUB	●	●	●	○
V50	2005	SWM	●	●	●	●
V50	2005	TCM	●	●	●	●
V50	2005	TCM	●	●	●	●
V50	2005	TMC	●	●	●	●
V50	2005	TRM	●	●	●	●
V50	2004	ABS/BCM	●	●	●	●
V50	2004	AEM	●	●	●	●
V50	2004	AFM	●	●	●	●
V50	2004	AUD	●	●	●	○
V50	2004	CCM	●	●	●	●
V50	2004	CEM	●	●	●	●
V50	2004	DDM	●	●	●	●
V50	2004	Diesel	●	●	●	●
V50	2004	Diesel	●	●	●	●
V50	2004	DIM	●	●	●	●
V50	2004	EPS	●	●	●	●
V50	2004	GPS	●	●	●	●
V50	2004	ICM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V50	2004	MMM	●	●	●	●
V50	2004	MPM	●	●	●	●
V50	2004	PDM	●	●	●	●
V50	2004	Petrol	●	●	●	●
V50	2004	Petrol	●	●	●	●
V50	2004	Petrol	●	●	●	●
V50	2004	PHM	●	●	●	●
V50	2004	PSM	●	●	●	●
V50	2004	SRS	●	●	●	●
V50	2004	SUB	●	●	●	○
V50	2004	SWM	●	●	●	●
V50	2004	TCM	●	●	●	●
V50	2004	TMC	●	●	●	●
V50	2004	TRM	●	●	●	●
V40 (-04)	2004	ECM	●	●	●	●
V40 (-04)	2003	ECM	●	●	●	●
V40	2004	ABS/BCM	●	●	●	●
V40	2004	Anti-spin system	●	●	●	●
V40	2004	CCM	●	●	●	●
V40	2004	CPM	●	●	●	●
V40	2004	Diesel	●	●	●	●
V40	2004	Diesel	●	●	●	●
V40	2004	DIM	●	●	●	●
V40	2004	Gas discharge light module	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40	2004	Lock and alarm	●	●	●	●
V40	2004	Petrol	●	●	●	●
V40	2004	Petrol	●	●	●	●
V40	2004	Petrol	●	●	●	●
V40	2004	Petrol	●	●	●	●
V40	2004	Petrol	●	●	●	●
V40	2004	Petrol	●	●	●	●
V40	2004	Petrol	●	●	●	●
V40	2004	Petrol	●	●	●	●
V40	2004	SRS	●	●	●	●
V40	2004	TCM	●	●	●	●
V40	2003	ABS/BCM	●	●	●	●
V40	2003	Anti-spin system	●	●	●	●
V40	2003	CCM	●	●	●	●
V40	2003	CPM	●	●	●	●
V40	2003	Diesel	●	●	●	●
V40	2003	Diesel	●	●	●	●
V40	2003	DIM	●	●	●	●
V40	2003	Gas discharge light module	●	●	●	●
V40	2003	Lock and alarm	●	●	●	●
V40	2003	Petrol	●	●	●	●
V40	2003	Petrol	●	●	●	●
V40	2003	Petrol	●	●	●	●
V40	2003	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40	2002	Petrol	●	●	●	●
V40	2002	SRS	●	●	●	●
V40	2002	TCM	●	●	●	●
V40	2001	ABS/BCM	●	●	●	●
V40	2001	Anti-spin system	●	●	●	●
V40	2001	CCM	●	●	●	●
V40	2001	CPM	●	●	●	●
V40	2001	Diesel	●	●	●	●
V40	2001	Diesel	●	●	●	●
V40	2001	DIM	●	●	●	●
V40	2001	Gas discharge light module	●	●	●	●
V40	2001	Lock and alarm	●	●	●	●
V40	2001	Petrol	●	●	●	●
V40	2001	Petrol	●	●	●	●
V40	2001	Petrol	●	●	●	●
V40	2001	Petrol	●	●	●	●
V40	2001	Petrol	●	●	●	●
V40	2001	Petrol	●	●	●	●
V40	2001	Petrol	●	●	●	●
V40	2001	Petrol	●	●	●	●
V40	2001	Petrol	●	●	●	●
V40	2001	SRS	●	●	●	●
V40	2001	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40	2000	ABS/BCM	●	●	●	●
V40	2000	Anti-spin system	●	●	●	●
V40	2000	CCM	●	●	●	●
V40	2000	CPM	●	●	●	●
V40	2000	Diesel	●	●	●	●
V40	2000	DIM	●	●	●	●
V40	2000	Lock and alarm	●	●	●	●
V40	2000	Petrol	●	●	●	●
V40	2000	Petrol	●	●	●	●
V40	2000	Petrol	●	●	●	●
V40	2000	Petrol	●	●	●	●
V40	2000	Petrol	●	●	●	●
V40	2000	Petrol	●	●	●	●
V40	2000	Petrol	●	●	●	●
V40	2000	SRS	●	●	●	○
V40	2000	TCM	●	●	●	●
V40	1999	ABS/BCM	●	●	●	●
V40	1999	CCM	●	●	●	●
V40	1999	CPM	●	●	●	●
V40	1999	Diesel	●	●	●	●
V40	1999	Diesel	●	●	●	●
V40	1999	DIM	●	●	●	●
V40	1999	Lock and alarm	●	●	●	●
V40	1999	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80	2005	Petrol	●	●	●	●
S80	2005	Petrol	●	●	●	●
S80	2005	PHM	●	●	●	●
S80	2005	PSM	●	●	●	●
S80	2005	REM	●	●	●	●
S80	2005	RTI	●	●	●	○
S80	2005	SAS	●	●	●	●
S80	2005	SRS	●	●	●	●
S80	2005	SUM	●	●	●	●
S80	2005	TCM	●	●	●	●
S80	2005	TCM	●	●	●	●
S80	2005	TCM	●	●	●	●
S80	2005	TCM	●	●	●	●
S80	2005	UEM	●	●	●	●
S80	2004	ABS/BCM	●	●	●	●
S80	2004	AEM	●	●	●	●
S80	2004	AUM	●	●	●	●
S80	2004	CCM	●	●	●	●
S80	2004	CEM	●	●	●	●
S80	2004	DDM	●	●	●	●
S80	2004	Diesel	●	●	●	●
S80	2004	Diesel	●	●	●	●
S80	2004	DIM	●	●	●	●
S80	2004	PDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80	2004	Petrol	●	●	●	●
S80	2004	Petrol	●	●	●	●
S80	2004	Petrol	●	●	●	●
S80	2004	Petrol	●	●	●	●
S80	2004	Petrol	●	●	●	●
S80	2004	Petrol	●	●	●	●
S80	2004	Petrol	●	●	●	●
S80	2004	Petrol	●	●	●	●
S80	2004	Petrol	●	●	●	●
S80	2004	PHM	●	●	●	●
S80	2004	PSM	●	●	●	●
S80	2004	REM	●	●	●	●
S80	2004	RTI	●	●	●	○
S80	2004	SAS	●	●	●	●
S80	2004	SRS	●	●	●	●
S80	2004	SUM	●	●	●	●
S80	2004	SWM	●	●	●	●
S80	2004	TCM	●	●	●	●
S80	2004	TCM	●	●	●	●
S80	2004	TCM	●	●	●	●
S80	2004	TCM	●	●	●	●
S80	2004	UEM	●	●	●	●
S80	2003	ABS/BCM	●	●	●	●
S80	2003	AEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80	2003	AUM	●	●	●	●
S80	2003	CCM	●	●	●	●
S80	2003	CEM	●	●	●	●
S80	2003	DDM	●	●	●	●
S80	2003	Diesel	●	●	●	●
S80	2003	Diesel	●	●	●	●
S80	2003	DIM	●	●	●	●
S80	2003	PDM	●	●	●	●
S80	2003	Petrol	●	●	●	●
S80	2003	Petrol	●	●	●	●
S80	2003	Petrol	●	●	●	●
S80	2003	Petrol	●	●	●	●
S80	2003	Petrol	●	●	●	●
S80	2003	Petrol	●	●	●	●
S80	2003	Petrol	●	●	●	●
S80	2003	Petrol	●	●	●	●
S80	2003	PHM	●	●	●	●
S80	2003	PSM	●	●	●	●
S80	2003	REM	●	●	●	●
S80	2003	RTI	●	●	●	○
S80	2003	SAS	●	●	●	●
S80	2003	SRS	●	●	●	●
S80	2003	SWM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80	2002	PHM	●	●	●	●
S80	2002	PSM	●	●	●	●
S80	2002	REM	●	●	●	●
S80	2002	RTI	●	●	●	○
S80	2002	SAS	●	●	●	●
S80	2002	SRS	●	●	●	●
S80	2002	SWM	●	●	●	●
S80	2002	TCM	●	●	●	●
S80	2002	TCM	●	●	●	●
S80	2002	TCM	●	●	●	●
S80	2002	TCM	●	●	●	●
S80	2002	TCM	●	●	●	●
S80	2002	UEM	●	●	●	●
S80	2001	ABS/BCM	●	●	●	●
S80	2001	AEM	●	●	●	●
S80	2001	AUM	●	●	●	●
S80	2001	CCM	●	●	●	●
S80	2001	CEM	●	●	●	●
S80	2001	DDM	●	●	●	●
S80	2001	Diesel	●	●	●	●
S80	2001	Diesel	●	○	○	●
S80	2001	DIM	●	●	●	●
S80	2001	PDM	●	●	●	●
S80	2001	Petrol	●	●	●	●
S80	2001	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80	2001	Petrol	●	●	●	●
S80	2001	Petrol	●	●	●	●
S80	2001	Petrol	●	●	●	●
S80	2001	Petrol	●	●	●	●
S80	2001	Petrol	●	●	●	●
S80	2001	Petrol	●	●	●	●
S80	2001	PHM	●	●	●	●
S80	2001	PSM	●	●	●	●
S80	2001	REM	●	●	●	●
S80	2001	RTI	●	●	●	○
S80	2001	SAS	●	●	●	●
S80	2001	SRS	●	●	●	●
S80	2001	SWM	●	●	●	●
S80	2001	TCM	●	●	●	●
S80	2001	TCM	●	●	●	●
S80	2001	TCM	●	●	●	●
S80	2001	TCM	●	●	●	●
S80	2001	TCM	●	●	●	●
S80	2001	UEM	●	●	●	●
S80	2000	ABS/BCM	●	●	●	●
S80	2000	AUM	●	●	●	●
S80	2000	CCM	●	●	●	●
S80	2000	CEM	●	●	●	●
S80	2000	DDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80	2000	Diesel	●	○	○	●
S80	2000	DIM	●	●	●	●
S80	2000	PDM	●	●	●	●
S80	2000	Petrol	●	●	●	●
S80	2000	Petrol	●	●	●	●
S80	2000	Petrol	●	●	●	●
S80	2000	Petrol	●	●	●	●
S80	2000	Petrol	●	●	●	●
S80	2000	Petrol	●	●	●	●
S80	2000	Petrol	●	●	●	●
S80	2000	Petrol	●	●	●	●
S80	2000	PHM	●	●	●	○
S80	2000	PSM	●	●	●	●
S80	2000	REM	●	●	●	●
S80	2000	RTI	●	●	●	○
S80	2000	SAS	●	●	●	●
S80	2000	SRS	●	●	●	●
S80	2000	SWM	●	●	●	●
S80	2000	TCM	●	●	●	●
S80	2000	TCM	●	●	●	●
S80	2000	TCM	●	●	●	●
S80	2000	TCM	●	●	●	●
S80	2000	UEM	●	●	●	●
S80	1999	ABS/BCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80	1999	AUM	●	●	●	○
S80	1999	CCM	●	●	●	●
S80	1999	CEM	●	●	●	●
S80	1999	DDM	●	●	●	●
S80	1999	Diesel	●	○	○	●
S80	1999	DIM	●	●	●	●
S80	1999	PDM	●	●	●	●
S80	1999	Petrol	●	●	●	●
S80	1999	Petrol	●	●	●	●
S80	1999	Petrol	●	●	●	●
S80	1999	Petrol	●	●	●	●
S80	1999	Petrol	●	●	●	●
S80	1999	Petrol	●	●	●	●
S80	1999	PHM	●	●	●	○
S80	1999	PSM	●	●	●	●
S80	1999	REM	●	●	●	●
S80	1999	RTI	●	●	●	○
S80	1999	SAS	●	●	●	●
S80	1999	SRS	●	●	●	○
S80	1999	SWM	●	●	●	●
S80	1999	TCM	●	●	●	●
S80	1999	TCM	●	●	●	●
S80	1999	TCM	●	●	●	●
S80	1999	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S80	1999	UEM	●	●	●	●
S70	2000	ABS/BCM	●	●	●	●
S70	2000	CCM	●	●	●	●
S70	2000	Combined instrument	●	●	●	●
S70	2000	CPM	●	●	●	●
S70	2000	Diesel	●	○	○	●
S70	2000	Lock and alarm	●	●	●	●
S70	2000	Petrol	●	●	●	●
S70	2000	Petrol	●	●	●	●
S70	2000	Petrol	●	●	●	●
S70	2000	Petrol	●	●	●	●
S70	2000	Petrol	●	●	●	●
S70	2000	Petrol	●	●	●	●
S70	2000	Petrol	●	●	●	●
S70	2000	Petrol	●	●	●	●
S70	2000	Petrol	●	●	●	●
S70	2000	Power seat module, left	●	●	●	●
S70	2000	Power seat module, right	●	●	●	●
S70	2000	RTI	●	●	●	●
S70	2000	SRS	●	●	●	●
S70	2000	TCM	●	●	●	●
S70	2000	TCM	●	●	●	●
S70	2000	TCM	●	●	●	●
S70	2000	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S70	1999	ABS/BCM	●	●	●	●
S70	1999	CCM	●	●	●	●
S70	1999	Combined instrument	●	●	●	●
S70	1999	CPM	●	●	●	●
S70	1999	Diesel	●	○	○	●
S70	1999	Lock and alarm	●	●	●	●
S70	1999	Petrol	●	●	●	●
S70	1999	Petrol	●	●	●	●
S70	1999	Petrol	●	●	●	●
S70	1999	Petrol	●	●	●	●
S70	1999	Petrol	●	●	●	●
S70	1999	Petrol	●	●	●	●
S70	1999	Power seat module, left	●	●	●	●
S70	1999	Power seat module, right	●	●	●	●
S70	1999	RTI	●	●	●	●
S70	1999	SRS	●	●	●	●
S70	1999	TCM	●	●	●	●
S70	1999	TCM	●	●	●	●
S60	2005	ABS/BCM	●	●	●	●
S60	2005	AEM	●	●	●	●
S60	2005	AUM	●	●	●	●
S60	2005	CCM	●	●	●	●
S60	2005	CEM	●	●	●	●
S60	2005	DDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60	2005	DEM	●	●	●	●
S60	2005	Diesel	●	●	●	●
S60	2005	Diesel	●	●	●	●
S60	2005	Diesel	●	●	●	●
S60	2005	DIM	●	●	●	●
S60	2005	PDM	●	●	●	●
S60	2005	Petrol	●	●	●	●
S60	2005	Petrol	●	●	●	●
S60	2005	Petrol	●	●	●	●
S60	2005	Petrol	●	●	●	●
S60	2005	Petrol	●	●	●	●
S60	2005	Petrol	●	●	●	●
S60	2005	Petrol	●	●	●	●
S60	2005	Petrol	●	●	●	●
S60	2005	Petrol	●	●	●	●
S60	2005	PHM	●	●	●	●
S60	2005	PSM	●	●	●	●
S60	2005	REM	●	●	●	●
S60	2005	RTI	●	●	●	○
S60	2005	SAS	●	●	●	●
S60	2005	SRS	●	●	●	●
S60	2005	SUM	●	●	●	●
S60	2005	TCM	●	●	●	●
S60	2005	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60	2005	UEM	●	●	●	●
S60	2004	ABS/BCM	●	●	●	●
S60	2004	AEM	●	●	●	●
S60	2004	AUM	●	●	●	●
S60	2004	CCM	●	●	●	●
S60	2004	CEM	●	●	●	●
S60	2004	DDM	●	●	●	●
S60	2004	DEM	●	●	●	●
S60	2004	Diesel	●	●	●	●
S60	2004	Diesel	●	●	●	●
S60	2004	DIM	●	●	●	●
S60	2004	PDM	●	●	●	●
S60	2004	Petrol	●	●	●	●
S60	2004	Petrol	●	●	●	●
S60	2004	Petrol	●	●	●	●
S60	2004	Petrol	●	●	●	●
S60	2004	Petrol	●	●	●	●
S60	2004	Petrol	●	●	●	●
S60	2004	Petrol	●	●	●	●
S60	2004	Petrol	●	●	●	●
S60	2004	PHM	●	●	●	●
S60	2004	PSM	●	●	●	●
S60	2004	REM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60	2003	Petrol	●	●	●	●
S60	2003	Petrol	●	●	●	●
S60	2003	Petrol	●	●	●	●
S60	2003	Petrol	●	●	●	●
S60	2003	PHM	●	●	●	●
S60	2003	PSM	●	●	●	●
S60	2003	REM	●	●	●	●
S60	2003	RTI	●	●	●	○
S60	2003	SAS	●	●	●	●
S60	2003	SRS	●	●	●	●
S60	2003	SWM	●	●	●	●
S60	2003	TCM	●	●	●	●
S60	2003	TCM	●	●	●	●
S60	2003	UEM	●	●	●	●
S60	2002	ABS/BCM	●	●	●	●
S60	2002	AEM	●	●	●	●
S60	2002	AUM	●	●	●	●
S60	2002	CCM	●	●	●	●
S60	2002	CEM	●	●	●	●
S60	2002	DDM	●	●	●	●
S60	2002	Diesel	●	●	●	●
S60	2002	Diesel	●	●	●	●
S60	2002	DIM	●	●	●	●
S60	2002	PDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60	2002	Petrol	●	●	●	●
S60	2002	Petrol	●	●	●	●
S60	2002	Petrol	●	●	●	●
S60	2002	Petrol	●	●	●	●
S60	2002	Petrol	●	●	●	●
S60	2002	Petrol	●	●	●	●
S60	2002	Petrol	●	●	●	●
S60	2002	Petrol	●	●	●	●
S60	2002	PHM	●	●	●	●
S60	2002	PSM	●	●	●	●
S60	2002	REM	●	●	●	●
S60	2002	RTI	●	●	●	○
S60	2002	SAS	●	●	●	●
S60	2002	SRS	●	●	●	●
S60	2002	SWM	●	●	●	●
S60	2002	TCM	●	●	●	●
S60	2002	TCM	●	●	●	●
S60	2002	UEM	●	●	●	●
S60	2001	ABS/BCM	●	●	●	●
S60	2001	AEM	●	●	●	●
S60	2001	AUM	●	●	●	●
S60	2001	CCM	●	●	●	●
S60	2001	CEM	●	●	●	●
S60	2001	DDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S60	2001	Diesel	●	●	●	●
S60	2001	DIM	●	●	●	●
S60	2001	PDM	●	●	●	●
S60	2001	Petrol	●	●	●	●
S60	2001	Petrol	●	●	●	●
S60	2001	Petrol	●	●	●	●
S60	2001	Petrol	●	●	●	●
S60	2001	Petrol	●	●	●	●
S60	2001	Petrol	●	●	●	●
S60	2001	PHM	●	●	●	●
S60	2001	PSM	●	●	●	●
S60	2001	REM	●	●	●	●
S60	2001	RTI	●	●	●	○
S60	2001	SAS	●	●	●	●
S60	2001	SRS	●	●	●	●
S60	2001	SWM	●	●	●	●
S60	2001	TCM	●	●	●	●
S60	2001	UEM	●	●	●	●
S40 (04-)	2005	Petrol	●	●	●	●
S40 (-04)	2004	ECM	●	●	●	●
S40 (-04)	2003	ECM	●	●	●	●
S40 (-04)	2002	ABS/BCM	●	●	●	●
S40 (-04)	2002	Anti-spin system	●	●	●	●
S40 (-04)	2002	CCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (-04)	2001	ABS/BCM	●	●	●	●
S40 (-04)	2001	Anti-spin system	●	●	●	●
S40 (-04)	2001	CCM	●	●	●	●
S40 (-04)	2000	ABS/BCM	●	●	●	●
S40 (-04)	2000	Anti-spin system	●	●	●	●
S40 (-04)	2000	CCM	●	●	●	●
S40 (-04)	1999	ABS/BCM	●	●	●	●
S40 (-04)	1999	Anti-spin system	●	●	●	●
S40 (-04)	1999	CCM	●	●	●	●
S40 (-04)	1999	CPM	●	●	●	●
S40 (-04)	1999	Diesel	●	●	●	●
S40 (-04)	1999	Diesel	●	●	●	●
S40 (-04)	1999	DIM	●	●	●	●
S40 (-04)	1999	Lock and alarm	●	●	●	●
S40 (-04)	1999	Petrol	●	●	●	●
S40 (-04)	1999	Petrol	●	●	●	●
S40 (-04)	1999	Petrol	●	●	●	●
S40 (-04)	1999	Petrol	●	●	●	●
S40 (-04)	1999	Petrol	●	●	●	●
S40 (-04)	1999	Petrol	●	●	●	●
S40 (-04)	1999	SRS	●	●	●	○
S40 (-04)	1999	TCM	●	●	●	●
S40 (04-)	2005	ABS/BCM	●	●	●	●
S40 (04-)	2005	AEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2005	AFM	●	●	●	●
S40 (04-)	2005	AUD	●	●	●	○
S40 (04-)	2005	CCM	●	●	●	●
S40 (04-)	2005	CEM	●	●	●	●
S40 (04-)	2005	DDM	●	●	●	●
S40 (04-)	2005	DEM	●	●	●	●
S40 (04-)	2005	Diesel	●	●	●	●
S40 (04-)	2005	Diesel	●	●	●	●
S40 (04-)	2005	Diesel	●	●	●	●
S40 (04-)	2005	DIM	●	●	●	●
S40 (04-)	2005	EPS	●	●	●	●
S40 (04-)	2005	GPS	●	●	●	●
S40 (04-)	2005	IAM	●	●	●	●
S40 (04-)	2005	ICM	●	●	●	●
S40 (04-)	2005	KVM	●	●	●	●
S40 (04-)	2005	MMM	●	●	●	●
S40 (04-)	2005	MPM	●	●	●	●
S40 (04-)	2005	PAM	●	●	●	●
S40 (04-)	2005	PDM	●	●	●	●
S40 (04-)	2005	Petrol	●	●	●	●
S40 (04-)	2005	Petrol	●	●	●	●
S40 (04-)	2005	Petrol	●	●	●	●
S40 (04-)	2005	Petrol	●	●	●	●
S40 (04-)	2005	PHM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2005	PSM	●	●	●	●
S40 (04-)	2004	ABS/BCM	●	●	●	●
S40 (04-)	2004	AEM	●	●	●	●
S40 (04-)	2004	AFM	●	●	●	●
S40 (04-)	2004	AUD	●	●	●	○
S40 (04-)	2004	CCM	●	●	●	●
S40 (04-)	2004	CEM	●	●	●	●
S40 (04-)	2004	DDM	●	●	●	●
S40 (04-)	2004	Diesel	●	●	●	●
S40 (04-)	2004	Diesel	●	●	●	●
S40 (04-)	2004	DIM	●	●	●	●
S40 (04-)	2004	EPS	●	●	●	●
S40 (04-)	2004	GPS	●	●	●	●
S40 (04-)	2004	ICM	●	●	●	●
S40 (04-)	2004	MMM	●	●	●	●
S40 (04-)	2004	MPM	●	●	●	●
S40 (04-)	2004	PDM	●	●	●	●
S40 (04-)	2004	Petrol	●	●	●	●
S40 (04-)	2004	Petrol	●	●	●	●
S40 (04-)	2004	Petrol	●	●	●	●
S40 (04-)	2004	PHM	●	●	●	●
S40 (04-)	2004	PSM	●	●	●	●
S40 (04-)	2004	SRS	●	●	●	●
S40 (04-)	2004	SUB	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (04-)	2004	SWM	●	●	●	●
S40 (04-)	2004	TCM	●	●	●	●
S40 (04-)	2004	TMC	●	●	●	●
S40 (04-)	2004	TRM	●	●	●	●
C70 Coupe	2002	ABS/BCM	●	●	●	●
C70 Coupe	2002	CCM	●	●	●	●
C70 Coupe	2002	Combined instrument	●	●	●	●
C70 Coupe	2002	CPM	●	●	●	●
C70 Coupe	2002	Lock and alarm	●	●	●	●
C70 Coupe	2002	Petrol	●	●	●	●
C70 Coupe	2002	Petrol	●	●	●	●
C70 Coupe	2002	Petrol	●	●	●	●
C70 Coupe	2002	Power seat module, left	●	●	●	●
C70 Coupe	2002	Power seat module, right	●	●	●	●
C70 Coupe	2002	RTI	●	●	●	●
C70 Coupe	2002	SRS	●	●	●	●
C70 Coupe	2002	TCM	●	●	●	●
C70 Coupe	2001	ABS/BCM	●	●	●	●
C70 Coupe	2001	CCM	●	●	●	●
C70 Coupe	2001	Combined instrument	●	●	●	●
C70 Coupe	2001	CPM	●	●	●	●
C70 Coupe	2001	Lock and alarm	●	●	●	●
C70 Coupe	2001	Petrol	●	●	●	●
C70 Coupe	2001	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 Coupe	2001	Petrol	●	●	●	●
C70 Coupe	2001	Power seat module, left	●	●	●	●
C70 Coupe	2001	Power seat module, right	●	●	●	●
C70 Coupe	2001	RTI	●	●	●	●
C70 Coupe	2001	SRS	●	●	●	●
C70 Coupe	2001	TCM	●	●	●	●
C70 Coupe	2000	ABS/BCM	●	●	●	●
C70 Coupe	2000	CCM	●	●	●	●
C70 Coupe	2000	Combined instrument	●	●	●	●
C70 Coupe	2000	CPM	●	●	●	●
C70 Coupe	2000	Lock and alarm	●	●	●	●
C70 Coupe	2000	Petrol	●	●	●	●
C70 Coupe	2000	Petrol	●	●	●	●
C70 Coupe	2000	Petrol	●	●	●	●
C70 Coupe	2000	Petrol	●	●	●	●
C70 Coupe	2000	Petrol	●	●	●	●
C70 Coupe	2000	Power seat module, left	●	●	●	●
C70 Coupe	2000	Power seat module, right	●	●	●	●
C70 Coupe	2000	RTI	●	●	●	●
C70 Coupe	2000	SRS	●	●	●	●
C70 Coupe	2000	TCM	●	●	●	●
C70 Coupe	2000	TCM	●	●	●	●
C70 Coupe	1999	ABS/BCM	●	●	●	●
C70 Coupe	1999	CCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 Coupe	1999	Combined instrument	●	●	●	●
C70 Coupe	1999	CPM	●	●	●	●
C70 Coupe	1999	Lock and alarm	●	●	●	●
C70 Coupe	1999	Petrol	●	●	●	●
C70 Coupe	1999	Petrol	●	●	●	●
C70 Coupe	1999	Petrol	●	●	●	●
C70 Coupe	1999	Petrol	●	●	●	●
C70 Coupe	1999	Petrol	●	●	●	●
C70 Coupe	1999	Power seat module, left	●	●	●	●
C70 Coupe	1999	Power seat module, right	●	●	●	●
C70 Coupe	1999	RTI	●	●	●	●
C70 Coupe	1999	SRS	●	●	●	●
C70 Coupe	1999	TCM	●	●	●	●
C70 Conv	2005	ABS	●	●	●	●
C70 Conv	2005	BCM	●	●	●	●
C70 Conv	2005	Cab control system	●	●	●	●
C70 Conv	2005	CCM	●	●	●	●
C70 Conv	2005	Combined instrument	●	●	●	●
C70 Conv	2005	CPM	●	●	●	●
C70 Conv	2005	Lock and alarm	●	●	●	●
C70 Conv	2005	Petrol	●	●	●	●
C70 Conv	2005	Petrol	●	●	●	●
C70 Conv	2005	Petrol	●	●	●	●
C70 Conv	2005	Power seat module, left	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 Conv	2005	Power seat module, right	●	●	●	●
C70 Conv	2005	Rollover protection	●	●	●	●
C70 Conv	2005	RTI	●	●	●	●
C70 Conv	2005	SRS	●	●	●	●
C70 Conv	2005	TCM	●	●	●	●
C70 Conv	2004	ABS	●	●	●	●
C70 Conv	2004	BCM	●	●	●	●
C70 Conv	2004	Cab control system	●	●	●	●
C70 Conv	2004	CCM	●	●	●	●
C70 Conv	2004	Combined instrument	●	●	●	●
C70 Conv	2004	CPM	●	●	●	●
C70 Conv	2004	Lock and alarm	●	●	●	●
C70 Conv	2004	Petrol	●	●	●	●
C70 Conv	2004	Petrol	●	●	●	●
C70 Conv	2004	Petrol	●	●	●	●
C70 Conv	2004	Power seat module, left	●	●	●	●
C70 Conv	2004	Power seat module, right	●	●	●	●
C70 Conv	2004	Rollover protection	●	●	●	●
C70 Conv	2004	RTI	●	●	●	●
C70 Conv	2004	SRS	●	●	●	●
C70 Conv	2004	TCM	●	●	●	●
C70 Conv	2003	ABS	●	●	●	●
C70 Conv	2003	BCM	●	●	●	●
C70 Conv	2003	Cab control system	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 Conv	2003	CCM	●	●	●	●
C70 Conv	2003	Combined instrument	●	●	●	●
C70 Conv	2003	CPM	●	●	●	●
C70 Conv	2003	Lock and alarm	●	●	●	●
C70 Conv	2003	Petrol	●	●	●	●
C70 Conv	2003	Petrol	●	●	●	●
C70 Conv	2003	Petrol	●	●	●	●
C70 Conv	2003	Power seat module, left	●	●	●	●
C70 Conv	2003	Power seat module, right	●	●	●	●
C70 Conv	2003	Rollover protection	●	●	●	●
C70 Conv	2003	RTI	●	●	●	●
C70 Conv	2003	SRS	●	●	●	●
C70 Conv	2003	TCM	●	●	●	●
C70 Conv	2002	ABS	●	●	●	●
C70 Conv	2002	BCM	●	●	●	●
C70 Conv	2002	Cab control system	●	●	●	●
C70 Conv	2002	CCM	●	●	●	●
C70 Conv	2002	Combined instrument	●	●	●	●
C70 Conv	2002	CPM	●	●	●	●
C70 Conv	2002	Lock and alarm	●	●	●	●
C70 Conv	2002	Petrol	●	●	●	●
C70 Conv	2002	Petrol	●	●	●	●
C70 Conv	2002	Petrol	●	●	●	●
C70 Conv	2002	Power seat module, left	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 Conv	2002	Power seat module, right	●	●	●	●
C70 Conv	2002	Rollover protection	●	●	●	●
C70 Conv	2002	RTI	●	●	●	●
C70 Conv	2002	SRS	●	●	●	●
C70 Conv	2002	TCM	●	●	●	●
C70 Conv	2001	ABS	●	●	●	●
C70 Conv	2001	BCM	●	●	●	●
C70 Conv	2001	Cab control system	●	●	●	●
C70 Conv	2001	CCM	●	●	●	●
C70 Conv	2001	Combined instrument	●	●	●	●
C70 Conv	2001	CPM	●	●	●	●
C70 Conv	2001	Lock and alarm	●	●	●	●
C70 Conv	2001	Petrol	●	●	●	●
C70 Conv	2001	Petrol	●	●	●	●
C70 Conv	2001	Petrol	●	●	●	●
C70 Conv	2001	Power seat module, left	●	●	●	●
C70 Conv	2001	Power seat module, right	●	●	●	●
C70 Conv	2001	Rollover protection	●	●	●	●
C70 Conv	2001	RTI	●	●	●	●
C70 Conv	2001	SRS	●	●	●	●
C70 Conv	2001	TCM	●	●	●	●
C70 Conv	2000	ABS	●	●	●	●
C70 Conv	2000	BCM	●	●	●	●
C70 Conv	2000	Cab control system	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 Conv	2000	CCM	●	●	●	●
C70 Conv	2000	Combined instrument	●	●	●	●
C70 Conv	2000	CPM	●	●	●	●
C70 Conv	2000	Lock and alarm	●	●	●	●
C70 Conv	2000	Petrol	●	●	●	●
C70 Conv	2000	Petrol	●	●	●	●
C70 Conv	2000	Petrol	●	●	●	●
C70 Conv	2000	Petrol	●	●	●	●
C70 Conv	2000	Petrol	●	●	●	●
C70 Conv	2000	Power seat module, left	●	●	●	●
C70 Conv	2000	Power seat module, right	●	●	●	●
C70 Conv	2000	Rollover protection	●	●	●	●
C70 Conv	2000	RTI	●	●	●	●
C70 Conv	2000	SRS	●	●	●	●
C70 Conv	2000	TCM	●	●	●	●
C70 Conv	2000	TCM	●	●	●	●
C70 Conv	1999	ABS	●	●	●	●
C70 Conv	1999	BCM	●	●	●	●
C70 Conv	1999	Cab control system	●	●	●	●
C70 Conv	1999	CCM	●	●	●	●
C70 Conv	1999	Combined instrument	●	●	●	●
C70 Conv	1999	CPM	●	●	●	●
C70 Conv	1999	Lock and alarm	●	●	●	●
C70 Conv	1999	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
C70 Conv	1999	Petrol	●	●	●	●
C70 Conv	1999	Petrol	●	●	●	●
C70 Conv	1999	Petrol	●	●	●	●
C70 Conv	1999	Power seat module, left	●	●	●	●
C70 Conv	1999	Power seat module, right	●	●	●	●
C70 Conv	1999	Rollover protection	●	●	●	●
C70 Conv	1999	RTI	●	●	●	●
C70 Conv	1999	SRS	●	●	●	●
C70 Conv	1999	TCM	●	●	●	●
V90	1998	ABS/BCM	●	●	●	●
V90	1998	CI	●	○	○	○
V90	1998	Immobilizer	●	●	●	●
V90	1998	Petrol	●	●	●	●
V90	1998	PSL	●	●	●	●
V90	1998	PSR	●	●	●	●
V90	1998	RTI	●	●	●	●
V90	1998	SRS	●	●	●	●
V90	1998	TCM	●	●	●	●
V90	1997	ABS/BCM	●	●	●	●
V90	1997	CI	●	○	○	○
V90	1997	Immobilizer	●	●	●	●
V90	1997	Petrol	●	●	●	●
V90	1997	PSL	●	●	●	●
V90	1997	PSR	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V90	1997	SRS	●	●	●	●
V90	1997	TCM	●	●	●	●
V70(-00)	1998	ABS/BCM	●	●	●	●
V70(-00)	1998	CI	●	●	●	●
V70(-00)	1998	CPM	●	●	●	●
V70(-00)	1998	ECM	●	●	●	●
V70(-00)	1998	Immobilizer	●	●	●	●
V70(-00)	1998	Motronic 4.4	●	●	●	●
V70(-00)	1998	PSL	●	●	●	●
V70(-00)	1998	PSR	●	●	●	●
V70(-00)	1998	RTI	●	●	●	●
V70(-00)	1998	SRS	●	●	●	●
V70(-00)	1998	TCM	●	●	●	●
V70(-00)	1998	VGLA	●	●	●	○
V70(-00)	1997	ABS/BCM	●	●	●	●
V70(-00)	1997	CI	●	●	●	●
V70(-00)	1997	CPM	●	●	●	●
V70(-00)	1997	ECM	●	●	●	●
V70(-00)	1997	Immobilizer	●	●	●	●
V70(-00)	1997	Motronic 4.4	●	●	●	●
V70(-00)	1997	PSL	●	●	●	●
V70(-00)	1997	PSR	●	●	●	●
V70(-00)	1997	RTI	●	●	●	●
V70(-00)	1997	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V70(-00)	1997	TCM	●	●	●	●
V70(-00)	1997	VGLA	●	●	●	○
V70 XC(-00)	1998	ABS/BCM	●	●	●	●
V70 XC(-00)	1998	CI	●	●	●	●
V70 XC(-00)	1998	ECM	●	●	●	●
V70 XC(-00)	1998	Immobilizer	●	●	●	●
V70 XC(-00)	1998	Motronic 4.4	●	●	●	●
V70 XC(-00)	1998	PSL	●	●	●	●
V70 XC(-00)	1998	PSR	●	●	●	●
V70 XC(-00)	1998	RTI	●	●	●	●
V70 XC(-00)	1998	SRS	●	●	●	●
V70 XC(-00)	1998	TCM	●	●	●	●
V70 XC(-00)	1998	VGLA	●	●	●	○
V40	1998	ABS/BCM	●	●	●	●
V40	1998	CCM	●	●	●	●
V40	1998	CI	●	●	●	●
V40	1998	CPM	●	●	●	●
V40	1998	DSA	●	●	●	●
V40	1998	Immobilizer	●	●	●	●
V40	1998	RTI	●	●	●	●
V40	1998	SRS	●	●	●	●
V40	1998	TCM	●	●	●	●
V40	1998	VGLA	●	●	●	●
V40	1997	ABS/BCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
V40	1997	CCM	●	●	●	●
V40	1997	CI	●	●	●	●
V40	1997	CPM	●	●	●	●
V40	1997	DSA	●	●	●	●
V40	1997	Immobilizer	●	●	●	●
V40	1997	RTI	●	●	●	●
V40	1997	SRS	●	●	●	●
V40	1997	TCM	●	●	●	●
V40	1997	VGLA	●	●	●	●
V40	1996	ABS/BCM	●	●	●	●
V40	1996	CCM	●	●	●	●
V40	1996	CI	●	●	●	●
V40	1996	CPM	●	●	●	●
V40	1996	DSA	●	●	●	●
V40	1996	Immobilizer	●	●	●	●
V40	1996	RTI	●	●	●	●
V40	1996	SRS	●	●	●	●
V40	1996	TCM	●	●	●	●
V40	1996	VGLA	●	●	●	●
S90	1998	ABS/BCM	●	●	●	●
S90	1998	CI	●	○	○	○
S90	1998	Immobilizer	●	●	●	●
S90	1998	Motronic 4.4	●	●	●	●
S90	1998	PSL	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S90	1998	PSR	●	●	●	●
S90	1998	RTI	●	●	●	●
S90	1998	SRS	●	●	●	●
S90	1998	TCM	●	●	●	●
S90	1997	ABS/BCM	●	●	●	●
S90	1997	CI	●	○	○	○
S90	1997	Immobilizer	●	●	●	●
S90	1997	Motronic 4.4	●	●	●	●
S90	1997	PSL	●	●	●	●
S90	1997	PSR	●	●	●	●
S90	1997	RTI	●	●	●	●
S90	1997	SRS	●	●	●	●
S90	1997	TCM	●	●	●	●
S70	1998	ABS/BCM	●	●	●	●
S70	1998	CI	●	○	○	○
S70	1998	CPM	●	●	●	●
S70	1998	ECM	●	●	●	●
S70	1998	Immobilizer	●	●	●	●
S70	1998	Motronic 4.4	●	●	●	●
S70	1998	Petrol	●	●	●	●
S70	1998	PSL	●	●	●	●
S70	1998	PSR	●	●	●	●
S70	1998	RTI	●	●	●	●
S70	1998	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S70	1998	TCM	●	●	●	●
S70	1998	VGLA	●	●	●	○
S70	1997	ABS/BCM	●	●	●	●
S70	1997	CI	●	○	○	○
S70	1997	CPM	●	●	●	●
S70	1997	ECM	●	●	●	●
S70	1997	Immobilizer	●	●	●	●
S70	1997	Motronic 4.4	●	●	●	●
S70	1997	Petrol	●	●	●	●
S70	1997	PSL	●	●	●	●
S70	1997	PSR	●	●	●	●
S70	1997	RTI	●	●	●	●
S70	1997	SRS	●	●	●	●
S70	1997	TCM	●	●	●	●
S70	1997	VGLA	●	●	●	○
S40 (-04)	1998	ABS/BCM	●	●	●	●
S40 (-04)	1998	CCM	●	●	●	●
S40 (-04)	1998	CI	●	●	●	●
S40 (-04)	1998	CPM	●	●	●	●
S40 (-04)	1998	DSA	●	●	●	●
S40 (-04)	1998	Immobilizer	●	●	●	●
S40 (-04)	1998	Petrol	●	●	●	●
S40 (-04)	1998	RTI	●	●	●	●
S40 (-04)	1998	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
S40 (-04)	1998	TCM	●	●	●	●
S40 (-04)	1998	VGLA	●	●	●	●
S40 (-04)	1997	ABS/BCM	●	●	●	●
S40 (-04)	1997	CCM	●	●	●	●
S40 (-04)	1997	CI	●	●	●	●
S40 (-04)	1997	CPM	●	●	●	●
S40 (-04)	1997	DSA	●	●	●	●
S40 (-04)	1997	Immobilizer	●	●	●	●
S40 (-04)	1997	RTI	●	●	●	●
S40 (-04)	1997	SRS	●	●	●	●
S40 (-04)	1997	TCM	●	●	●	●
S40 (-04)	1997	VGLA	●	●	●	●
S40 (-04)	1996	ABS/BCM	●	●	●	●
S40 (-04)	1996	CCM	●	●	●	●
S40 (-04)	1996	CI	●	●	●	●
S40 (-04)	1996	CPM	●	●	●	●
S40 (-04)	1996	DSA	●	●	●	●
S40 (-04)	1996	Immobilizer	●	●	●	●
S40 (-04)	1996	RTI	●	●	●	●
S40 (-04)	1996	SRS	●	●	●	●
S40 (-04)	1996	TCM	●	●	●	●
S40 (-04)	1996	VGLA	●	●	●	●
960	1997	ABS/BCM	●	●	●	●
960	1997	CI	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
960	1997	Immobilizer	●	●	●	●
960	1997	Motronic 4.4	●	●	●	●
960	1997	PSL	●	●	●	●
960	1997	PSR	●	●	●	●
960	1997	SRS	●	●	●	●
960	1997	TCM	●	●	●	●
960	1996	ABS/BCM	●	●	●	●
960	1996	CI	●	●	●	●
960	1996	Immobilizer	●	●	●	●
960	1996	Motronic 4.4	●	●	●	●
960	1996	PSL	●	●	●	●
960	1996	PSR	●	●	●	●
960	1996	SRS	●	●	●	●
960	1996	TCM	●	●	●	●
960	1995	ABS/BCM	●	●	●	●
960	1995	CI	●	●	●	●
960	1995	Immobilizer	●	●	●	●
960	1995	Motronic 4.4	●	●	●	●
960	1995	PSL	●	●	●	●
960	1995	PSR	●	●	●	●
960	1995	SRS	●	●	●	●
960	1995	TCM	●	●	●	●
850	1997	ABS/BCM	●	●	●	●
850	1997	CI	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
850	1997	Immobilizer	●	●	●	●
850	1997	Petrol	●	●	●	●
850	1997	PSL	●	●	●	●
850	1997	PSR	●	●	●	●
850	1997	SRS	●	●	●	●
850	1997	TCM	●	●	●	●
850	1996	ABS/BCM	●	●	●	●
850	1996	CI	●	●	●	●
850	1996	Immobilizer	●	●	●	●
850	1996	Petrol	●	●	●	●
850	1996	PSL	●	●	●	●
850	1996	PSR	●	●	●	●
850	1996	SRS	●	●	●	●
850	1996	TCM	●	●	●	●
850	1995	ABS/BCM	●	●	●	●
850	1995	CI	●	●	●	●
850	1995	Immobilizer	●	●	●	●
850	1995	Petrol	●	●	●	●
850	1995	PSL	●	●	●	●
850	1995	PSR	●	●	●	●
850	1995	SRS	●	●	●	●
850	1995	TCM	●	●	●	●