

MaxiDiag_Acura_V1.00 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
○ This function is not supported. ▲ This function is the new feature in this version.

| System | ECU Information | Read codes | Erase Codes | Live Data |
|-------------------------------|-----------------|------------|-------------|-----------|
| PGM-FI | ● | ● | ● | ● |
| DIESEL | ● | ● | ● | ● |
| A/T | ● | ● | ● | ● |
| CVT | ● | ● | ● | ● |
| ABS | ● | ● | ● | ● |
| SRS | ● | ● | ● | ● |
| EPS | ● | ● | ● | ● |
| POP-UP HOOD | ● | ● | ● | ● |
| IMA | ● | ● | ● | ● |
| IMMOBI | ○ | ○ | ○ | ● |
| KEYLESS ACCESS (RL) | ● | ● | ● | ● |
| EVPS | ● | ● | ● | ● |
| CMS | ● | ● | ● | ● |
| ACM | ● | ● | ● | ● |
| TPMS | ● | ● | ● | ● |
| SH-AWD | ● | ● | ● | ● |
| VTM 4 | ● | ● | ● | ● |
| LKAS CAMERA | ● | ● | ● | ● |
| LKAS CONTROL | ● | ● | ● | ● |
| iNVS | ● | ● | ● | ● |
| Honda Smart Parking | ● | ● | ● | ● |
| Adaptive cruise control (ACC) | ● | ● | ● | ● |
| Hydraulic booster | ● | ● | ● | ● |

| System | ECU Information | Read codes | Erase Codes | Live Data |
|---|-----------------|------------|-------------|-----------|
| Active Damper System | ● | ● | ● | ● |
| 4WS | ● | ● | ● | ● |
| DBW | ● | ● | ● | ● |
| ATTS | ● | ● | ● | ● |
| i-SHIFT | ● | ● | ● | ● |
| R/C ENG STARTER | ○ | ○ | ○ | ○ |
| BODY ELECTRICAL | ● | ● | ● | ● |
| BSI | ● | ● | ● | ● |
| Electric Parking Brake | ● | ● | ● | ● |
| MVCS | ● | ● | ● | ● |
| PCU | ● | ● | ● | ● |
| Active Damper System/Adaptive Damper System | ● | ● | ● | ● |
| CAN Gateway | ● | ● | ● | ○ |
| EDLC | ● | ● | ● | ● |
| Electric Servo Brake System | ● | ● | ● | ● |
| Precision All Wheel Steer | ● | ● | ● | ● |
| Real Time AWD/AWD with Intelligent Control | ● | ● | ● | ● |
| SVT | ● | ● | ● | ● |