

MaxiDiag_Toyota_V1.00 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
- This function is not supported. ▲ This function is the new feature in this version.

| System | Ecu Information | Read Codes | Erase Codes | Live Data |
|---------------------|-----------------|------------|-------------|-----------|
| SRS Airbag | ● | ● | ● | ※ |
| BODY | ● | ● | ● | ※ |
| BODY2 | ● | ※ | ※ | ※ |
| BODY3 | ● | ※ | ※ | ※ |
| BODY4 | ● | ● | ● | ● |
| BODY5 | ● | ※ | ※ | ● |
| Immobiliser | ● | ● | ● | ● |
| Tvss | ● | ● | ● | ● |
| Entry&Start | ● | ● | ● | ● |
| Occupant Detection | ● | ● | ● | ● |
| D-SEAT SW | ● | ※ | ※ | ● |
| AFS | ● | ● | ● | ● |
| Pre-Crash | ● | ● | ● | ● |
| D-Door Motor | ● | ● | ● | ● |
| Theft Deterrent | ● | ● | ● | ● |
| Air Conditioner | ● | ● | ● | ● |
| Combination Meter | ● | ※ | ※ | ● |
| Back Door | ● | ● | ● | ● |
| Driver Seat | ● | ※ | ※ | ● |
| Tilt&Telescopic | ● | ● | ● | ● |
| Mirror | ● | ※ | ※ | ● |
| Gateway | ● | ● | ● | ※ |
| Passenger Door | ● | ※ | ※ | ● |
| Rear left Door | ● | ● | ● | ● |
| Rear right door | ● | ● | ● | ● |
| Sliding Roof | ● | ※ | ※ | ● |
| Driver Door | ● | ※ | ※ | ● |
| Master Switch | ● | ● | ● | ● |
| Rear Right Seat | ● | ※ | ※ | ● |
| Rear Left Seat | ● | ※ | ※ | ● |
| Rear Seat Switch | ● | ※ | ※ | ● |
| Steering Pad Switch | ● | ※ | ※ | ● |
| Clearance Sonar | ● | ● | ● | ● |

| System | Ecu Information | Read Codes | Erase Codes | Live Data |
|-------------------------------|-----------------|------------|-------------|-----------|
| Rain Sensor | ● | ※ | ※ | ● |
| Wiper | ● | ※ | ※ | ● |
| Combination Switch | ● | ※ | ※ | ● |
| Steering Lock | ● | ● | ● | ● |
| Passenger Seat | ● | ※ | ※ | ● |
| Retractable Hardtop | ● | ● | ● | ● |
| Main Body | ● | ● | ● | ● |
| P-Door Motor | ● | ● | ● | ● |
| RL-Door Motor | ● | ● | ● | ● |
| RR-Door Motor | ● | ● | ● | ● |
| HV Gateway | ● | ● | ● | ● |
| Night View | ● | ● | ● | ● |
| HL Autoleveling | ● | ● | ● | ● |
| ECM Gateway | ● | ● | ● | ● |
| ECB Gateway | ● | ● | ● | ● |
| WIL Gateway | ● | ● | ● | ● |
| Center Console Switch | ● | ※ | ※ | ● |
| Rear Console Switch | ● | ● | ● | ● |
| Front Left Seat A/C | ● | ● | ● | ● |
| Front Right Seat A/C | ● | ● | ● | ● |
| Rear left Seat A/C | ● | ● | ● | ● |
| Rear Right Seat A/C | ● | ● | ● | ● |
| Electric Power Control | ● | ● | ● | ● |
| Active Headrest R | ● | ● | ● | ● |
| Active Headrest L | ● | ● | ● | ● |
| Pre-Crash 2 | ● | ● | ● | ● |
| Accessory Gateway | ● | ● | ● | ● |
| MIRROR R | ● | ※ | ※ | ● |
| MIRROR L | ● | ● | ● | ● |
| Navigation System | ● | ● | ● | ※ |
| PM1 Gateway | ● | ● | ● | ● |
| Charging Control | ● | ● | ● | ● |
| Starting Control | ● | ● | ● | ● |
| PM2 Gateway | ● | ● | ● | ● |
| Remote Engine Starter | ● | ● | ● | ● |
| Gateway BEAN | ● | ● | ● | ※ |
| Gateway CAN | ● | ● | ● | ※ |
| Back DoorPW | ● | ● | ● | ● |
| Transmission Control | ● | ● | ● | ● |
| Parking Assist Monitor System | ● | ● | ● | ● |

| System | Ecu Information | Read Codes | Erase Codes | Live Data |
|----------------------------------|-----------------|------------|-------------|-----------|
| Power Source Control | ● | ● | ● | ● |
| Engine | ● | ● | ● | ● |
| ECT | ● | ● | ● | ● |
| ABS | ● | ● | ● | ● |
| EMPS | ● | ● | ● | ● |
| Free-Tronic | ● | ● | ● | ● |
| Air suspension | ● | ● | ● | ● |
| AHC | ● | ● | ● | ● |
| VGRS | ● | ● | ● | ● |
| EMS | ● | ● | ● | ● |
| Tire Pressure Monitor | ● | ● | ● | ● |
| EHPS | ● | ● | ● | ● |
| Four Wheel Drive | ● | ● | ● | ● |
| Stabilizer | ● | ● | ● | ● |
| Intelligent Parking Assist | ● | ● | ● | ※ |
| Electric Parking Brake | ● | ● | ● | ● |
| Lane Keeping Assist | ● | ● | ● | ● |
| Front Stabilizer | ● | ● | ● | ● |
| Rear Stabilizer | ● | ● | ● | ● |
| ENGINE AND ECT | ● | ● | ● | ● |
| Cruise Control | ● | ● | ● | ● |
| ENGINE(LH Bank) | ● | ● | ● | ● |
| ENGINE(RH Bank) | ● | ● | ● | ● |
| HV Battery | ● | ● | ● | ● |
| Hybrid Control | ● | ● | ● | ● |
| Sequential M/T | ● | ● | ● | ● |
| Multi-Mode M/T | ● | ● | ● | ● |
| Stop And Go | ● | ● | ● | ● |
| Radar Cruise | ● | ● | ● | ● |
| Laser Cruise | ● | ● | ● | ● |
| E-ACM | ● | ● | ● | ● |
| Telematics | ● | ● | ● | ● |
| PPS | ● | ● | ● | ● |
| Advanced Parking Guidance System | ● | ● | ● | ● |
| FC | ● | ● | ● | ● |
| FCHV | ● | ● | ● | ● |
| EV | ● | ● | ● | ● |
| Battery | ● | ● | ● | ● |
| Front Right Door | ● | ※ | ※ | ● |
| Front Left Door | ● | ※ | ※ | ● |

| System | Ecu Information | Read Codes | Erase Codes | Live Data |
|--------------------------------|-----------------|------------|-------------|-----------|
| KDSS | ● | ● | ● | ● |
| Telematics | ● | ● | ● | ● |
| A/B | ● | ● | ● | ○ |
| A/T | ● | ● | ● | ● |
| AMT | ● | ● | ● | ● |
| ARS | ● | ● | ● | ● |
| ASG | ● | ● | ● | ● |
| Bluetooth communication module | ● | ● | ● | ● |
| CAN bus gateway | ● | ● | ● | ○ |
| CAN bus gateway V | ● | ● | ● | ○ |
| CVT | ● | ● | ● | ● |
| DRS | ● | ● | ● | ● |
| eco IDLE | ● | ● | ● | ● |
| ECT (SIL) | ● | ● | ● | ● |
| EFI | ● | ● | ● | ● |
| EPS | ● | ● | ● | ● |
| FC | ● | ● | ● | ○ |
| FCHV | ● | ● | ● | ○ |
| HV | ● | ● | ● | ● |
| ITC | ● | ● | ● | ● |
| KFS | ● | ● | ● | ※ |
| RL seat headrest ACT | ● | ● | ● | ● |
| ACT RR seat headrest | ● | ● | ● | ● |
| Pre-crash seat back seat RL | ● | ● | ● | ● |
| Pre-crash seat back seat RR | ● | ● | ● | ● |
| Active rear wing | ● | ● | ● | ● |
| Engine 2 | ● | ● | ● | ● |
| Grille shutter | ● | ● | ● | ● |
| Cruise Control 2 | ● | ※ | ※ | ● |
| Stop & Go | ● | ● | ● | ● |
| Diagnostics recorder | ● | ● | ● | ○ |
| Panoramic View Monitor | ● | ● | ● | ● |
| Blind Spot Monitor Slave | ● | ● | ● | ● |
| Blind Spot Monitor Master | ● | ● | ● | ● |
| Plug-in control | ● | ● | ● | ● |
| Body / gateway | ● | ● | ● | ● |
| Multi-bus gateway | ● | ● | ● | ○ |
| No.1 multi-bus monitoring | ● | ● | ● | ○ |
| No.2 multi-bus monitoring | ● | ● | ● | ○ |
| The motor-generator | ● | ● | ● | ● |

| System | Ecu Information | Read Codes | Erase Codes | Live Data |
|--|-----------------|------------|-------------|-----------|
| Remote Security | ● | ● | ● | ● |
| Vehicle control | ● | ● | ● | ● |
| PKB electric | ● | ● | ● | ● |
| Movable pedal | ● | ● | ● | ● |
| ABS/VSC/TRAC | ▲ | ▲ | ▲ | ▲ |
| ABS/VSC/TRC | ▲ | ▲ | ▲ | ▲ |
| Active Sound Control | ▲ | ▲ | ▲ | ▲ |
| Advanced Parking Guidance/Parking Assist Monitor | ▲ | ▲ | ▲ | ○ |
| Electric Propulsion Control System | ▲ | ▲ | ▲ | ○ |
| Gateway V | ▲ | ▲ | ▲ | ○ |
| HL AutoLeveling | ▲ | ▲ | ▲ | ▲ |
| Intelligent Clearance Sonar | ▲ | ▲ | ▲ | ○ |
| Intuitive P/A | ▲ | ▲ | ▲ | ▲ |
| IPA/Parking Assist Monitor | ▲ | ▲ | ▲ | ▲ |
| Lane Departure Alert | ▲ | ▲ | ▲ | ▲ |
| Mayday Gateway | ▲ | ▲ | ▲ | ▲ |
| Multi Bus Monitor No.1 | ▲ | ▲ | ▲ | ○ |
| Multi Bus Monitor No.2 | ▲ | ▲ | ▲ | ○ |
| Multi bus gateway | ▲ | ▲ | ▲ | ○ |
| P Master Switch | ▲ | ○ | ○ | ▲ |
| Pre-Collision | ▲ | ▲ | ▲ | ▲ |
| Pre-Collision 2 | ▲ | ▲ | ▲ | ▲ |
| Diagnostic Recorder | ▲ | ○ | ○ | ○ |
| Smart Access | ▲ | ▲ | ▲ | ▲ |
| Stop and Start | ▲ | ▲ | ▲ | ▲ |
| Vehicle Proximity Notification System | ▲ | ▲ | ▲ | ▲ |