

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2006	Sprinter	906 (VW LT3)	Body	OBF-Upper control panel	●	●	●	●	●	●	●	
As of 01/2006	Sprinter	906 (VW LT3)	Body	SAM-Signal acquisition and actuation module	●	●	●	●	●	●	●	
As of 01/2006	Sprinter	906 (VW LT3)	Body	AAG-Trailer connection unit	●	●	●	●	●	○	●	
As of 01/2006	Sprinter	906 (VW LT3)	Body	DBE-Overhead control panel	●	●	●	●	●	●	●	F073 F074 F075 F076 F077 F078 F079 F07A
As of 01/2006	Sprinter	906 (VW LT3)	Body	MRM-Steering column module	●	●	●	●	●	●	●	
As of 01/2006	Sprinter	906 (VW LT3)	Information and communication	KI-Instrument cluster	●	●	○	●	●	●	●	F07B F07C F07D F07E F07F F080 F081 F082 F083 F084 F085 F086 F087 F088 F089 F08A F08B F08C F08D F08E F08F F090 F091 F092
As of 01/2006	Sprinter	906 (VW LT3)	Information and communication	MTCO-Modular tachograph	●	●	●	●	●	●	○	
As of 01/2006	Sprinter	906 (VW LT3)	Information and communication	PTS-Parktronic system	●	●	●	●	●	●	●	F094 F095 F096
As of 01/2006	Sprinter	906 (VW LT3)	Information and communication	FSE Hands-free system (Bluetooth)	●	●	○	●	●	●	●	
As of 01/2006	Sprinter	906 (VW LT3)	Information and communication	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	●	●	●	●	●	●	○	
As of 01/2006	Sprinter	906 (VW LT3)	Information and communication	RADIO Sound 20	●	●	●	●	●	●	○	
As of 01/2006	Sprinter	906 (VW LT3)	Information and communication	COMAND or AUDIO	●	●	○	●	●	●	○	
As of 01/2006	Sprinter	906 (VW LT3)	Information and communication	RADIO Sound 5	●	●	●	●	●	●	○	
As of 01/2006	Sprinter	906 (VW LT3)	Information and communication	SOUND 5NG	●	●	●	●	●	●	○	
As of 01/2006	Sprinter	906 (VW LT3)	Information and communication	NAVI-Navigation system (COMAND, SOUND 50)	●	●	●	●	●	●	○	
As of 01/2006	Sprinter	906 (VW LT3)	Information and communication	CDW-CD changer	●	●	●	●	●	●	○	
As of 01/2006	Sprinter	906 (VW LT3)	Information and communication	TEL-Telephone control unit	●	●	●	●	●	●	○	
As of 01/2006	Sprinter	906 (VW LT3)	Seats and doors	TSG-Door control module front driver side	●	●	●	●	●	●	●	
As of 01/2006	Sprinter	906 (VW LT3)	Air conditioning	KLA-Automatic air conditioning	●	●	○	●	●	●	●	F097
As of 01/2006	Sprinter	906 (VW LT3)	Air conditioning	PTC-Heater booster	●	●	●	●	●	●	●	
As of 01/2006	Sprinter	906 (VW LT3)	Air conditioning	ZHE-Auxiliary heater	●	●	●	●	●	●	●	
As of 01/2006	Sprinter	906 (VW LT3)	Air conditioning	ZHZ-Heater booster	●	●	●	●	●	●	●	
As of 01/2006	Sprinter	906 (VW LT3)	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	●	●	●	
From 2002 to 2006	Sprinter	90x.6;6 90.6	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	F064 F065 F002 F066 F067 F068 F069 F06A F06B F06C F06D F06E F06F

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2002 to 2006	Sprinter	90x.6;690.6	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	F002 F070 F071 F065
From 2002 to 2006	Sprinter	90x.6;690.6	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	
From 2002 to	VANE0	414	Drive	ECM-Engine control monolith	●	●	○	●	●	※	●	
From 2002 to	VANE0	414	Chassis	ESP-Electronic stability program	●	●	○	●	●	※	●	F098
From 2002 to 2005	VANE0	414	Body	DAS-Drive authorization system	●	●	○	●	●	※	●	F099 F09A F09B F09C F09D F09E F09F FOA0 FOA1 FOA2 FOA3 FOA4 FOA5 FOA6 FOA7 FOA8
From 2002 to	VANE0	414	Body	ABW-Airbag with window airbag	●	●	○	●	●	※	●	FOAB FOAC
From 2002 to	VANE0	414	Body	ATA-Anti-theft alarm system	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Information and communication	IC-Instrument cluster	●	●	○	●	●	※	●	FOAD FOAE FOAF FOB0 FOB1 F091
From 2002 to 2005	VANE0	414	Information and communication	PTS-Parktronic system	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	COMAND	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	
From 2002 to 2005	VANE0	414	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	
From 2002 to 2005	VANE0	414	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
From 2002 to	VANE0	414	Seats and doors	CL-Central locking control unit	●	●	○	●	●	●	●	F0B2
From 2002 to	VANE0	414	Air	HEAT/TAC-Automatic temperature control	●	●	○	●	●	※	●	
From 2002 to	VANE0	414	Air	ZHE-Auxiliary heater	●	●	●	●	●	○	●	
From 2002 to	VANE0	414	Drive	ECM-Engine control monolith	●	●	○	●	●	※	●	
From 2002 to	VANE0	414	Drive	ACS-Automatic clutch system	●	●	○	●	●	※	●	F0B3 F0B4 F0B5
From 2002 to	VANE0	414	Chassis	ESP-Electronic stability program	●	●	○	●	●	※	●	F098
From 2002 to	VANE0	414	Body	ABW-Airbag with window airbag	●	●	○	●	●	※	●	FOAB FOAC
From 2002 to 2005	VANE0	414	Body	DAS-Drive authorization system	●	●	○	●	●	※	●	F099 F09A F09B F09C F09D F09E F09F FOA0 FOA1 FOA2 FOA3 FOA4 FOA5 FOA6 FOA7 FOA8
From 2002 to	VANE0	414	Body	ATA-Anti-theft alarm system	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Information and communication	IC-Instrument cluster	●	●	○	●	●	※	●	FOAD FOAE FOAF FOB0 FOB1 F091
From 2002 to 2005	VANE0	414	Information and communication	PTS-Parktronic system	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	COMAND	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	
From 2002 to 2005	VANE0	414	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2002 to 2005	VANE0	414	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
From 2002 to 2005	VANE0	414	Seats and doors	CL-Central locking control unit	●	●	○	●	●	●	●	FOB2
From 2002 to 2005	VANE0	414	Air	HEAT/TAC-Automatic temperature control	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Air	ZHE-Auxiliary heater	●	●	●	●	●	○	●	
From 2002 to 2005	VANE0	414	Drive	ECM-Engine control monolith	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Drive	FTC-Front transmission control	●	●	○	●	●	※	●	FOB6 F04B FOB7 FOB8 FOB9 FOBA FOBB
From 2002 to 2005	VANE0	414	Drive	FTC-Front transmission control	●	●	○	●	●	●	○	FOBC FOBD F04B FOB7 FOBE
From 2002 to 2005	VANE0	414	Drive	ESM-Electronic selector module	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Chassis	ESP-Electronic stability program	●	●	○	●	●	※	●	F098
From 2002 to 2005	VANE0	414	Body	DAS-Drive authorization system	●	●	○	●	●	※	●	F099 F09A F09B F09C F09D F09E F09F FOA0 FOA1 FOA2 FOA3 FOA4 FOA5 FOA6 FOA7 FOA8
From 2002 to 2005	VANE0	414	Body	ABW-Airbag with window airbag	●	●	○	●	●	※	●	FOAB FOAC
From 2002 to 2005	VANE0	414	Body	ATA-Anti-theft alarm system	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Information and communication	IC-Instrument cluster	●	●	○	●	●	※	●	FOAD FOAE FOAF FOB0 FOB1 F091
From 2002 to 2005	VANE0	414	Information and communication	PTS-Parktronic system	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	COMAND	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	
From 2002 to 2005	VANE0	414	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	
From 2002 to 2005	VANE0	414	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
From 2002 to 2005	VANE0	414	Seats and doors	CL-Central locking control unit	●	●	○	●	●	●	●	FOB2
From 2002 to 2005	VANE0	414	Air	HEAT/TAC-Automatic temperature control	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Air	ZHE-Auxiliary heater	●	●	●	●	●	○	●	
From 2002 to 2005	VANE0	414	Drive	CDI-Common Rail Diesel Injection	●	●	○	●	●	※	●	FOBF
From 2002 to 2005	VANE0	414	Chassis	ESP-Electronic stability program	●	●	○	●	●	※	●	F098
From 2002 to 2005	VANE0	414	Body	DAS-Drive authorization system	●	●	○	●	●	※	●	F099 F09A F09B F09C F09D F09E F09F FOA0 FOA1 FOA2 FOA3 FOA4 FOA5 FOA6 FOA7 FOA8
From 2002 to 2005	VANE0	414	Body	ABW-Airbag with window airbag	●	●	○	●	●	※	●	FOAB FOAC
From 2002 to 2005	VANE0	414	Body	ATA-Anti-theft alarm system	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Information and communication	IC-Instrument cluster	●	●	○	●	●	※	●	FOAD FOAE FOAF FOB0 FOB1 F091
From 2002 to 2005	VANE0	414	Information and communication	PTS-Parktronic system	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	COMAND	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2002 to 2005	VANE0	414	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	
From 2002 to 2005	VANE0	414	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
From 2002 to 2005	VANE0	414	Seats and doors	CL-Central locking control unit	●	●	○	●	●	●	●	FOB2
From 2002 to 2005	VANE0	414	Air	HEAT/TAC-Automatic temperature control	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Air	ZHE-Auxiliary heater	●	●	●	●	●	○	●	
From 2002 to 2005	VANE0	414	Drive	CDI-Common Rail Diesel Injection	●	●	○	●	●	※	●	FOBF
From 2002 to 2005	VANE0	414	Drive	ACS-Automatic clutch system	●	●	○	●	●	※	●	FOB3 FOB4 FOB5
From 2002 to 2005	VANE0	414	Chassis	ESP-Electronic stability program	●	●	○	●	●	※	●	F098
From 2002 to 2005	VANE0	414	Body	DAS-Drive authorization system	●	●	○	●	●	※	●	F099 F09A F09B F09C F09D F09E F09F FOA0 FOA1 FOA2 FOA3 FOA4 FOA5 FOA6 FOA7 FOA8
From 2002 to 2005	VANE0	414	Body	ABW-Airbag with window airbag	●	●	○	●	●	※	●	FOAB FOAC
From 2002 to 2005	VANE0	414	Body	ATA-Anti-theft alarm system	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Information and communication	IC-Instrument cluster	●	●	○	●	●	※	●	FOAD FOAE FOAF FOB0 FOB1 F091
From 2002 to 2005	VANE0	414	Information and communication	PTS-Parktronic system	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	COMAND	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	
From 2002 to 2005	VANE0	414	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	
From 2002 to 2005	VANE0	414	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
From 2002 to 2005	VANE0	414	Seats and doors	CL-Central locking control unit	●	●	○	●	●	●	●	FOB2
From 2002 to 2005	VANE0	414	Air	HEAT/TAC-Automatic temperature control	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Air	ZHE-Auxiliary heater	●	●	●	●	●	○	●	
From 2002 to 2005	VANE0	414	Drive	CDI-Common Rail Diesel Injection	●	●	○	●	●	※	●	FOBF
From 2002 to 2005	VANE0	414	Drive	FTC-Front transmission control	●	●	○	●	●	※	●	FOB6 F04B FOB7 FOB8 FOB9 FOBA FOBB
From 2002 to 2005	VANE0	414	Drive	FTC-Front transmission control	●	●	○	●	●	●	○	FOBC FOBD F04B FOB7 FOBE
From 2002 to 2005	VANE0	414	Drive	ESM-Electronic selector module	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Chassis	ESP-Electronic stability program	●	●	○	●	●	※	●	F098
From 2002 to 2005	VANE0	414	Body	DAS-Drive authorization system	●	●	○	●	●	※	●	F099 F09A F09B F09C F09D F09E F09F FOA0 FOA1 FOA2 FOA3 FOA4 FOA5 FOA6 FOA7 FOA8
From 2002 to 2005	VANE0	414	Body	ABW-Airbag with window airbag	●	●	○	●	●	※	●	FOAB FOAC
From 2002 to 2005	VANE0	414	Body	ATA-Anti-theft alarm system	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Information and communication	IC-Instrument cluster	●	●	○	●	●	※	●	FOAD FOAE FOAF FOB0 FOB1 F091
From 2002 to 2005	VANE0	414	Information and communication	PTS-Parktronic system	●	●	○	●	●	※	●	
From 2002 to 2005	VANE0	414	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
From 2002 to 2005	VANE0	414	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2008	VITO/VIAN	639	Seats and doors	DCM-FL-Door control module front left	●	●	○	●	●	●	●	FOE4
As of 01/2008	VITO/VIAN	639	Seats and doors	DCM-FR-Door control module front right	●	●	○	●	●	●	●	FOE5
As of 01/2008	VITO/VIAN 0	639	Seats and doors	STE-R-ESD [STE] Right electric sliding door	●	●	○	●	●	●	●	FOE6 FOE7 FOE8
As of 01/2008	VITO/VIAN	639	Seats and doors	STE-L-ESD [STE] Left electric sliding	●	●	○	●	●	●	●	FOE6 FOE7 FOE8
As of 01/2008	VITO/VIAN 0	639	Seats and doors	ESA driver-Electric seat adjustment driver (with memory)	●	●	○	●	●	○	●	FOE9 FOEA FOEB FOEC FOED
As of 01/2008	VITO/VIAN 0	639	Seats and doors	ESA passenger-Electric seat adjustment front passenger (with memory)	●	●	○	●	●	○	●	FOE9 FOEA FOEB FOEC FOED
As of 01/2008	VITO/VIAN	639	Air	REAR AC-Rear air conditioning	●	●	●	●	●	●	●	FOEE
As of 01/2008	VITO/VIAN	639	Air	AAC-Automatic air conditioning	●	●	○	●	●	●	●	FOEF
As of 01/2008	VITO/VIAN	639	Air	PTC-Heater booster	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIAN	639	Air	PTC-Heater booster	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIAN	639	Air	STH-Stationary heater	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIAN	639	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	○	●	●	
As of 01/2008	VITO/VIAN	639	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIAN 0	639	Drive	CDI-Common Rail Diesel Injection	●	●	●	●	●	●	●	FOF0 F008 F007 F001 F0F1 F0F2 F0F3 F0F4 FOF5 F0F6 F0F7 F0F8
As of 01/2008	VITO/VIAN 0	639	Drive	CDI-Common Rail Diesel Injection	●	●	●	●	●	●	●	FOF0 F008 F007 F001 F0F1 F0F2 F0F3 F0F4 FOF5 F0F6 F0F7 F0F8
As of 01/2008	VITO/VIAN 0	639	Drive	CDI4-Common Rail Diesel Injection	●	●	●	●	●	●	●	F001 F002 F003 F004 F005 F006 F007 F008 F009 F00A F00B F00C F00D F00E F00F F010
As of 01/2008	VITO/VIAN 0	639	Drive	CDI4-Common Rail Diesel Injection	●	●	●	●	●	●	●	FOF0 F00E F008 F007 F001 F00D F0F9 FOFA FOF2 F0FB
As of 01/2008	VITO/VIAN 0	639	Drive	EGS electronic transmission control	●	●	●	●	●	●	●	F04B F0B8 FOBE F056 F0C5 F0C6 F0C7 F0C8 F0C9 FOCA FOCB FOCC
As of 01/2008	VITO/VIAN 0	639	Drive	EGS Electronic transmission control	●	●	●	●	●	●	●	F04B F04C F04D F04E F04F F050 F051 F052 F053 F054 F055 F056 F057 F058 F059
As of 01/2008	VITO/VIAN 0	639	Drive	EGS Electronic transmission control	●	●	○	●	●	●	●	F04B F04C F04D F04E F04F F050 F051 F052 F053 F054 F055 F056 F057 F058 F059
As of 01/2008	VITO/VIAN	639	Drive	ESM-Electronic selector module	●	●	○	●	●	●	●	
As of 01/2008	VITO/VIAN	639	Chassis	ESP-Electronic stability program	●	●	○	●	●	●	●	FOCD FOCE
As of 01/2008	VITO/VIAN	639	Chassis	ESP-Electronic stability program	●	●	●	●	●	●	●	FOCF F0D0
As of 01/2008	VITO/VIAN	639	Chassis	TPC-Tire pressure monitor	●	●	●	●	●	●	●	F0D1 F05B F05C F081 F0D2
As of 01/2008	VITO/VIAN	639	Chassis	ENR-Electronic rear axle level control	●	●	○	●	○	●	●	F0D3 F05F
As of 01/2008	VITO/VIAN	639	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F0D4
As of 01/2008	VITO/VIAN	639	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F0D5 F063
As of 01/2008	VITO/VIAN	639	Body	CGW-Central gateway	●	●	●	●	○	●	○	
As of 01/2008	VITO/VIAN 0	639	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	F06C F0D6 F06D F0D7 F0D8 F0D9 F0DA F0DB F0DC F06F
As of 01/2008	VITO/VIAN 0	639	Body	SAM-Signal acquisition and actuation module	●	●	○	●	●	●	●	
As of 01/2008	VITO/VIAN	639	Body	UCP-Upper control panel	●	●	○	●	●	○	●	
As of 01/2008	VITO/VIAN	639	Body	OCP-Overhead control panel	●	●	○	●	●	○	●	
As of 01/2008	VITO/VIAN	639	Body	SDE-H-Rear sliding roof unit	●	●	○	●	●	○	●	F0DD F0DE F0DF
As of 01/2008	VITO/VIAN	639	Body	AHE-Trailer recognition	●	●	○	●	●	○	●	
As of 01/2008	VITO/VIAN	639	Body	AAG-Trailer connection unit	●	●	●	●	●	○	●	
As of 01/2008	VITO/VIAN 0	639	Information and communication	IC-Instrument cluster	●	●	○	●	●	○	●	FOE0 FOE1 FOAF FOAD
As of 01/2008	VITO/VIAN 0	639	Information and communication	IC-Instrument cluster	●	●	○	●	●	●	●	FOE2 FOAF FOE3

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2008	VITO/VIAN 0	639	Information and communication	PTS-Parktronic system	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIAN 0	639	Information and communication	RADIO Sound 5	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	AUDIO/APS-Auto pilot system	●	●	○	●	●	●	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	COMAND	●	●	○	●	●	●	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	Radio (SOUND series)	●	●	○	●	●	●	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	CDC-CD changer	●	●	○	●	○	○	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	●	●	○	●	○	○	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	UHI-Cellular telephone (fixed installation or portable) (D2B)	●	●	○	●	●	○	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	VCS-Voice control system	●	●	○	●	●	○	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	TV-TV tuner	●	●	○	●	●	●	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	NAVI-Navigation system (COMAND, SOUND 50)	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	RADIO Sound 20	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	SOUND 5NG	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	CDW-CD changer	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIAN 0	639	Information and communication	TEL-Telephone control unit	●	●	●	●	●	●	○	
As of 01/2008	VITO/VIAN 0	639	Seats and doors	DCM-FL-Door control module front left	●	●	○	●	●	●	●	FOE4
As of 01/2008	VITO/VIAN 0	639	Seats and doors	DCM-FR-Door control module front right	●	●	○	●	●	●	●	FOE5
As of 01/2008	VITO/VIAN 0	639	Seats and doors	STE-R-ESD [STE] Right electric sliding door	●	●	○	●	●	●	●	FOE6 FOE7 FOE8
As of 01/2008	VITO/VIAN 0	639	Seats and doors	STE-L-ESD [STE] Left electric sliding	●	●	○	●	●	●	●	FOE6 FOE7 FOE8
As of 01/2008	VITO/VIAN 0	639	Seats and doors	ESA driver-Electric seat adjustment driver (with memory)	●	●	○	●	●	○	●	FOE9 FOEA FOEB FOEC FOED
As of 01/2008	VITO/VIAN 0	639	Seats and doors	ESA passenger-Electric seat adjustment front passenger (with memory)	●	●	○	●	●	○	●	FOE9 FOEA FOEB FOEC FOED
As of 01/2008	VITO/VIAN 0	639	Air	REAR AC-Rear air conditioning	●	●	●	●	●	●	●	FOEE
As of 01/2008	VITO/VIAN 0	639	Air	AAC-Automatic air conditioning	●	●	○	●	●	●	●	FOEF
As of 01/2008	VITO/VIAN 0	639	Air	SIH-Stationary heater	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIAN 0	639	Air	PTC-Heater booster	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIAN 0	639	Air	PTC-Heater booster	●	●	●	●	●	●	●	
As of 01/2008	VITO/VIAN 0	639	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	○	●	●	
As of 01/2008	VITO/VIAN 0	639	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	●	●	●	
From 2004 to	VANEO	639	Drive	ME-SFI 2.8-Motor electronics 2.8	●	●	○	●	●	●	●	FOC0 F001 F0C1 F0C2 F049 F0C3 F0C4
From 2004 to	VANEO	639	Drive	ME 97-Motor electronics 9.7	●	●	●	●	●	●	●	F041 F042 F004 F043 F026 F044

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2004 to 2007	VANEO	639_M08	Information and communication	COMAND or AUDIO	●	●	○	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Information and communication	NAVI-Navigation system (COMAND, SOUND 50)	●	●	●	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Information and communication	AVN-Headlamp range adjustmen	●	●	○	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Information and communication	CDW-CD changer	●	●	●	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Information and communication	TEL-Telephone control unit	●	●	●	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Seats and doors	DCM-FL-Door control module front left	●	●	○	●	●	●	●	FOE4
From 2004 to 2007	VANEO	639_M08	Seats and doors	DCM-FR-Door control module front right	●	●	○	●	●	●	●	FOE5
From 2004 to 2007	VANEO	639_M08	Seats and doors	STE-R-ESD [STE] Right electric sliding door	●	●	○	●	●	●	●	FOE6 FOE7 FOE8
From 2004 to 2007	VANEO	639_M08	Seats and doors	STE-L-ESD [STE] Left electric sliding	●	●	○	●	●	●	●	FOE6 FOE7 FOE8
From 2004 to 2007	VANEO	639_M08	Seats and doors	ESA driver-Electric seat adjustment driver (with memory)	●	●	○	●	●	○	●	FOE9 FOEA FOEB FOEC FOED
From 2004 to 2007	VANEO	639_M08	Seats and doors	ESA passenger-Electric seat adjustment front passenger (with memory)	●	●	○	●	●	○	●	FOE9 FOEA FOEB FOEC FOED
From 2004 to 2007	VANEO	639_M08	Air	REAR AC-Rear air conditioning	●	●	●	●	●	●	●	FOEE
From 2004 to 2007	VANEO	639_M08	Air	AAC-Automatic air conditioning	●	●	○	●	●	●	●	FOEF
From 2004 to 2007	VANEO	639_M08	Air	STH-Stationary heater	●	●	●	●	●	●	●	
From 2004 to 2007	VANEO	639_M08	Air	PTC-Heater booster	●	●	●	●	●	●	●	
From 2004 to 2007	VANEO	639_M08	Air	PTC-Heater booster	●	●	●	●	●	●	●	
From 2004 to 2007	VANEO	639_M08	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	●	●	●	
From 2004 to 2007	VANEO	639_M08	Drive	CDID2-Common Rail Diesel Injection	●	●	●	●	●	●	●	F011 F004 F002 F005 F006 F007 F008 F012 F013 F014 F015 F016 F017 F018 F019 F01A F01B F01C F01D F01E F01F F020 F021 F022 F023 F00F F024 F025 F026 F027 F00D F028 F029 F02A F010 F02B F02C
From 2004 to 2007	VANEO	639_M08	Drive	CDI4-Common Rail Diesel Injection	●	●	●	●	●	●	●	F001 F002 F003 F004 F005 F006 F007 F008 F009 F00A F00B F00C F00D F00E F00F F010
From 2004 to 2007	VANEO	639_M08	Drive	CDI6-Common Rail Diesel Injection	●	●	●	●	●	●	●	F011 F004 F00D F002 F005 F006 F007 F008 F02D F02E F02F F016 F030 F031 F032 F033 F034 F035 F036 F037 F038 F024 F00F F039 F010 F00E F026 F03A F03B F03C F025 F03D
From 2004 to 2007	VANEO	639_M08	Drive	CDI-Common Rail Diesel Injection	●	●	●	●	●	●	●	F0F0 F008 F007 F001 F0F1 F0F2 F0F3 F0F4 F0F5 F0F6 F0F7 F0F8
From 2004 to 2007	VANEO	639_M08	Drive	EGS Electronic transmission control	●	●	●	●	●	●	●	F04B F04C F04D F04E F04F F050 F051 F052 F053 F054 F055 F056 F057 F058 F059
From 2004 to 2007	VANEO	639_M08	Drive	EGS electronic transmission control	●	●	●	●	●	●	●	F04B F0B8 F0BE F056 F0C5 F0C6 F0C7 F0C8 F0C9 FOCA F0CB F0CC
From 2004 to 2007	VANEO	639_M08	Drive	ESM-Electronic selector module	●	●	○	●	●	●	●	
From 2004 to 2007	VANEO	639_M08	Drive	FSCU-Fuel pump	●	●	●	●	●	●	○	
From 2004 to 2007	VANEO	639_M08	Chassis	ESP-Electronic stability program	●	●	●	●	●	●	●	F0CF F0D0
From 2004 to 2007	VANEO	639_M08	Chassis	TPC-Tire pressure monitor	●	●	●	●	●	●	●	F0D1 F05B F05C F081 F0D2
From 2004 to 2007	VANEO	639_M08	Chassis	ENR-Electronic rear axle level control	●	●	○	●	○	●	●	F0D3 F05F
From 2004 to 2007	VANEO	639_M08	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F0D5 F063
From 2004 to 2007	VANEO	639_M08	Body	SRS-supplemental restraint system	●	●	○	●	●	●	○	F0D5 F063
From 2004 to 2007	VANEO	639_M08	Body	EZS-Electronic ignition switch	●	●	●	●	●	●	○	F0DB F0DC F06C F06D F06E F06F

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2004 to 2007	VANE0	639_M08	Body	SAM-Signal acquisition and actuation module	●	●	○	●	●	●	○	
From 2004 to 2007	VANE0	639_M08	Body	SAM-Signal acquisition and actuation module	●	●	○	●	●	●	●	
From 2004 to 2007	VANE0	639_M08	Body	OBF2-Upper control panel	●	●	●	●	●	●	●	
From 2004 to 2007	VANE0	639_M08	Body	UCP-Upper control panel	●	●	○	●	●	○	●	
From 2004 to 2007	VANE0	639_M08	Body	AAG-Trailer connection unit	●	●	●	●	●	○	●	
From 2004 to 2007	VANE0	639_M08	Body	OCP-Overhead control panel	●	●	○	●	●	○	●	
From 2004 to 2007	VANE0	639_M08	Body	SDE-H-Rear sliding roof unit	●	●	○	●	●	○	●	FODD FODE FODF
From 2004 to 2007	VANE0	639_M08	Body	ALWR-Headlamp range adjustment	●	●	●	●	●	●	●	F072
From 2004 to 2007	VANE0	639_M08	Information and communication	IC-Instrument cluster	●	●	○	●	●	●	●	FOE2 FOAF FOE3
From 2004 to 2007	VANE0	639_M08	Information and communication	PTS-Parktronic system	●	●	●	●	●	●	●	
From 2004 to 2007	VANE0	639_M08	Information and communication	PTS-Parktronic system	●	●	○	●	●	●	●	
From 2004 to 2007	VANE0	639_M08	Information and communication	DTC0-Digital tachograph	●	●	○	●	○	●	○	
From 2004 to 2007	VANE0	639_M08	Information and communication	FSE Hands-free system (Bluetooth)	●	●	○	●	●	●	●	
From 2004 to 2007	VANE0	639_M08	Information and communication	SOUND 5NG	●	●	●	●	●	●	○	
From 2004 to 2007	VANE0	639_M08	Information and communication	RADIO Sound 5	●	●	●	●	●	●	○	
From 2004 to 2007	VANE0	639_M08	Information and communication	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	●	●	●	●	●	●	○	
From 2004 to 2007	VANE0	639_M08	Information and communication	RADIO Sound 20	●	●	●	●	●	●	○	
From 2004 to 2007	VANE0	639_M08	Information and communication	COMAND or AUDIO	●	●	○	●	●	●	○	
From 2004 to 2007	VANE0	639_M08	Information and communication	NAVI-Navigation system (COMAND, SOUND 50)	●	●	●	●	●	●	○	
From 2004 to 2007	VANE0	639_M08	Information and communication	AVN-Headlamp range adjustmen	●	●	○	●	●	●	○	
From 2004 to 2007	VANE0	639_M08	Information and communication	CDW-CD changer	●	●	●	●	●	●	○	
From 2004 to 2007	VANE0	639_M08	Information and communication	TEL-Telephone control unit	●	●	●	●	●	●	○	
From 2004 to 2007	VANE0	639_M08	Seats and doors	DCM-FL-Door control module front left	●	●	○	●	●	●	●	FOE4
From 2004 to 2007	VANE0	639_M08	Seats and doors	DCM-FR-Door control module front right	●	●	○	●	●	●	●	FOE5
From 2004 to 2007	VANE0	639_M08	Seats and doors	STE-R-ESD [STE] Right electric sliding door	●	●	○	●	●	●	●	FOE6 FOE7 FOE8
From 2004 to 2007	VANE0	639_M08	Seats and doors	STE-L-ESD [STE] Left electric sliding	●	●	○	●	●	●	●	FOE6 FOE7 FOE8
From 2004 to 2007	VANE0	639_M08	Seats and doors	ESA driver-Electric seat adjustment driver (with memory)	●	●	○	●	●	○	●	FOE9 FOEA FOEB FOEC FOED
From 2004 to 2007	VANE0	639_M08	Seats and doors	ESA passenger-Electric seat adjustment front passenger (with memory)	●	●	○	●	●	○	●	FOE9 FOEA FOEB FOEC FOED
From 2004 to 2007	VANE0	639_M08	Air	REAR AC-Rear air conditioning	●	●	●	●	●	●	●	FOEE
From 2004 to 2007	VANE0	639_M08	Air	AAC-Automatic air conditioning	●	●	○	●	●	●	●	FOEF

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2004 to	VANEO	639_M08	Air	STH-Stationary heater	●	●	●	●	●	●	●	
From 2004 to	VANEO	639_M08	Air	PTC-Heater booster	●	●	●	●	●	●	●	
From 2004 to	VANEO	639_M08	Air	PTC-Heater booster	●	●	●	●	●	●	●	
From 2004 to	VANEO	639_M08	Special bodies	PSM-Parameterizable Special Module	●	●	●	●	●	●	●	
As of 02/2012	Sprinter	909	Drive	CDI4-Common Rail Diesel Injection	●	●	●	●	●	●	●	F001 F002 F003 F004 F005 F006 F007 F008 F009 F00A F00B F00C F00D F00E F00F F010
As of 02/2012	Sprinter	909	Chassis	ESP-Electronic stability program	●	●	●	●	●	●	●	FOFC FOFD
As of 02/2012	Sprinter	909	Body	SRS-supplemental restraint system	●	●	●	●	●	●	●	F063
As of 02/2012	Sprinter	909	Body	HZR-Heating control	●	●	○	●	●	●	●	
As of 02/2012	Sprinter	909	Body	WSP immobilizer	●	●	○	●	●	●	○	FOFE FOFF
As of 02/2012	Sprinter	909	Body	ZV-Central locking system	●	●	○	●	●	●	●	
As of 02/2012	Sprinter	909	Information and communication	KI-Instrument cluster	●	●	○	●	●	●	●	F100 F101

Specil_Function

Index	Specil Function Name	Index	Specil Function Name
F001	Drive authorization	F002	Write VIN.
F003	Tire size	F004	Maximum vehicle speed limit
F005	Teach-in process after replacement of component Diesel particulate filter	F006	Teaching in the diesel particulate filter after replacing the engine control unit
F007	Regeneration of diesel particulate filter when driving	F008	Regeneration of diesel particulate filter
F009	Limit values Working speed control	F00A	Initialize component Hot film mass air flow sensor.
F00B	Teach in component Throttle valve.	F00C	Initialize system 'Rail pressure regulation'.
F00D	Adjustment of injector injection quantities	F00E	Teach in used diesel particulate filter.
F00F	Teach in new diesel particulate filter.	F010	Reset fill factor of air filter.
F011	Activate drive authorization system.	F012	B2/12 (Hot film mass air flow sensor)
F013	B4/16 (Rail pressure sensor)	F014	B28/18 (Diesel particulate filter differential pressure sensor)
F015	B85/2 (Oxygen sensor)	F016	M3/5 (Fuel pump with fuel level sensor)
F017	M16/45 (Throttle valve actuator)	F018	M72/1 (Intake port shutoff actuator)
F019	R9 (Glow plugs)	F01A	Y74/5 (Pressure regulator valve)
F01B	Y94/3 (Quantity control valve)	F01C	Turbocharger
F01D	Diesel particulate filter	F01E	Air filter
F01F	Leak in system Charge air	F020	Leak in system Exhaust
F021	Type approval number	F022	Quick teach-in of the zero quantity calibration values at idle
F023	Quick teach-in of the zero quantity calibration values while driving	F024	Resetting the lambda values
F025	Activate fuel pump.	F026	Learning of the throttle valve stop
F027	Teach-in of intake port shutoff	F028	Teach in component 48584.
F029	Teach in component Charge pressure	F02A	Teach in component Quantity control valve.
F02B	Teach in component Glow output stage.	F02C	Deletion of values
F02D	B4/17 (Rail pressure sensor)	F02E	B16/12 (Temperature sensor upstream of SCR catalytic converter)
F02F	B28/20 (Diesel particulate filter differential pressure sensor)	F030	M16/48 (Throttle valve actuator)
F031	Y74/6 (Pressure regulator valve)	F032	Y76 (Injectors)
F033	Y130 (AdBlue?injection valve)	F034	SCR catalytic converter
F035	Teach in component NOx sensor upstream of SCR catalytic converter.	F036	Teach in component Status of NOx sensor downstream of SCR catalytic converter.
F037	Reset quantity mean value adaptation data.	F038	Reset values for HFM drift compensation.
F039	Teach in component Diesel oxidation catalytic converter.	F03A	Teach in component Differential pressure sensor.
F03B	Exhaust gas recirculation valve teach-in	F03C	Teach in component Pressure control valve.
F03D	Teach in component Y130 (AdBlue?injection	F03E	Initialize system 'SCR'.
F03F	Teach in component SCR catalytic converter.	F040	Teach in component B16/12 (Temperature sensor upstream of SCR catalytic converter).
F041	Drive authorization system	F042	Initial startup
F043	Reset adaptation values.	F044	Fuel quantity
F045	Ignition	F046	Learning of the recirculated air flap stop
F047	Teach in of drive authorization system	F048	CNG compressed natural gas Mode
F049	Resetting of sensor adaptation	F04A	Activate or deactivate component Y107/9 (Low pressure shutoff valve).
F04B	Definition	F04C	Important information on adaptation limit
F04D	Important information on the combination possibilities for adaption end stop values	F04E	Adaptation values of shift 1-2:
F04F	Adaptation values of shift 2-3:	F050	Adaptation values of shift 3-4:
F051	Adaptation values of shift 4-5:	F052	Adaptation values of shift 5-4:
F053	Adaptation values of shift 4-3:	F054	Adaptation values of shift 3-2:
F055	Adaptation values of shift 2-1:	F056	Display all adaptation data.
F057	Resetting of adaptation data	F058	Transmission control
F059	Torque converter lockup clutch	F05A	Calibration of component B24/15 (Yaw rate, lateral and longitudinal acceleration sensor)
F05B	Initial startup with automatic takeover of settings of previous control unit	F05C	Initial startup with manual settings input for new control unit,For example: The previous control unit can no longer be read.
F05D	Write wheel electronics identification	F05E	Coding display
F05F	Level calibration	F060	A9/1ml (Air compressor motor)
F061	Y36 (Level control valve unit)	F062	Read coding.1
F063	Interlock control module.	F064	Activation(ELV-Electric steering lock)

Index	Specil Function Name	Index	Specil Function Name
F065	Central locking(Customer-specific settings)	F066	EZS:Detach transport protection.
F067	ELV: Detach transport protection.	F068	EZS:Personalizing
F069	ELV: Personalizing	F06A	Activate control module EZS.
F06B	Activate control module ELV.	F06C	Disable key or key track.
F06D	Once again authorize key or key track.	F06E	Teach in additional key.
F06F	Program replacement keys.	F070	Step 1 Determine random number for teach-in of transponder key.
F071	Step 2 Enter the encrypted random number generated by FDOK.	F072	Calibrate control unit LWR.
F073	Perform normalizing of component Sliding/tilting roof.	F074	Perform denormalization of component Sliding/tilting roof.
F075	Delete denormalization causes.	F076	Inversion of rotation direction
F077	Reset alarm sources.	F078	Teach in component Battery-operated horn.
F079	Teach in component Rain/light sensor.	F07A	Function 'Silent alarm'
F07B	Reset of maintenance interval display	F07C	Key track All
F07D	Key track 1	F07E	Key track 2
F07F	Key track 3-8	F080	All coding settings
F081	Variant coding	F082	Menu settings(Basic settings)
F083	Trip computer1	F084	Trip computer2
F085	Lighting	F086	Parameterization of the current oil data
F087	Parameter Instrument cluster	F088	ASSYST Active Service System
F089	Vehicle equipment	F08A	Configuration Indicators
F08B	Vehicle speed display	F08C	Configuration of menu items in multifunction display
F08D	Parameter TCO Tachograph	F08E	Parameter ESP Electronic Stability Program
F08F	Parameter Seat belt reminder warning	F090	Tank parameters
F091	Fuel tank characteristic curve	F092	Extended tank algorithm
F093	Fuel tank sensor tight installation	F094	Customer-specific settings 1
F095	Customer-specific settings 2	F096	Customer-specific settings 3
F097	Teach in actuator motors.	F098	Road test
F099	Reading out the VIN	F09A	Writing of the VIN
F09B	Remote control key 1	F09C	Transponder key 1
F09D	Remote control key 2	F09E	Transponder key 2
F09F	Remote control key 3	FOA0	Transponder key 3
FOA1	Remote control key 4	FOA2	Transponder key 4
FOA3	Remote control key 5	FOA4	Transponder key 5
FOA5	Remote control key 6	FOA6	Transponder key 6
FOA7	Remote control key 7	FOA8	Transponder key 7
FOA9	Remote control key 8	FOAA	Transponder key 8
FOAB	Parameterization	FOAC	Chassis number
FOAD	ASSYST settings	FOAE	Time
FOAF	Setting main odometer forward	FOB0	Resetting of main odometer, Version: USA The main odometer cannot be set back in the USA., Version: Canada The kilometer reading can only be changed during the first 10 kilometers., Version: Rest of world The kilometer reading can only be changed during
FOB1	Oil change	FOB2	Reset overload protection counter.
FOB3	Bleeding	FOB4	AKS setting
FOB5	Engagement point determination	FOB6	Reset teach-in byte for the air conditioning or automatic heater.
FOB7	Display adaption data.	FOB8	Resetting of adaptation data
FOB9	Performing adaptation if transmission replaced or transmission repaired	FOBA	Noise reduction
FOBB	Force-free in position D	FOBC	Control module data
FOBD	Settings	FOBE	Performing adaptation
FOBF	Drive authorization:Learning process (identification)	FOC0	Default initialization
FOC1	Tester identification	FOC2	Check sensor adaptation.
FOC3	Check mixture adaptation.	FOC4	Resetting of mixture adaptation
FOC5	Adaptation data of power upshifts	FOC6	Adaptation data deceleration upshifts
FOC7	Adaptation data power downshifts	FOC8	Adaptation data deceleration downshifts
FOC9	Adaptation data filling pressure and filling	FOCA	Notes on combinations of adaptation data
FOCB	Filling pressure	FOCC	Filling time and switching time
FOCD	Component B24/8 (Steering angle sensor): Perform calibration.	FOCE	Calibration of steering angle sensor
FOCF	Component : B24/8 (Steering angle sensor):Perform calibration.	FOD0	Component : B24/15 (Yaw rate, lateral and longitudinal acceleration sensor):Perform calibration.
FOD1	Writing of specified pressure values.	FOD2	Tire pressure set values

Index	Specil Function Name	Index	Specil Function Name
FOD3	Replace control module. (Only the calibration data are transferred.)	FOD4	Vehicle ident no.
FOD5	Transmit key ID to control unit N2/11 (Supplemental restraint system (SRS)).	FOD6	Disable key or key track with the workshop key.
FOD7	Detach transport protection. N73 (Electronic ignition switch (EIS [EZS]))	FOD8	Detach transport protection. N26/5 (Electric steering lock)
FOD9	Personalizing N73 (Electronic ignition switch (EIS [EZS]))	FODA	Personalizing N26/5 (Electric steering lock)
FODB	Drive authorization system(EZS ESL CDI)- Detach transport protection. Personalizing. Activating	FODC	Drive authorization system(EZS ESL ME-SFI)- Detach transport protection. Personalizing. Activating
FODD	Normalizing routine/Learning process	FODE	Adapt obstruction protection.
FODF	Coding of sliding/tilting roof function of 'automatic operation'	FOE0	Learning to the drive authorization system
FOE1	Setting main odometer forward and back	FOE2	Personalizing
FOE3	Resetting menu settings to manufacturer default settings	FOE4	Parameterization of N69/1 (Left front door control unit (DCM-LF [TSG-VL])) Power window
FOE5	Parameterization of N69/2 (Right front door control unit (DCM-RF [TSG-VR])) Power window	FOE6	Normalizing
FOE7	Detection of sliding movement	FOE8	Denormalization
FOE9	Normalizing of forward/back adjustment	FOEA	Normalizing of height adjustment at front
FOEB	Normalizing of height adjustment at rear	FOEC	Normalizing of head restraint adjustment
FOED	Normalizing of backrest adjustment	FOEE	Perform normalizing of component A32/2m3 (Rear blending air flap actuator motor).
FOEF	Normalizing of positioning motors	FOF0	Initialization of system 'Diesel particulate filter'
FOF1	Adjustment of injector injection quantities/Injector shutoff	FOF2	Initialization of system 'Air intake, turbocharging'
FOF3	Initialization of system 'Catalytic	FOF4	Tire circumference parameter
FOF5	Idle speed adjustment(840 1/min)	FOF6	Idle speed adjustment(800 1/min)
FOF7	Extension of run-on time	FOF8	Adjustment value of start quantity
FOF9	Initialization of system 'Air filter'	FOFA	Initialization of system 'Throttle valve positioner'
FOFB	Initialization of system 'Common Rail'	FOFC	Calibration of component Sensor 'Yaw rate, lateral and longitudinal acceleration'
FOFD	Calibration of component B143 (Steering angle sensor)	FOFE	Learn additional transponder key. (X1)
FOFF	Erase all the transponder keys and relearn the current one. (X2)	F100	Set time.
F101	Set tire size.		