

MaxiSys_Mazda_V6.61 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	4X4	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	ABS	●	●	●	●	0x0008
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	GEM	●	●	●	●	0x000A 0x000F
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	IC	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	PAM	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	PCM	●	●	●	●	0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	RCM	●	●	●	●	0x000C
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	4X4	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	ABS	●	●	●	●	0x0008
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	GEM	●	●	●	●	0x000A 0x000F 0xF042 0xF04E 0xF04F 0xF050 0xF051 0xF056 0xF057
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	IC	●	●	●	●	0x0005 0xF040 0xF043 0xF04D 0xF052 0xF053
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	PAM	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	PCM	●	●	●	●	0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	RCM	●	●	●	●	0x000C 0x006D
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0082
626 / 626 WAGON / TELSTAR	1.8L	FP	1999	ABS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	1.8L	FP	2000	ABS/TCS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 - 1999	ABS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 - 2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0023 0x0025
626 / 626 WAGON / TELSTAR	2.0L	FS	1998 - 2001	ABS/TCS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2.0L	RF-T	1997 - 2000	PCM	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2.0L	RF-T	1999 - 2000	ABS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2.5L	KL	1997 - 2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 - 2001	ABS/TCS	●	●	●	●	○
ATENZA	2.0L	PE	2013	PCM	●	●	●	●	0x00BB
ATENZA	2.2L	SH	2014	PCM	●	●	●	●	0x00BB
Atenza	2.5L	L5	2013	PCM	●	●	●	●	0x00BB

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ATENZA	2. 5L	PY	2013	PCM	●	●	●	●	0x00BB
Atenza	2. 5L	PY	2016	PCM	●	●	●	●	0x00BB
Atenza	3. 7L	CA	2013	PCM	●	●	●	●	0x00BB
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	ABS	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	BCM/GEM	●	●	●	●	0x0120
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	EATC	●	●	●	●	0x0020
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	EPS	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	IC	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	ICCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	LCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	MPM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	RCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	RKE	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	RVM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	TCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	4X4	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	ABS	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	BCM/GEM	●	●	●	●	0x0120
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	EATC	●	●	●	●	0x0020
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	EPS	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	IC	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	ICCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	LCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	MPM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	RCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	RKE	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	RVM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	TCM	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	4X4	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	ABS	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	ACU	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	AFS	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	BCM/GEM	●	●	●	●	0x0120
ATENZA / MAZDA6	1. 8L	L8	Other	BSML	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	BSMR	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	EATC	●	●	●	●	0x0020
ATENZA / MAZDA6	1. 8L	L8	Other	EPS	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	FFH	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ATENZA / MAZDA6	1. 8L	L8	Other	IC	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	ICCM	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	LCM	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	MPM	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
ATENZA / MAZDA6	1. 8L	L8	Other	RCM	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	RKE	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	RVM	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	Other	TCM	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	4X4	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	ABS	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	ACU	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	AFS	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	BCM/GEM	●	●	●	●	0x0120
ATENZA / MAZDA6	2. 0L	LF	Other	BSML	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	BSMR	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	EATC	●	●	●	●	0x0020
ATENZA / MAZDA6	2. 0L	LF	Other	EPS	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	FFH	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	IC	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	ICCM	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	LCM	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	MPM	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
ATENZA / MAZDA6	2. 0L	LF	Other	RCM	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	RKE	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	RVM	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	Other	TCM	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	4X4	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	ABS	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	ACU	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	AFS	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	BCM/GEM	●	●	●	●	0x0120
ATENZA / MAZDA6	2. 2L	R2_T	Other	BSML	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	BSMR	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	EATC	●	●	●	●	0x0020
ATENZA / MAZDA6	2. 2L	R2_T	Other	EPS	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	FFH	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	IC	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	ICCM	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	LCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ATENZA / MAZDA6	2. 2L	R2_T	Other	MPM	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
ATENZA / MAZDA6	2. 2L	R2_T	Other	RCM	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	RKE	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	RVM	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	Other	TCM	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	4X4	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	ABS	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	ACU	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	AFS	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	BCM/GEM	●	●	●	●	0x0120
ATENZA / MAZDA6	2. 5L	L5	Other	BSML	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	BSMR	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	EATC	●	●	●	●	0x0020
ATENZA / MAZDA6	2. 5L	L5	Other	EPS	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	FFH	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	IC	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	ICCM	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	LCM	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	MPM	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
ATENZA / MAZDA6	2. 5L	L5	Other	RCM	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	RKE	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	RVM	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	Other	TCM	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	4X4	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	ABS	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	ACU	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	AFS	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	BCM/GEM	●	●	●	●	0x0120
ATENZA / MAZDA6	3. 7L	CA	Other	BSML	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	BSMR	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	EATC	●	●	●	●	0x0020
ATENZA / MAZDA6	3. 7L	CA	Other	EPS	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	FFH	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	IC	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	ICCM	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	LCM	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	MPM	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
ATENZA / MAZDA6	3. 7L	CA	Other	RCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ATENZA / MAZDA6	3. 7L	CA	Other	RKE	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	RVM	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	TCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2002 - 2005	ABS/TCS	●	●	●	●	0x001E 0x0008
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2002 - 2005	IC	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2002 - 2005	LHID	●	●	●	●	0x0146
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2002 - 2005	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x00C5
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2002 - 2005	RCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2002 - 2005	RHID	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2005	GEM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2005	LCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2005	RKE	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2005	TCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	4X4	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	ABS/TCS	●	●	●	●	0x0008
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	IC	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	LHID	●	●	●	●	0x0146
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	RCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	RHID	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	TCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	GEM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	LCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	RKE	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	4X4	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	ABS/TCS	●	●	●	●	0x0008
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	GEM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	IC	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	LCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	LHID	●	●	●	●	0x0146
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	RCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	RHID	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	RKE	●	●	●	●	○
Axela	1. 6L	Z6	2014	PCM	●	●	●	●	0x00BB
Axela	2. 0L	PE	2014	PCM	●	●	●	●	0x00BB
Axela	2. 0L	PE	2015	PCM	●	●	●	●	0x00BB
Axela	2. 2L	SH	2015	PCM	●	●	●	●	0x00BB
Axela	2. 5L	PY	2015	PCM	●	●	●	●	0x00BB

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Axela (Hybrid)	2. 0L	PE	2014	PCM	●	●	●	●	0x00BB
Axela (Hybrid)	2. 2L	SH	2014	PCM	●	●	●	●	0x00BB
Axela (Hybrid)	2. 5L	PY	2014	PCM	●	●	●	●	0x00BB
AXELA / MAZDA3	1. 5L	ZY	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	Other	ACU	●	●	●	●	0x0017 0x003E
AXELA / MAZDA3	1. 5L	ZY	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	Other	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	1. 5L	ZY	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	Other	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	1. 5L	ZY	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	Other	IC	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	1. 5L	ZY	Other	RCM	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	Other	TCM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	ACU	●	●	●	●	0x0017 0x003E
AXELA / MAZDA3	1. 6L	Y6	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	1. 6L	Y6	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	1. 6L	Y6	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	FACM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	IC	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	1. 6L	Y6	Other	RCM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	Other	TCM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	Other	ABS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AXELA / MAZDA3	1. 6L	Z6	Other	ACU	●	●	●	●	0x0017 0x003E
AXELA / MAZDA3	1. 6L	Z6	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	Other	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	1. 6L	Z6	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	Other	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	1. 6L	Z6	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	Other	IC	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	1. 6L	Z6	Other	RCM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	Other	TCM	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	Other	ACU	●	●	●	●	0x0017 0x003E
AXELA / MAZDA3	2. 0L	LF	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	Other	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	2. 0L	LF	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	Other	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	2. 0L	LF	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	Other	IC	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	2. 0L	LF	Other	RCM	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	Other	TCM	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	Other	ABS	●	●	●	●	0x001E
AXELA / MAZDA3	2. 0L	PE	Other	ACU	●	●	●	●	0x0017 0x003E
AXELA / MAZDA3	2. 0L	PE	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	Other	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	2. 0L	PE	Other	BSML	●	●	●	●	0x0043
AXELA / MAZDA3	2. 0L	PE	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	Other	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	2. 0L	PE	Other	EPS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AXELA / MAZDA3	2.0L	PE	Other	IC	●	●	●	●	0x001A
AXELA / MAZDA3	2.0L	PE	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	PCM	●	●	●	○	0x0009 0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	2.0L	PE	Other	RCM	●	●	●	●	0x006D
AXELA / MAZDA3	2.0L	PE	Other	RKE	●	●	●	●	0x012C
AXELA / MAZDA3	2.0L	PE	Other	RVM	●	●	●	●	0x0072
AXELA / MAZDA3	2.2L	R2_T	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	ACU	●	●	●	●	0x0017 0x003E
AXELA / MAZDA3	2.2L	R2_T	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	2.2L	R2_T	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	2.2L	R2_T	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	FFH	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	IC	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	2.2L	R2_T	Other	RCM	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	TCM	●	●	●	●	○
AXELA / MAZDA3	2.3L	L3_T	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	2.3L	L3_T	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	2.3L	L3_T	Other	ACU	●	●	●	●	0x0017 0x003E
AXELA / MAZDA3	2.3L	L3_T	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	2.3L	L3_T	Other	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	2.3L	L3_T	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	2.3L	L3_T	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	2.3L	L3_T	Other	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	2.3L	L3_T	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	2.3L	L3_T	Other	IC	●	●	●	●	○
AXELA / MAZDA3	2.3L	L3_T	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	2.3L	L3_T	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	2.3L	L3_T	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	2.3L	L3_T	Other	RCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AXELA / MAZDA3	2. 3L	L3_T	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	TCM	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	ACU	●	●	●	●	0x0017 0x003E
AXELA / MAZDA3	2. 5L	L5	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	2. 5L	L5	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	2. 5L	L5	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	IC	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	2. 5L	L5	Other	RCM	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	TCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	ABS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	EATC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	EPS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	GEM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	IC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	RCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	RKE	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	ABS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	EATC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	EPS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	GEM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	IC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	RCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2006	4X4	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2006	RKE	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2006	TCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	ABS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	EATC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	EPS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	GEM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	IC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	RCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	RKE	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	TCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	ABS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	EATC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	GEM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	IC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	RCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	RKE	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	F6A-T	1998 - Other	ABS	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	F6A-T	1998 - Other	PCM	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	F6A-T	1998 - Other	RCM	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A	1998 - 2005	ABS	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A	1998 - 2005	PCM	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A	1998 - 2005	RCM	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998	TCM	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998 - Other	ABS	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998 - Other	PCM	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998 - Other	RCM	●	●	●	●	○
AZ-OFFROAD	660cc	K6A_T	1999 - 2004	TCM	●	●	●	●	○
AZ-OFFROAD	660cc	K6A_T	1999 - 2008	ABS	●	●	●	●	○
AZ-OFFROAD	660cc	K6A_T	1999 - 2008	PCM	●	●	●	●	○
AZ-OFFROAD	660cc	K6A_T	1999 - 2008	RCM	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A	2003 - 2006	ABS	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A	2003 - 2006	PCM	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A	2003 - 2006	RCM	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A_T	2003 - 2005	ABS	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A_T	2003 - 2005	PCM	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A_T	2003 - 2005	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	ABS	●	●	●	○	0x0213
AZ-WAGON / CAROL	660cc	K6A	Other	BCM#1	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	EATC	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	EPS	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	PCM	●	●	●	●	0x0201

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AZ-WAGON / CAROL	660cc	K6A	Other	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	TCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	Other	ABS	●	●	●	○	0x0213
AZ-WAGON / CAROL	660cc	K6A S	Other	BCM#1	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	Other	EATC	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	Other	EPS	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	Other	PCM	●	●	●	●	0x0201
AZ-WAGON / CAROL	660cc	K6A S	Other	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	Other	TCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	ABS	●	●	●	○	0x0213
AZ-WAGON / CAROL	660cc	K6A_T	Other	BCM#1	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	EATC	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	EPS	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	PCM	●	●	●	●	0x0201
AZ-WAGON / CAROL	660cc	K6A_T	Other	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	TCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A (A STOP)	Other	ABS	●	●	●	○	0x0212
AZ-WAGON / CAROL	660cc	R06A (A STOP)	Other	BCM#1	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A (A STOP)	Other	EATC	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A (A STOP)	Other	PCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A (A STOP)	Other	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	Other	ABS	●	●	●	○	0x0212
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	Other	BCM#1	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	Other	EATC	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	Other	PCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	Other	RCM	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	4X4	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	ABS	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	EATC	●	●	●	●	0x0020
Biante(Japan)	2. 0L	LF	2008	EPS	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	GEM	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	IC	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	LPSDM	●	●	●	●	0x0022
Biante(Japan)	2. 0L	LF	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082
Biante(Japan)	2. 0L	LF	2008	RCM	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	RKE	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	RPSDM	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	TCM	●	●	●	○	○
Biante(Japan)	2. 0L	PE	2012	ABS	●	●	●	●	0x001E
Biante(Japan)	2. 0L	PE	2012	EATC	●	●	●	●	0x0020
Biante(Japan)	2. 0L	PE	2012	EPS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Biante(Japan)	2.0L	PE	2012	GEM	●	●	●	●	○
Biante(Japan)	2.0L	PE	2012	LPSDM	●	●	●	●	0x0022
Biante(Japan)	2.0L	PE	2012	RCM	●	●	●	●	○
Biante(Japan)	2.0L	PE	2012	RKE	●	●	●	●	○
Biante(Japan)	2.0L	PE	2012	RPSDM	●	●	●	●	○
Biante(Japan)	2.3L	L3	2008	ABS	●	●	●	●	○
Biante(Japan)	2.3L	L3	2008	EATC	●	●	●	●	0x0020
Biante(Japan)	2.3L	L3	2008	EPS	●	●	●	●	○
Biante(Japan)	2.3L	L3	2008	GEM	●	●	●	●	○
Biante(Japan)	2.3L	L3	2008	IC	●	●	●	●	○
Biante(Japan)	2.3L	L3	2008	LPSDM	●	●	●	●	0x0022
Biante(Japan)	2.3L	L3	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082
Biante(Japan)	2.3L	L3	2008	RCM	●	●	●	●	○
Biante(Japan)	2.3L	L3	2008	RKE	●	●	●	●	○
Biante(Japan)	2.3L	L3	2008	RPSDM	●	●	●	●	○
Biante(Japan)	2.3L	L3	2008	TCM	●	●	●	○	○
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999	ABS	●	●	●	●	○
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 - 2002	PCM	●	●	●	●	○
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002	ABS/TCS	●	●	●	●	○
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002	TCM	●	●	●	●	○
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010	ABS	●	●	●	●	○
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010	IC	●	●	●	○	○
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010	PCM	●	●	●	●	0x0080 0x0081 0x0082
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010	TCM	●	●	●	●	○
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016	IC	●	●	●	●	0x012D
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016	PCM	●	●	●	●	0x0080 0x0081 0x0083
BONGO / BONGO BRAUNY / SPECTRON	2.0L	RF-T	2003 - 2007	ABS/TCS	●	●	●	●	○
BONGO / BONGO BRAUNY / SPECTRON	2.0L	RF-T	2003 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0055 0x005C
BONGO / BONGO BRAUNY / SPECTRON	2.0L	RF-T	2003 - 2007	TCM	●	●	●	●	○
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2	1999	ABS	●	●	●	●	○
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2	1999	PCM	●	●	●	●	○
BONGO BRAUNY / ECONOVAN / MAZDA E-SERIES	1.8L	F8	1999	ABS	●	●	●	●	○
BONGO BRAUNY / ECONOVAN / MAZDA E-SERIES	1.8L	F8	1999	PCM	●	●	●	●	○
BONGO BRAUNY / ECONOVAN / MAZDA E-SERIES	2.0L	FE	1997 - 1999	ABS	●	●	●	●	○
BONGO BRAUNY / ECONOVAN / MAZDA E-SERIES	2.0L	FE	1997 - 2002	PCM	●	●	●	●	○
BONGO BRAUNY / ECONOVAN / MAZDA E-SERIES	2.0L	FE	2002	ABS/TCS	●	●	●	●	○
BONGO BRAUNY / ECONOVAN / MAZDA E-SERIES	2.0L	FE	2002	TCM	●	●	●	●	○
BONGO BRAUNY / ECONOVAN / MAZDA E-SERIES	2.2L	R2	1999	ABS	●	●	●	●	○
BONGO BRAUNY / ECONOVAN / MAZDA E-SERIES	2.2L	R2	1999	PCM	●	●	●	●	○
BONGO BRAUNY / ECONOVAN / MAZDA E-SERIES	2.5L	WL	1999	ABS	●	●	●	●	○
BONGO BRAUNY / ECONOVAN / MAZDA E-SERIES	2.5L	WL	1999	PCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 2L	F2	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL	2001	PCM	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL	2001 - 2002	ABS	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL_T	2001 - 2005	ABS	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL_T	2001 - 2005	PCM	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 6L	G6	1996 - 1999	PCM	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 6L	G6	1999	ABS	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 9L	W9	2002	ABS	●	●	●	●	○
BT-50 / Ranger	2. 2L	F2	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2. 2L	F2	2007	PCM	●	●	●	●	○
BT-50 / Ranger	2. 2L	F2	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2. 5L	L5	2012	PCM	●	●	●	○	0x0080 0x0081 0x0082
BT-50 / Ranger	2. 5L	WL	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2. 5L	WL	2007	PCM	●	●	●	●	○
BT-50 / Ranger	2. 5L	WL	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2. 5L	WL-CD	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2. 5L	WL-CD	2007	PCM	●	●	●	●	0x0055 0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2. 5L	WL-CD	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2. 5L	WL-CD	2007	TCM	●	●	●	●	○
BT-50 / Ranger	2. 6L	G6	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2. 6L	G6	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082
BT-50 / Ranger	2. 6L	G6	2007	RCM	●	●	●	●	○
BT-50 / Ranger	3. 0L	WE-CD	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	3. 0L	WE-CD	2007	PCM	●	●	●	●	0x0055 0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	3. 0L	WE-CD	2007	RCM	●	●	●	●	○
BT-50 / Ranger	3. 0L	WE-CD	2007	TCM	●	●	●	●	○
BT-50 / Ranger	4. 0L	V6 SOHC	2007	ABS/TCS	●	●	●	●	0x0008
BT-50 / Ranger	4. 0L	V6 SOHC	2007	ESOF	●	●	●	●	○
BT-50 / Ranger	4. 0L	V6 SOHC	2007	PCM	●	●	●	●	0x0023 0x0024 0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	4. 0L	V6 SOHC	2007	RCM	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	1. 8L	FP	1997 - 1999	PCM	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	1. 8L	FP	1999	ABS	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2. 0L	FS	1997 - 1999	PCM	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2. 0L	FS	1999	ABS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2. 0L	RF	1997	PCM	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2. 5L	KL	1999	ABS	●	●	●	●	○
CAROL	660cc	F6A	1998 - Other	ABS	●	●	●	●	○
CAROL	660cc	F6A	1998 - Other	PCM	●	●	●	●	○
CAROL	660cc	F6A	1998 - Other	RCM	●	●	●	●	○
CAROL	660cc	K6A	1998 - Other	ABS	●	●	●	●	○
CAROL	660cc	K6A	1998 - Other	PCM	●	●	●	●	○
CAROL	660cc	K6A	1998 - Other	RCM	●	●	●	●	○
CAROL	660cc	K6A	1998 - Other	TCM	●	●	●	●	○
CAROL (2003 / 9 -)	660cc	K6A	2003 - 2004	PCM	●	●	●	●	○
CAROL (2003 / 9 -)	660cc	K6A	2003 - Other	ABS	●	●	●	●	○
CAROL (2003 / 9 -)	660cc	K6A	2003 - Other	RCM	●	●	●	●	○
CAROL (HB24S)	660cc	K6A	2004 - 2005	ABS	●	●	●	●	○
CAROL (HB24S)	660cc	K6A	2004 - 2005	PCM	●	●	●	●	○
CAROL (HB24S)	660cc	K6A	2004 - 2005	RCM	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	K6A	Other	ABS	●	●	●	○	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	K6A	Other	PCM	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	K6A	Other	RCM	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A	Other	ABS	●	●	●	○	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A	Other	EPS	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A	Other	PCM	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A	Other	RCM	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A (A STOP)	Other	ABS	●	●	●	○	0x0212
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A (A STOP)	Other	BCM#1	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A (A STOP)	Other	PCM	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A (A STOP)	Other	RCM	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	ABS	●	●	●	○	0x0212
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	BCM#1	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	EATC	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	PCM	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	RCM	●	●	●	●	○
CX-3	1. 5L	S5	2016	PCM	●	●	●	●	0x00BB
CX-3	2. 0L	PE	2016	PCM	●	●	●	●	0x00BB
CX-5	2. 0L	PE	2014	PCM	●	●	●	●	0x00BB
CX-5	2. 0L	PE	2016	PCM	●	●	●	●	0x00BB
CX-5	2. 0L	PE	Other	BSML	●	●	●	●	0x0043
CX-5	2. 0L	PE	Other	BSMR	●	●	●	○	○
CX-5	2. 0L	PE	Other	RVM	●	●	●	○	0x0072
CX-5	2. 2L	SH	2014	PCM	●	●	●	●	0x00BB
CX-5	2. 2L	SH	2015	PCM	●	●	●	●	0x00BB
CX-5	2. 2L	SH	Other	BSML	●	●	●	●	0x0043

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
CX-5	2. 2L	SH	Other	BSMR	●	●	●	○	○
CX-5	2. 2L	SH	Other	RVM	●	●	●	○	0x0072
CX-5	2. 5L	PY	2014	PCM	●	●	●	●	0x00BB
CX-5	2. 5L	PY	2016	PCM	●	●	●	●	0x00BB
CX-5	2. 5L	PY	Other	BSML	●	●	●	●	○
CX-5	2. 5L	PY	Other	BSMR	●	●	●	○	○
CX-5	2. 5L	PY	Other	RVM	●	●	●	○	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	4X4	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	ABS	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	ACU	●	●	●	●	0x0017 0x003E
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	AM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	EATC	●	●	●	●	0x0020
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	EPS	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	FFH	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	GEM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	IC	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	LCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	MID#1	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	PCM	●	●	●	●	0x0055 0x005C 0x0080 0x0081 0x0082 0x0083
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RKE	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RVM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	SCR CU	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	4X4	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	ABS	●	●	●	●	0x0008
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	AM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	EATC	●	●	●	●	0x0020
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	GEM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	IC	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	LCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	RCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	RKE	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	TCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	ACU	●	●	●	●	0x0017 0x003E
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	MID#1	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	RVM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	4X4	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	ABS	●	●	●	●	0x0008
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	AM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 - 2009	EATC	●	●	●	●	0x0020
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 - 2009	GEM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 - 2009	IC	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 - 2009	ICCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 - 2009	LCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 - 2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 - 2009	RCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 - 2009	RKE	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 - 2009	TCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009	ACU	●	●	●	●	0x0017 0x003E
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009	MID#1	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009	RVM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	4X4	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	ABS	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	ACU	●	●	●	●	0x0017 0x003E
CX-7 (Japan / General Specs.)	2.5L	L5	2009	AM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	EATC	●	●	●	●	0x0020
CX-7 (Japan / General Specs.)	2.5L	L5	2009	GEM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	IC	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	ICCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	LCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	MID#1	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
CX-7 (Japan / General Specs.)	2.5L	L5	2009	RCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	RKE	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	RVM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	TCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	4X4	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	ABS	●	●	●	●	0x0008
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	AM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	EATC	●	●	●	●	0x0020
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	GEM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	IC	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	RCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	RKE	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	TCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2010	ACU	●	●	●	●	0x0017 0x003E
CX-7 (North America / General Specs.)	2.3L	L3_T	2010	BSML	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
CX-7 (North America / General Specs.)	2.3L	L3_T	2010	BSMR	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2010	LCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2010	MID#1	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	4X4	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	ABS	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	ACU	●	●	●	●	0x0017 0x003E
CX-7 (North America / General Specs.)	2.5L	L5	2010	AM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	BSML	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	BSMR	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	EATC	●	●	●	●	0x0020
CX-7 (North America / General Specs.)	2.5L	L5	2010	GEM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	IC	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	LCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	MID#1	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
CX-7 (North America / General Specs.)	2.5L	L5	2010	RCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	RKE	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	TCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	4X4	●	●	●	●	○
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	ABS	●	●	●	●	0x0008
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	AM	●	●	●	●	0x0005
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	GEM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	IC	●	●	●	●	0x0005 0x001A
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	LCM	●	●	○	○	○
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	LTM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	RCM	●	●	●	●	0x0005
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	RKE	●	●	●	●	0x0005
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	TCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	4X4	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	ABS	●	●	●	●	0x0008
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	AM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	BSML	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	BSMR	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	GEM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	IC	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	LCM	●	●	○	○	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	LTM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	RCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	RKE	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	TCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2010 - 2011	ACU	●	●	●	●	0x0017 0x003E
CX-9 (North America / General Specs.)	3.7L	CA	2010 - 2011	DSM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2011	VSM	●	●	●	○	○
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	4X4	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	BCM/GEM	●	●	●	●	0x0120
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	EPS	●	●	●	●	0x005B
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	BCM/GEM	●	●	●	●	0x0120
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	EPS	●	●	●	●	0x005B
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	4X4	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	BCM/GEM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	EATC	●	●	●	●	0x0020
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	EPS	●	●	●	●	0x005B
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	VSM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	4X4	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	BCM/GEM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	EATC	●	●	●	●	0x0020
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	EPS	●	●	●	●	0x005B
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	IC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	VSM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	4X4	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	BCM/GEM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	EATC	●	●	●	●	0x0020
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	EPS	●	●	●	●	0x005B
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	VSM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	4X4	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	BCM/GEM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	EATC	●	●	●	●	0x0020
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	EPS	●	●	●	●	0x005B
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	VSM	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	2002 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.3L	ZJ	2002 - Other	4X4	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.3L	ZJ	2002 - Other	ABS/TCS	●	●	●	●	0x001E
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.3L	ZJ	2002 - Other	IC	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.3L	ZJ	2002 - Other	RCM	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.3L	ZJ	2002 - Other	RKE	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.3L	ZJ	2005	EPS	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.3L	ZJ	2005	LCM	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2002 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.5L	ZY	2002 - Other	4X4	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.5L	ZY	2002 - Other	ABS/TCS	●	●	●	●	0x001E
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.5L	ZY	2002 - Other	IC	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.5L	ZY	2002 - Other	RCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.5L	ZY	2002 - Other	RKE	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.5L	ZY	2005	EPS	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1.5L	ZY	2005	LCM	●	●	●	●	○
DEMIO / 121 DEMIO / 121	1.3L	B3	1996 - 2000	ABS	●	●	●	●	○
DEMIO / 121 DEMIO / 121	1.3L	B3	1996 - 2000	PCM	●	●	●	●	○
DEMIO / 121 DEMIO / 121	1.3L	B3	2000	ABS/TCS	●	●	●	●	○
DEMIO / 121 DEMIO / 121	1.5L	B5	1996 - 2000	ABS	●	●	●	●	○
DEMIO / 121 DEMIO / 121	1.5L	B5	2000	ABS/TCS	●	●	●	●	○
DEMIO / 121 DEMIO / 121	1.5L	B5	2000	PCM	●	●	●	●	○
DEMIO / FESTIVA MINI WAGON	1.3L	B3	1996 - 1999	ABS	●	●	●	●	○
DEMIO / FESTIVA MINI WAGON	1.3L	B3	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
DEMIO / FESTIVA MINI WAGON	1.3L	B3	2000	ABS/TCS	●	●	●	●	○
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1996 - 1999	ABS	●	●	●	●	○
Escape / Tribute (2006/4 -)	2.3L	L3	2006	ABS	●	●	●	●	○
Escape / Tribute (2006/4 -)	2.3L	L3	2006	GEM	●	●	●	●	○
Escape / Tribute (2006/4 -)	2.3L	L3	2006	IC	●	●	●	●	○
Escape / Tribute (2006/4 -)	2.3L	L3	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082
Escape / Tribute (2006/4 -)	2.3L	L3	2006	RCM	●	●	●	●	○
Escape / Tribute (2006/3)	2.3L	L3	2003	ABS	●	●	●	●	○
Escape / Tribute (2006/3)	2.3L	L3	2003	GEM	●	●	●	●	○
Escape / Tribute (2006/3)	2.3L	L3	2003	IC	●	●	●	●	○
Escape / Tribute (2006/3)	2.3L	L3	2003	PCM	●	●	●	●	0x0080 0x0081 0x0082
Escape / Tribute (2006/3)	2.3L	L3	2003	RCM	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	4X4	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	ABS	●	●	●	●	0x0005 0x0008 0x0012
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	ACM	●	●	●	●	0x0016 0x0017 0x0018
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	FDIM	●	●	●	●	0xF05A
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05B 0xF05C 0xF05E 0xF05F
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	IC	●	●	●	●	0x0005 0x0009 0xF027 0xF04B 0xF04C 0xF054
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	OCSM	●	●	●	○	0x000C 0x006D
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	PAM	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	PSCM	●	●	○	○	0x0005 0x0053
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	RCM	●	●	●	●	0x0005 0xF022 0xF05D

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	SDARS	●	●	●	●	0x0019
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	4X4	●	●	●	●	○
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	ABS	●	●	●	●	0x0005 0x0012 0x0053
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	ACM	●	●	●	●	0x0005 0x0016 0x0017 0x0018 0xF05A
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	BCM	●	●	●	●	0x006E
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	FDIM	●	●	●	●	0x0005 0xF05A
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05B 0xF05C 0xF05E 0xF05F
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	IC	●	●	●	●	0x0005 0x0009 0xF027 0xF04B 0xF04C 0xF054
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	OCSM	●	●	●	○	0x000C
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PAM	●	●	●	●	○
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PSCM	●	●	○	○	0x0005 0x0053
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	RCM	●	●	●	●	0x0005 0xF022 0xF05D
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	SDARS	●	●	●	●	0x0019
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	TCM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009	SDARS	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	4X4	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	ABS	●	●	●	●	0x0008 0x0012 0x0053
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	ACM	●	●	●	●	0x0017 0x0018
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	APIM	●	●	●	●	0x0019 0x001C
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	FDIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	GEM / SJB	●	●	●	●	0x000F 0x0042
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	IC	●	●	●	●	0x0009
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	OCSM	●	●	●	○	0x000C 0x006D
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	PAM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	PCM	●	●	●	●	0x0024 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0023 0x0038
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	PSCM	●	●	○	○	0x0053 0x00CC
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	RCM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2010 - 2012	GPSM	●	●	●	○	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009	SDARS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	4X4	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	ABS	●	●	●	●	0x0053 0x0074
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	ACM	●	●	●	●	0x0017 0x0018
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	APIM	●	●	●	●	0x0019 0x001C
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	BCM	●	●	●	●	0x006E
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	FDIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	GEM / SJB	●	●	●	●	0x000F 0x0042
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	IC	●	●	●	●	0x0009
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	OCSM	●	●	●	○	0x000C 0x006D
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	PAM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	PCM	●	●	●	●	0x0024 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0028 0x0031
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	PSCM	●	●	○	○	0x0053 0x00CC
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	RCM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	TCM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2010 - 2012	ACCM#2	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2010 - 2012	GPSM	●	●	●	○	○
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2009	SDARS	●	●	●	●	0x0019 0x0005
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	4X4	●	●	●	●	○
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	ABS	●	●	●	●	0x0005 0x0008 0x0012
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	ACM	●	●	●	●	0x0016 0x0017 0x0018
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	FDIM	●	●	●	●	0xF05A 0x0005 0xF062
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05B 0xF05C 0xF05E 0xF05F
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	HVAC	●	●	●	●	0x0005
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	IC	●	●	●	●	0x0009 0xF027 0xF04B 0xF04C 0xF054 0x0005
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	OCSM	●	●	●	○	0x000C 0x006D
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	PAM	●	●	●	●	○
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	PSCM	●	●	○	○	0x0005 0x0053 0x00CC
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	RCM	●	●	●	●	0xF022 0xF05D 0x0005
Escape / Tribute / Mariner	3. 0L	4V	2009 - 2012	APIM	●	●	●	●	0x001C 0x0019
Escape / Tribute / Mariner	3. 0L	4V	2010 - 2012	GPSM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape / Tribute / Mariner	Other	Other	2012	4X4	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	ABS	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	ACM	●	●	●	○	○
Escape / Tribute / Mariner	Other	Other	2012	APIM	●	●	●	○	○
Escape / Tribute / Mariner	Other	Other	2012	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	FDIM	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	GEM / SJB	●	●	●	●	0x0042
Escape / Tribute / Mariner	Other	Other	2012	GPSM	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	IC	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	OCSM	●	●	●	○	○
Escape / Tribute / Mariner	Other	Other	2012	PAM	●	●	●	○	○
Escape / Tribute / Mariner	Other	Other	2012	PSCM	●	●	○	○	○
Escape / Tribute / Mariner	Other	Other	2012	RCM	●	●	●	●	○
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	ABS/TCS	●	●	●	●	0x0008
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	GEM	●	●	●	●	0x000A
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	IC	●	●	●	●	○
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	RCM	●	●	●	●	○
Escape / Tribute / Maverick	2. 0L	Zetec	2003 - 2004	PAM	●	●	●	●	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	4X4	●	●	●	●	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	ABS	●	●	●	●	0x0008
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	GEM	●	●	●	●	0x000A 0x000F
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	IC	●	●	●	●	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	PAM	●	●	●	●	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	RCM	●	●	●	●	0x000C
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2004	ABS/TCS	●	●	●	●	0x0008
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2007	GEM	●	●	●	●	0x000A 0x000F 0xF042 0xF04E 0xF04F 0xF050 0xF051 0xF056 0xF057
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2007	IC	●	●	●	●	0x0005 0xF040 0xF043 0xF04D 0xF052 0xF053
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2007	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2007	RCM	●	●	●	●	0x000C 0x006D

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape / Tribute / Maverick	3.0L	4V	2003 - 2007	PAM	●	●	●	●	○
Escape / Tribute / Maverick	3.0L	4V	2006 - 2007	4X4	●	●	●	●	○
Escape / Tribute / Maverick	3.0L	4V	2006 - 2007	ABS	●	●	●	●	0x0005 0x0008
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013	ABS	●	●	●	●	0x0012
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013	ACM	●	●	●	●	0x0017
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013	BCM#1	●	●	●	●	0x000F 0x00D5 0x0101
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013	DSM	●	●	●	●	0x00F2
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013	FCDIM	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013	IPC	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013	IPM-B	●	●	●	○	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013	OCSM	●	●	●	●	0x000C
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013	RGTM	●	●	●	○	0x013D
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	APIM	●	●	●	●	0x0019
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	DDM	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	DSP	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	FCIM	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	GPSM	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	HCM	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	HVAC	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	PAM	●	●	○	○	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	PDM	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	PSCM	●	●	●	○	0x00CB 0x00CC
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	RCM	●	●	●	○	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	RFA	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	SASM	●	●	●	○	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	SOD-L	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	SOD-R	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	TRM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013	ABS	●	●	●	●	0x0012
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013	ACM	●	●	●	●	0x0017
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013	BCM#1	●	●	●	●	0x00D5 0x0101
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013	DSM	●	●	●	●	0x00F2
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013	FCDIM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013	IPC	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013	IPM-B	●	●	●	○	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013	OCSM	●	●	●	●	0x000C
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013	RGTM	●	●	●	○	0x013D
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	APIM	●	●	●	●	0x0019
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	DDM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	DSP	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	FCIM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	GPSM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	HCM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	HVAC	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	PAM	●	●	○	○	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	PDM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	PSCM	●	●	●	○	0x00CB 0x00CC
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	RCM	●	●	●	○	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	RFA	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	SASM	●	●	●	○	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	SOD-L	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	SOD-R	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct	2013 - 2014	TRM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	ABS	●	●	●	●	0x0012
Escape/Kuga	2.5L	IVCT	2013	ACM	●	●	●	●	0x0017
Escape/Kuga	2.5L	IVCT	2013	BCM#1	●	●	●	●	0x00D5 0x0101
Escape/Kuga	2.5L	IVCT	2013	DSM	●	●	●	●	0x00F2
Escape/Kuga	2.5L	IVCT	2013	FCDIM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	IPC	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	IPM-B	●	●	●	○	○
Escape/Kuga	2.5L	IVCT	2013	OCSM	●	●	●	●	0x000C
Escape/Kuga	2.5L	IVCT	2013	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082
Escape/Kuga	2.5L	IVCT	2013	RGTM	●	●	●	○	0x013D
Escape/Kuga	2.5L	IVCT	2013 - 2014	APIM	●	●	●	●	0x0019
Escape/Kuga	2.5L	IVCT	2013 - 2014	DDM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	DSP	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	FCIM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	GPSM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	HCM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	HVAC	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	PAM	●	●	○	○	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	PDM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	PSCM	●	●	●	○	0x00CB 0x00CC
Escape/Kuga	2.5L	IVCT	2013 - 2014	RCM	●	●	●	○	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	RFA	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	SASM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape/Kuga	2. 5L	IVCT	2013 - 2014	SOD-L	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013 - 2014	SOD-R	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013 - 2014	TRM	●	●	●	●	○
FAMILIA / LASER	1. 3L	B3	1998	ABS	●	●	●	●	○
FAMILIA / LASER	1. 3L	B3	1998	PCM	●	●	●	●	○
FAMILIA / LASER	1. 5L	ZL	1998 - 2000	ABS	●	●	●	●	○
FAMILIA / LASER	1. 5L	ZL	1998 - 2002	PCM	●	●	●	●	○
FAMILIA / LASER	1. 5L	ZL	2000 - 2002	ABS/TCS	●	●	●	●	○
FAMILIA / LASER	1. 8L	FP	1998	ABS	●	●	●	●	○
FAMILIA / LASER	1. 8L	FP	1998	PCM	●	●	●	●	○
FAMILIA / LASER	2. 0L	FS	1999 - 2000	ABS	●	●	●	●	○
FAMILIA / LASER	2. 0L	FS	1999 - 2002	PCM	●	●	●	●	○
FAMILIA / LASER	2. 0L	FS	2002	ABS/TCS	●	●	●	●	○
FAMILIA / LASER	2. 0L	RF	1998	ABS	●	●	●	●	○
FAMILIA / LASER	2. 0L	RF	1998	PCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	ABS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	EPS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	GEM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	IC	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	IPDM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	PCM	●	●	●	●	0x0150
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	RCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	ABS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	EPS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	GEM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	IC	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	IPDM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	PCM	●	●	●	●	0x0150
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	RCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	ABS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	EPS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	GEM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	IC	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	IPDM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	PCM	●	●	●	●	0x0150
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	RCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	ABS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	EPS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	GEM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	IC	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	IPDM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	PCM	●	●	●	●	0x0150
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	RCM	●	●	●	●	○
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 3L	QG13	1999 - 2002	PCM	●	●	●	●	0x0150
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 3L	QG13	2002	ABS	●	●	●	●	○
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 5L	QG15	1999 - 2002	PCM	●	●	●	●	0x0150
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 5L	QG15	2002	ABS	●	●	●	●	○
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 8L	QG18	1999 - 2002	PCM	●	●	●	●	0x0150
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1996 - 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1996 - 1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1996 - 1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1996 - 1999	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0023
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1996 - 2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1996 - 2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1996 - 2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1996 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1999 - 2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1999 - 2000	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	2000	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1996 - 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1996 - 1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1996 - 1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1996 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	PCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996 - 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996 - 1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996 - 1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001	PCM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	FIP	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996 - Other	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996 - Other	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996 - Other	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996 - Other	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996 - Other	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996 - Other	PCM	○	○	●	○	○
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 - 1994	ABS/TCS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta / Mazda 121 / Bantam	1. 8L	Zetec	1992 - 1994	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Zetec	1992 - 1994	HEC	●	●	●	●	○
FRIENDEE / FREDA / BONGO FRIENDEE	2. 0L	FE	1997 - 2002	PCM	●	●	●	●	○
FRIENDEE / FREDA / BONGO FRIENDEE	2. 0L	FE	2002	TCM	●	●	●	●	○
FRIENDEE / FREDA / BONGO FRIENDEE	2. 5L	WL_T	1999	PCM	●	●	●	●	○
LAPUTA	660cc	F6A-T	1998	TCM	●	●	●	●	○
LAPUTA	660cc	F6A-T	1998 - Other	ABS	●	●	●	●	○
LAPUTA	660cc	F6A-T	1998 - Other	PCM	●	●	●	●	○
LAPUTA	660cc	F6A-T	1998 - Other	RCM	●	●	●	●	○
LAPUTA	660cc	K6A	2000 - Other	ABS	●	●	●	●	○
LAPUTA	660cc	K6A	2000 - Other	PCM	●	●	●	●	○
LAPUTA	660cc	K6A	2000 - Other	RCM	●	●	●	●	○
LAPUTA	660cc	K6A_T	1999 - Other	ABS	●	●	●	●	○
LAPUTA	660cc	K6A_T	1999 - Other	PCM	●	●	●	●	○
LAPUTA	660cc	K6A_T	1999 - Other	RCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 3L	B3	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 3L	B3	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
LASER / 323 / TIERRA	1. 3L	B3	2000	ABS/TCS	●	●	●	●	○
LASER / 323 / TIERRA	1. 3L	Other	Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 5L	Other	Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 5L	Z5	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 5L	Z5	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
LASER / 323 / TIERRA	1. 5L	ZL	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 5L	ZL	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
LASER / 323 / TIERRA	1. 6L	B6	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 6L	B6	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
LASER / 323 / TIERRA	1. 6L	Other	Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 6L	ZM	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 6L	ZM	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
LASER / 323 / TIERRA	1. 6L	ZM	2000	ABS/TCS	●	●	●	●	○
LASER / 323 / TIERRA	1. 8L	BP	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 8L	BP	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
LASER / 323 / TIERRA	1. 8L	FP	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 8L	FP	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
LASER / 323 / TIERRA	1. 8L	Other	Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	FS	2000	ABS/TCS	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	FS	2000 - 2001	ABS	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	FS	2000 - 2001	PCM	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	RF	1998	PCM	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	RF	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	RF-T	1998 - 2000	PCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
LASER / 323 / TIERRA	2.0L	RF-T	2000	ABS	●	●	●	●	○
MARVIE	2.5L	G5	1996	PCM	●	●	●	●	○
MAZDA 929	3.0L	JE	1997	PCM	●	●	●	●	○
MAZDA2 (China)	1.3L	ZJ	2007	ABS	●	●	●	●	○
MAZDA2 (China)	1.3L	ZJ	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA2 (China)	1.3L	ZJ	2007	EPS	●	●	●	●	0x005B
MAZDA2 (China)	1.3L	ZJ	2007	IC	●	●	●	●	○
MAZDA2 (China)	1.3L	ZJ	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA2 (China)	1.3L	ZJ	2007	RCM	●	●	●	●	○
MAZDA2 (China)	1.3L	ZJ	2007	RKE	●	●	●	●	○
MAZDA2 (China)	1.5L	ZY	2007	ABS	●	●	●	●	○
MAZDA2 (China)	1.5L	ZY	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA2 (China)	1.5L	ZY	2007	EPS	●	●	●	●	0x005B
MAZDA2 (China)	1.5L	ZY	2007	IC	●	●	●	●	○
MAZDA2 (China)	1.5L	ZY	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA2 (China)	1.5L	ZY	2007	RCM	●	●	●	●	○
MAZDA2 (China)	1.5L	ZY	2007	RKE	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.25L	MZI	2002 - 2006	ABS/TCS	●	●	●	●	0x0008
MAZDA2 (EURO STG3/4 Specs)	1.25L	MZI	2002 - 2006	IC	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.25L	MZI	2002 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082
MAZDA2 (EURO STG3/4 Specs)	1.25L	MZI	2002 - 2006	RCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	ABS/TCS	●	●	●	●	0x0008
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	IC	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	RCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	TCM	●	●	●	●	0x003F
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	ABS/TCS	●	●	●	●	0x0008
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	IC	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	RCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	TCM	●	●	●	●	0x003F
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002	TCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002 - 2006	ABS/TCS	●	●	●	●	0x0008
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002 - 2006	IC	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002 - 2006	RCM	●	●	●	●	○
MAZDA2 (Europe)	1.3L	ZJ	2007	ABS	●	●	●	●	○
MAZDA2 (Europe)	1.3L	ZJ	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA2 (Europe)	1.3L	ZJ	2007	EPS	●	●	●	●	0x005B
MAZDA2 (Europe)	1.3L	ZJ	2007	IC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA2 (Europe)	1. 3L	ZJ	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA2 (Europe)	1. 3L	ZJ	2007	RCM	●	●	●	●	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	RKE	●	●	●	●	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	VSM	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	ABS	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA2 (Europe)	1. 4L	Y4	2007	EPS	●	●	●	●	0x005B
MAZDA2 (Europe)	1. 4L	Y4	2007	IC	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082
MAZDA2 (Europe)	1. 4L	Y4	2007	RCM	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	RKE	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	VSM	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	ABS	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA2 (Europe)	1. 5L	ZY	2007	EPS	●	●	●	●	0x005B
MAZDA2 (Europe)	1. 5L	ZY	2007	IC	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA2 (Europe)	1. 5L	ZY	2007	RCM	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	RKE	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	VSM	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	ABS	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	BCM/GEM	●	●	●	●	0x0120
MAZDA2 (Europe)	1. 6L	Y6	2008	EPS	●	●	●	●	0x005B
MAZDA2 (Europe)	1. 6L	Y6	2008	IC	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082
MAZDA2 (Europe)	1. 6L	Y6	2008	RCM	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	RKE	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	VSM	●	●	●	●	○
Mazda3	1. 6L	Z6	2014	PCM	●	●	●	●	0x00BB
MAZDA3 (China / General)	1. 6L	Z6	2007	ABS	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	EATC	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	GEM	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	IC	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (China / General)	1. 6L	Z6	2007	RCM	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	RKE	●	●	●	●	○
MAZDA3 (China / General)	2. 0L	LF	2007	ABS	●	●	●	●	○
MAZDA3 (China / General)	2. 0L	LF	2007	EATC	●	●	●	●	○
MAZDA3 (China / General)	2. 0L	LF	2007	EPS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA3 (China / General)	2.0L	LF	2007	GEM	●	●	●	●	○
MAZDA3 (China / General)	2.0L	LF	2007	IC	●	●	●	●	○
MAZDA3 (China / General)	2.0L	LF	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (China / General)	2.0L	LF	2007	RCM	●	●	●	●	○
MAZDA3 (China / General)	2.0L	LF	2007	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003 - 2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003 - 2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	EPS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	FACM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003 - 2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003 - 2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	EPS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	FFH	●	●	●	●	0x002D 0x002F

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	PCM	●	●	●	●	0x0055 0x005C 0x0080 0x0081 0x0082 0x0083
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	ABS	●	●	●	●	0x001E
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	EPS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	IC	●	●	●	●	0x012D
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201 0x0009
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	RKE	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (North America / General)	1.6L	Z6	2006	RKE	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006	TPM	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006 - 2012	ABS	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006 - 2012	GEM	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006 - 2012	IC	●	●	●	●	0x012D
MAZDA3 (North America / General)	1.6L	Z6	2006 - 2012	RCM	●	●	●	●	0x006D
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	ABS	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	EPS	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	GEM	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	IC	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	RCM	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	TPM	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2006	EATC	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2006	RKE	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	ABS	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	EATC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	EPS	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	GEM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	IC	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	RCM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	TPM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2006	RKE	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2006 - 2009	TCM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	ABS	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	EATC	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	GEM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	IC	●	●	●	○	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	RCM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	TPM	●	●	●	●	○
MAZDA3 / AXELA	1.5L	P5	Other	BSML	●	●	●	●	0x0043
MAZDA3 / AXELA	1.5L	P5	Other	BSMR	●	●	●	○	○
MAZDA3 / AXELA	1.5L	P5	Other	RVM	●	●	●	○	0x0072
MAZDA3 / AXELA	1.6L	Z6	Other	BSML	●	●	●	●	0x0043
MAZDA3 / AXELA	1.6L	Z6	Other	BSMR	●	●	●	○	○
MAZDA3 / AXELA	1.6L	Z6	Other	RVM	●	●	●	○	0x0072
MAZDA3 / AXELA	2.0L	PE	Other	BSML	●	●	●	●	0x0043
MAZDA3 / AXELA	2.0L	PE	Other	BSMR	●	●	●	○	○
MAZDA3 / AXELA	2.0L	PE	Other	RVM	●	●	●	○	0x0072
MAZDA3 / AXELA	2.2L	SH	Other	BSML	●	●	●	●	0x0043
MAZDA3 / AXELA	2.2L	SH	Other	BSMR	●	●	●	○	○
MAZDA3 / AXELA	2.2L	SH	Other	RVM	●	●	●	○	0x0072
MAZDA3 / AXELA	2.5L	PY	Other	BSML	●	●	●	●	0x0043
MAZDA3 / AXELA	2.5L	PY	Other	BSMR	●	●	●	○	○
MAZDA3 / AXELA	2.5L	PY	Other	RVM	●	●	●	○	0x0072
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1.8L	L8	2005	GEM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1.8L	L8	2005 - 2007	ABS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1.8L	L8	2005 - 2007	EATC	●	●	●	●	0x0020
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1.8L	L8	2005 - 2007	EPS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1.8L	L8	2005 - 2007	IC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1.8L	L8	2005 - 2007	LPSDM	●	●	●	●	0x0022
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1.8L	L8	2005 - 2007	RCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1.8L	L8	2005 - 2007	RKE	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1. 8L	L8	2005 - 2007	RPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1. 8L	L8	2007	TCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	ABS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	EATC	●	●	●	●	0x0020
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	EPS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	GEM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	IC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2. 0L	LF	2005 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	RCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	RKE	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2007	LPSDM	●	●	●	●	0x0022
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2007	RPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2007	TCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	ABS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	EATC	●	●	●	●	0x0020
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	FFH	●	●	●	●	0x002D 0x002F
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	GEM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	IC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2. 0L	RF-T	2005 - 2007	PCM	●	●	●	●	0x0055 0x005C 0x0080 0x0081 0x0082 0x0083
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	RCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	RKE	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2007	LPSDM	●	●	●	●	0x0022
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2007	RPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2007	TCM	●	●	●	●	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	ABS	●	●	●	●	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	EATC	●	●	●	●	0x0020
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	EPS	●	●	●	●	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	GEM	●	●	●	●	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	IC	●	●	●	●	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	RCM	●	●	●	●	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	TPM	●	●	●	●	○
MAZDA5 (North America Specs.)	2. 3L	L3	2008 - 2010	TCM	●	●	●	●	○
MAZDA6 (China)	2. 0L	LF	2007	ABS	●	●	●	●	○
MAZDA6 (China)	2. 0L	LF	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (China)	2. 0L	LF	2007	EATC	●	●	●	●	0x0020
MAZDA6 (China)	2. 0L	LF	2007	EPS	●	●	●	●	○
MAZDA6 (China)	2. 0L	LF	2007	IC	●	●	●	●	○
MAZDA6 (China)	2. 0L	LF	2007	LCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (China)	2.0L	LF	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (China)	2.0L	LF	2007	RCM	●	●	●	●	○
MAZDA6 (China)	2.0L	LF	2007	RKE	●	●	●	●	○
MAZDA6 (China)	2.0L	LF	2007	TCM	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	ABS	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (China)	2.5L	L5	2007	EATC	●	●	●	●	0x0020
MAZDA6 (China)	2.5L	L5	2007	EPS	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	IC	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	LCM	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (China)	2.5L	L5	2007	RCM	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	RKE	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	TCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2002 - 2005	ABS/TCS	●	●	●	●	0x001E 0x0008
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2002 - 2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2002 - 2005	LHID	●	●	●	●	0x0146
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2002 - 2005	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2002 - 2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2002 - 2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2005	RKE	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2002 - 2005	ABS/TCS	●	●	●	●	0x0008
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2002 - 2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2002 - 2005	LHID	●	●	●	●	0x0146
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2002 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2002 - 2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2002 - 2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005	RKE	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005	TCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	ABS/TCS	●	●	●	●	0x0008
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	FFH	●	●	●	●	0x0131
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	LHID	●	●	●	●	0x0146
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	PCM	●	●	●	●	0x0055 0x0080 0x0081 0x0082 0x0083 0x005C

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2005	RKE	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002	4X4	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	ABS/TCS	●	●	●	●	0x0008 0x001E
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	LHID	●	●	●	●	0x0146
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201 0x0009
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	TCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	RKE	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	4X4	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	ABS/TCS	●	●	●	●	0x0008
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	LHID	●	●	●	●	0x0146
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (Europe and General)	1.8L	L8	2007	EATC	●	●	●	●	0x0020
MAZDA6 (Europe and General)	1.8L	L8	2007	EPS	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	IC	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	LCM	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (Europe and General)	1.8L	L8	2007	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	TCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	BCM/GEM	●	●	●	●	0x0120

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (Europe and General)	2.0L	LF	2007	EATC	●	●	●	●	0x0020
MAZDA6 (Europe and General)	2.0L	LF	2007	EPS	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	IC	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	LCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (Europe and General)	2.0L	LF	2007	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	TCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (Europe and General)	2.0L	RF-T	2007	EATC	●	●	●	●	0x0020
MAZDA6 (Europe and General)	2.0L	RF-T	2007	EPS	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	FFH	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	IC	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	LCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	PCM	●	●	●	●	0x0055 0x005C 0x0080 0x0081 0x0082 0x0083
MAZDA6 (Europe and General)	2.0L	RF-T	2007	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	TCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	EATC	●	●	●	●	0x0020
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	EPS	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	FFH	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	IC	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	LCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	PCM	●	●	●	●	0x0055 0x005C 0x0080 0x0081 0x0082 0x0083
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	TCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.5L	L5	2007	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	2.5L	L5	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (Europe and General)	2.5L	L5	2007	EATC	●	●	●	●	0x0020
MAZDA6 (Europe and General)	2.5L	L5	2007	EPS	●	●	●	●	○
MAZDA6 (Europe and General)	2.5L	L5	2007	IC	●	●	●	●	○
MAZDA6 (Europe and General)	2.5L	L5	2007	LCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (Europe and General)	2.5L	L5	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (Europe and General)	2.5L	L5	2007	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.5L	L5	2007	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	2.5L	L5	2007	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	2.5L	L5	2007	TCM	●	●	●	●	○
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	ABS	●	●	●	●	○
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	BSML	●	●	●	●	○
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	BSMR	●	●	●	●	○
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	EATC	●	●	●	●	0x0020
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	IC	●	●	●	●	○
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	LCM	●	●	●	●	○
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	RCM	●	●	●	●	○
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	RKE	●	●	●	●	○
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	TCM	●	●	●	●	○
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	ABS	●	●	●	●	○
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	BSML	●	●	●	●	○
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	BSMR	●	●	●	●	○
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	EATC	●	●	●	●	0x0020
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	IC	●	●	●	●	○
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	LCM	●	●	●	●	○
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	RCM	●	●	●	●	○
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	RKE	●	●	●	●	○
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	TCM	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	ABS	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	BSML	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	BSMR	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	EATC	●	●	●	●	0x0020
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	IC	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	LCM	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	RCM	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	RKE	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	TCM	●	●	●	●	○
MAZDA6 (North America / General)	3.7L	CA	2009 - 2010	ABS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	BSML	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	BSMR	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	EATC	●	●	●	●	0x0020
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	IC	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	LCM	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	RCM	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	RKE	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	TCM	●	●	●	●	○
MAZDA6 / ATENZA	2. 0L	PE	Other	BSML	●	●	●	●	○
MAZDA6 / ATENZA	2. 0L	PE	Other	BSMR	●	●	●	○	○
MAZDA6 / ATENZA	2. 0L	PE	Other	RVM	●	●	●	○	○
MAZDA6 / ATENZA	2. 2L	SH	Other	BSML	●	●	●	●	0x0043
MAZDA6 / ATENZA	2. 2L	SH	Other	BSMR	●	●	●	○	○
MAZDA6 / ATENZA	2. 2L	SH	Other	RVM	●	●	●	○	0x0072
MAZDA6 / ATENZA	2. 5L	PY	Other	BSML	●	●	●	●	0x0043
MAZDA6 / ATENZA	2. 5L	PY	Other	BSMR	●	●	●	○	○
MAZDA6 / ATENZA	2. 5L	PY	Other	RVM	●	●	●	○	0x0072
MAZDA6(North America/General)	2. 3L	L3	2003 - 2008	ABS/TCS	●	●	●	●	0x0008
MAZDA6(North America/General)	2. 3L	L3	2003 - 2008	IC	●	●	●	●	0x0009
MAZDA6(North America/General)	2. 3L	L3	2003 - 2008	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6(North America/General)	2. 3L	L3	2003 - 2008	RCM	●	●	●	●	0x006D
MAZDA6(North America/General)	2. 3L	L3	2003 - 2008	TCM	●	●	●	●	○
MAZDA6(North America/General)	2. 3L	L3	2006 - 2008	GEM	●	●	●	●	○
MAZDA6(North America/General)	2. 3L	L3	2008	TPM	●	●	●	○	○
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	4X4	●	●	●	●	○
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	ABS/TCS	●	●	●	●	0x0008
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	GEM	●	●	●	●	○
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	IC	●	●	●	●	○
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	RCM	●	●	●	●	○
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	RKE	●	●	●	●	○
MAZDA6(North America/General)	3. 0L	AJ	2003 - 2008	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6(North America/General)	3. 0L	AJ	2003 - 2008	TCM	●	●	●	●	○
MAZDA6(North America/General)	3. 0L	AJ	2003 - Other	ABS/TCS	●	●	●	●	0x0008
MAZDA6(North America/General)	3. 0L	AJ	2003 - Other	IC	●	●	●	●	○
MAZDA6(North America/General)	3. 0L	AJ	2003 - Other	RCM	●	●	●	●	○
MAZDA6(North America/General)	3. 0L	AJ	2006 - 2008	GEM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6(North America/General)	3.0L	AJ	2008	TPM	●	●	●	○	○
Millenia	2.3L	KJ	1997 - 2001	PCM	●	●	●	●	○
Millenia	2.3L	KJ	2000 - 2001	ABS/TCS	●	●	●	●	○
Millenia	2.5L	KL	1997 - 2001	PCM	●	●	●	●	○
Millenia	2.5L	KL	2000 - 2001	ABS/TCS	●	●	●	●	○
MILLENNIA / EUNOS 800	2.0L	KF	1998 - 2000	ABS	●	●	●	●	○
MILLENNIA / EUNOS 800	2.3L	KJ	1998 - 2000	ABS	●	●	●	●	○
MILLENNIA / EUNOS 800	2.5L	KL	1998 - 2000	ABS	●	●	●	●	○
MILLENNIA / EUNOS 800	2.5L	KL	2002	ABS/TCS	●	●	●	●	○
MILLENNIA / EUNOS 800	2.5L	KL	2002	PCM	●	●	●	●	○
MPV (Europe/General)	2.0L	FS	1999	ABS	●	●	●	●	○
MPV (Europe/General)	2.0L	FS	1999 - 2000	PCM	●	●	●	●	○
MPV (Europe/General)	2.0L	FS	2000	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	2.0L	RF-T	2002 - 2004	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	2.0L	RF-T	2002 - 2004	FFH	●	●	●	●	0x0131
MPV (Europe/General)	2.0L	RF-T	2002 - 2004	PCM	●	●	●	●	0x0080 0x0081 0x0082
MPV (Europe/General)	2.3L	L3	2002	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	2.3L	L3	2002	PCM	●	●	●	●	○
MPV (Europe/General)	2.5L	GY	1999 - 2000	ABS	●	●	●	●	○
MPV (Europe/General)	2.5L	GY	1999 - 2000	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	2.5L	GY	1999 - 2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6
MPV (Europe/General)	3.0L	AJ	2002	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	3.0L	AJ	2002	PCM	●	●	●	●	○
MPV (Europe/General)	3.0L	AJ	2002	TCM	●	●	●	●	○
MPV (JPN/General)	2.0L	FS	1999	ABS	●	●	●	●	○
MPV (JPN/General)	2.0L	FS	1999	PCM	●	●	●	●	○
MPV (JPN/General)	2.3L	L3	2002 - 2004	ABS/TCS	●	●	●	●	○
MPV (JPN/General)	2.3L	L3	2002 - 2004	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6
MPV (JPN/General)	2.5L	GY	1999	ABS	●	●	●	●	○
MPV (JPN/General)	2.5L	GY	1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6
MPV (JPN/General)	3.0L	AJ	2002 - 2004	ABS/TCS	●	●	●	●	○
MPV (JPN/General)	3.0L	AJ	2002 - 2004	PCM	●	●	●	●	0x0080 0x0081 0x0082
MPV (JPN/General)	3.0L	AJ	2002 - 2004	TCM	●	●	●	●	○
MPV (North America / General)	2.5L	GY	2000 - 2001	ABS/TCS	●	●	●	●	○
MPV (North America / General)	2.5L	GY	2000 - 2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6
MPV (North America / General)	3.0L	AJ	2002 - 2006	ABS/TCS	●	●	●	●	○
MPV (North America / General)	3.0L	AJ	2002 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C6
MPV (North America / General)	3.0L	AJ	2002 - 2006	TCM	●	●	●	●	0x00C5

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MPV (North America / General)	3.0L	AJ	2004 - 2006	RCM	●	●	●	●	0x006D
MPV (North America / General)	3.0L	JE	1997 - 1999	PCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	IC	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	4X4	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	ABS	●	●	●	●	0x0008 0x001E
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	AM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	GEM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	HCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	ICCM	●	●	●	●	0x0060
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	LCM	●	●	●	●	0x0021
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	LPSDM	●	●	●	●	0x0022
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	LTM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	RCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	RKE	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	RPSDM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	TCM	●	●	●	●	0x0136
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	4X4	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	ABS	●	●	●	●	0x0008
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	AM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	GEM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	HCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	IC	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	ICCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	LCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	LPSDM	●	●	●	●	0x0022
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	LTM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	RCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	RKE	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	RPSDM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	TCM	●	●	●	○	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	ABS	●	●	●	●	0x001E
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	AM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	GEM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	HCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	ICCM	●	●	●	●	0x0060
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	LCM	●	●	●	●	0x0021
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	LPSDM	●	●	●	●	0x0022
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	LTM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	RCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	RKE	●	●	●	●	0xF093 0xF094 0xF095
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	RPSDM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	TCM	●	●	●	●	○
MX-5	1.5L	P5	2015	PCM	●	●	●	●	0x00BB
MX-5	1.6L	B6	2000	ABS/TCS	●	●	●	●	○
MX-5	1.6L	B6	2000	PCM	●	●	●	●	○
MX-5	1.8L	BP	2000	ABS/TCS	●	●	●	●	○
MX-5	1.8L	BP	2000	PCM	●	●	●	●	○
MX-5	2.0L	PE	2015	PCM	●	●	●	●	0x00BB
MX-5 (Europe / General Specs.)	1.8L	L8	2005	TCM	●	●	●	●	○
MX-5 (Europe / General Specs.)	1.8L	L8	2005 - 2008	ABS	●	●	●	●	0x001E
MX-5 (Europe / General Specs.)	1.8L	L8	2005 - 2008	IC	●	●	●	●	0x001A 0x012D
MX-5 (Europe / General Specs.)	1.8L	L8	2005 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MX-5 (Europe / General Specs.)	1.8L	L8	2005 - 2008	RCM	●	●	●	●	○
MX-5 (Europe / General Specs.)	1.8L	L8	2005 - 2008	RHT	●	●	●	●	○
MX-5 (Europe / General Specs.)	1.8L	L8	2005 - 2008	RKE	●	●	●	●	○
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	ABS	●	●	●	●	○
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	IC	●	●	●	●	○
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	RCM	●	●	●	●	○
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	RHT	●	●	●	●	○
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	RKE	●	●	●	●	○
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	TCM	●	●	●	●	○
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	ABS	●	●	●	●	0x0005
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	IC	●	●	●	●	0x0005
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	RCM	●	●	●	●	0x0005
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	RKE	●	●	●	●	0x0005
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	TCM	●	●	●	●	○
MX-5 (North America / General Specs.)	2.0L	LF	2007 - 2010	RHT	●	●	●	●	○
MX-5 MIATA	1.8L	BP	1997 - 2005	PCM	●	●	●	●	○
MX-5 MIATA	1.8L	BP	2001 - 2005	ABS/TCS	●	●	●	●	○
MX-5 MIATA	1.8L	BP Turbo	2004	ABS/TCS	●	●	●	●	○
MX-5 MIATA	1.8L	BP Turbo	2004	PCM	●	●	●	●	○
PREMACY	1.8L	FP	1999	ABS	●	●	●	●	○
PREMACY	1.8L	FP	2000	ABS/TCS	●	●	●	●	○
PREMACY	1.8L	FP	2000	PCM	●	●	●	●	○
PREMACY	2.0L	FS	2001	ABS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
PREMACY	2. 0L	FS	2001	ABS/TCS	●	●	●	●	○
PREMACY	2. 0L	FS	2001	PCM	●	●	●	●	○
PREMACY	2. 0L	RF-T	1999 - 2000	ABS	●	●	●	●	○
PREMACY	2. 0L	RF-T	1999 - 2003	PCM	●	●	●	●	○
PREMACY	2. 0L	RF-T	2000 - 2003	ABS/TCS	●	●	●	●	○
PREMACY / IXION	1. 8L	FP	1999	ABS	●	●	●	●	○
PREMACY / IXION	1. 8L	FP	1999 - 2002	PCM	●	●	●	●	○
PREMACY / IXION	1. 8L	FP	2002	ABS/TCS	●	●	●	●	○
PREMACY / IXION	1. 8L	FP_DE	1999	ABS	●	●	●	●	○
PREMACY / IXION	1. 8L	FP_DE	1999	PCM	●	●	●	●	○
PREMACY / IXION	2. 0L	FS	2001	ABS/TCS	●	●	●	●	○
PREMACY / IXION	2. 0L	FS	2001	PCM	●	●	●	●	○
PREMACY / IXION	2. 0L	RF-T	1999	ABS	●	●	●	●	○
PREMACY / IXION	2. 0L	RF-T	1999	PCM	●	●	●	●	○
PREMACY / MAZDA5	1. 6L	Y6	Other	4X4	●	●	●	●	○
PREMACY / MAZDA5	1. 6L	Y6	Other	ABS	●	●	●	●	○
PREMACY / MAZDA5	1. 6L	Y6	Other	ACU	●	●	●	●	○
PREMACY / MAZDA5	1. 6L	Y6	Other	BCM/GEM	●	●	●	●	0x0120
PREMACY / MAZDA5	1. 6L	Y6	Other	EATC	●	●	●	●	0x0020
PREMACY / MAZDA5	1. 6L	Y6	Other	EPS	●	●	●	●	○
PREMACY / MAZDA5	1. 6L	Y6	Other	IC	●	●	●	●	○
PREMACY / MAZDA5	1. 6L	Y6	Other	LPSDM	●	●	●	●	0x0022
PREMACY / MAZDA5	1. 6L	Y6	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
PREMACY / MAZDA5	1. 6L	Y6	Other	RCM	●	●	●	●	○
PREMACY / MAZDA5	1. 6L	Y6	Other	RKE	●	●	●	●	○
PREMACY / MAZDA5	1. 6L	Y6	Other	RPSDM	●	●	●	●	○
PREMACY / MAZDA5	1. 6L	Y6	Other	TCM	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	Other	ABS	●	●	●	●	0x001E
PREMACY / MAZDA5	1. 8L	L8	Other	ACU	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	Other	BCM/GEM	●	●	●	●	0x0120
PREMACY / MAZDA5	1. 8L	L8	Other	EATC	●	●	●	●	0x0020
PREMACY / MAZDA5	1. 8L	L8	Other	EPS	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	Other	IC	●	●	●	●	0x001A
PREMACY / MAZDA5	1. 8L	L8	Other	LPSDM	●	●	●	●	0x0022
PREMACY / MAZDA5	1. 8L	L8	Other	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0201
PREMACY / MAZDA5	1. 8L	L8	Other	RCM	●	●	●	●	0x006D
PREMACY / MAZDA5	1. 8L	L8	Other	RKE	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	Other	RPSDM	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	LF	Other	4X4	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	LF	Other	ABS	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	LF	Other	ACU	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
PREMACY / MAZDA5	2.0L	LF	Other	BCM/GEM	●	●	●	●	0x0120
PREMACY / MAZDA5	2.0L	LF	Other	EATC	●	●	●	●	0x0020
PREMACY / MAZDA5	2.0L	LF	Other	EPS	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	IC	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	LPSDM	●	●	●	●	0x0022
PREMACY / MAZDA5	2.0L	LF	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082
PREMACY / MAZDA5	2.0L	LF	Other	RCM	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	RKE	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	RPSDM	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	TCM	●	●	●	●	○
PREMACY / MAZDA5	2.0L	PE	Other	ABS	●	●	●	●	0x001E
PREMACY / MAZDA5	2.0L	PE	Other	ACU	●	●	●	●	○
PREMACY / MAZDA5	2.0L	PE	Other	BCM/GEM	●	●	●	●	0x0120
PREMACY / MAZDA5	2.0L	PE	Other	EATC	●	●	●	●	0x0020
PREMACY / MAZDA5	2.0L	PE	Other	EPS	●	●	●	●	○
PREMACY / MAZDA5	2.0L	PE	Other	IC	●	●	●	●	○
PREMACY / MAZDA5	2.0L	PE	Other	LPSDM	●	●	●	●	0x0022
PREMACY / MAZDA5	2.0L	PE	Other	RCM	●	●	●	●	0x006D
PREMACY / MAZDA5	2.0L	PE	Other	RKE	●	●	●	●	○
PREMACY / MAZDA5	2.0L	PE	Other	RPSDM	●	●	●	●	○
PREMACY / MAZDA5	2.5L	L5	Other	ABS	●	●	●	●	0x001E
PREMACY / MAZDA5	2.5L	L5	Other	ACU	●	●	●	●	○
PREMACY / MAZDA5	2.5L	L5	Other	BCM/GEM	●	●	●	●	0x0120
PREMACY / MAZDA5	2.5L	L5	Other	EATC	●	●	●	●	0x0020
PREMACY / MAZDA5	2.5L	L5	Other	EPS	●	●	●	●	○
PREMACY / MAZDA5	2.5L	L5	Other	IC	●	●	●	●	0x001A
PREMACY / MAZDA5	2.5L	L5	Other	LPSDM	●	●	●	●	0x0022
PREMACY / MAZDA5	2.5L	L5	Other	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0201
PREMACY / MAZDA5	2.5L	L5	Other	RCM	●	●	●	●	0x006D
PREMACY / MAZDA5	2.5L	L5	Other	RKE	●	●	●	●	○
PREMACY / MAZDA5	2.5L	L5	Other	RPSDM	●	●	●	●	○
PREMACY / MAZDA5	2.5L	L5	Other	TCM	●	●	●	○	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 - 2007	4X4	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 - 2007	ABS	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 - 2007	EATC	●	●	●	●	0x0020
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 - 2007	EPS	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 - 2007	GEM	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 - 2007	IC	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 - 2007	RCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 - 2007	RKE	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 - 2007	LPSDM	●	●	●	●	0x0022
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 - 2007	RPSDM	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 - 2007	TCM	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 - 2007	ABS	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 - 2007	EATC	●	●	●	●	0x0020
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 - 2007	EPS	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 - 2007	GEM	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 - 2007	IC	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 - 2007	RCM	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 - 2007	RKE	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	LPSDM	●	●	●	●	0x0022
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	RPSDM	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	TCM	●	●	●	●	○
PROBE / MX-6	2.0L	Other	1996 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
PROBE / MX-6	2.5L	KL	1996 - 1997	PCM	●	●	●	●	○
PROCEED	2.5L	G5	1996	PCM	●	●	●	●	○
PROCEED	2.6L	G6	1996	PCM	●	●	●	●	○
PROTEGE	1.5L	Z5	1997 - 1998	PCM	●	●	●	●	○
PROTEGE	1.6L	ZM	1999 - 2001	PCM	●	●	●	●	○
PROTEGE	1.6L	ZM	2000 - 2001	ABS/TCS	●	●	●	●	○
PROTEGE	1.8L	BP	1997 - 1998	PCM	●	●	●	●	○
PROTEGE	1.8L	FP	1999 - 2000	PCM	●	●	●	●	○
PROTEGE	1.8L	FP	2000	ABS/TCS	●	●	●	●	○
PROTEGE	2.0L	FS	2001 - 2003	ABS/TCS	●	●	●	●	○
PROTEGE	2.0L	FS	2001 - 2003	PCM	●	●	●	●	○
PROTEGE	2.0L	FS_T	2003	ABS/TCS	●	●	●	●	○
PROTEGE	2.0L	FS_T	2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C6
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	ABS/TCS	●	●	●	●	0x0008
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	ESOF	●	●	●	●	○
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●	●	0x0008 0x001E 0x00CA
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	0x00D5
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00B0 0x00B1 0x00B3 0x00B9 0x00BC
Ranger / Mazda B-Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Ranger / Mazda B-Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●	●	0x0038
Ranger / Mazda B-Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2007	GEM	●	●	●	●	0x000A 0x0203
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2009	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	IC	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0024 0x0028 0x0031
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	RCM	●	●	●	●	0x000C
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2005	TPM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2007 - 2011	OCSM	●	●	●	○	0x000C
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2007 - 2011	SDARS	●	●	●	●	0x0019
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2008 - 2011	GEM / SJB	●	●	●	●	0x000A 0x0042
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2010 - 2011	ABS	●	●	●	●	0x0008 0x0012
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	ABS/TCS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	GEM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	RAP	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1996 - 1997	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	Other	1996 - 2003	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2. 3L	Other	1996 - 2003	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	2. 3L	Other	1996 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001	PATS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001 - 2003	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001 - 2003	RAP	●	●	●	●	0x000A 0x000F
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001 - 2003	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	ABS	●	●	●	●	0x0008 0x001E 0x00CA
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	BCMii	●	●	●	●	0x00D5

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	RCM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	TRM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	Other	1998	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 - 2001	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 - 2001	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 - 2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 - 2001	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 - 2001	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 - 2001	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	Other	2001	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	PATS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 - 2000	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 - 2000	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 - 2000	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 - 2000	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 - 2000	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 - 2000	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 - 2003	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 - 2007	GEM	●	●	●	●	0x0203 0x000A
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 - 2008	ABS/TCS	●	●	●	●	0x0008

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 - 2008	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009
Ranger / Mazda B-Series / Courier	3.0L	Other	1996 - 1998	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	1999 - 2008	RCM	●	●	●	●	0x000C
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 - 2001	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 - 2008	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	2004 - 2008	IC	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	3.0L	Other	2005	TPM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 - 2008	OCSM	●	●	●	○	0x000C
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 - 2008	SDARS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	2008	GEM / SJB	●	●	●	●	0x000A 0x0042
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 - 2002	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 - 2002	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 - 2002	RAP	●	●	●	●	0x000A 0x000F
Ranger / Mazda B-Series / Courier	4.0L	Other	1996 - 1998	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 - 2001	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 - 2002	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 - 2002	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003	RAP	●	●	●	●	0x000A 0x000F
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2007	GEM	●	●	●	●	0x0203 0x000A
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2009	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2011	4X4	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2011	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2011	RCM	●	●	●	●	0x000C
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2004 - 2011	IC	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2005	TPM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007 - 2011	OCSM	●	●	●	○	0x000C
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007 - 2011	SDARS	●	●	●	●	0x0019
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2008 - 2011	GEM / SJB	●	●	●	●	0x000A 0x0042
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2010 - 2011	ABS	●	●	●	●	0x0008 0x0012
Ranger / Mazda B-Series / Courier	Other	Other	2004	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	ABS/TCS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	GEM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	IC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	PCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004 - 2011	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	ABS	●	●	●	●	0x00CA
Ranger / Mazda B-Series / Courier	Other	Other	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	BCMii	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Ranger / Mazda B-Series / Courier	Other	Other	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	TRM	●	●	●	●	○
ROADSTER / MX-5	1.6L	B6	2000	ABS	●	●	●	●	○
ROADSTER / MX-5	1.6L	B6	2002	ABS/TCS	●	●	●	●	○
ROADSTER / MX-5	1.6L	B6	2002	PCM	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP	2000	ABS	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP	2002	ABS/TCS	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP	2002	PCM	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP Turbo	2003	ABS/TCS	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP Turbo	2003	PCM	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	ABS	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	IC	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082
ROADSTER / MX-5	2.0L	LF	2005 - 2008	RCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ROADSTER / MX-5	2.0L	LF	2005 - 2008	RHT	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	RKE	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	TCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	ABS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	ABS/TCS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	EPS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	IC	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	LCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	RCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	RKE	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	SASM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	TCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	ABS/TCS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	EPS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	IC	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	RCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	RKE	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	SASM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	TCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	ABS/TCS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	EPS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	IC	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	RCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	RKE	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	SASM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	TCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	ABS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	ABS/TCS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	EPS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	IC	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	LCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	RCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	RKE	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	SASM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	TCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	TPM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	ABS/TCS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	EPS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	IC	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	RCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	RKE	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	SASM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	TPM	●	●	●	○	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2006 - 2008	TCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	ABS/TCS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	EPS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	IC	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	RCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	RKE	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	SASM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	TCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	TPM	●	●	●	○	○
SCRUM	660cc	F6A	1999 - Other	ABS	●	●	●	●	○
SCRUM	660cc	F6A	1999 - Other	PCM	●	●	●	●	○
SCRUM	660cc	F6A	1999 - Other	RCM	●	●	●	●	○
SCRUM	660cc	F6A-T	1999 - Other	ABS	●	●	●	●	○
SCRUM	660cc	F6A-T	1999 - Other	PCM	●	●	●	●	○
SCRUM	660cc	F6A-T	1999 - Other	RCM	●	●	●	●	○
SCRUM	660cc	F6A-T	1999 - Other	TCM	●	●	●	●	○
SCRUM	660cc	K6A	2001 - Other	ABS	●	●	●	●	○
SCRUM	660cc	K6A	2001 - Other	PCM	●	●	●	●	○
SCRUM	660cc	K6A	2001 - Other	RCM	●	●	●	●	○
SCRUM	660cc	K6A_T	2001 - Other	ABS	●	●	●	●	○
SCRUM	660cc	K6A_T	2001 - Other	PCM	●	●	●	●	○
SCRUM	660cc	K6A_T	2001 - Other	RCM	●	●	●	●	○
SCRUM	660cc	K6A_T	2001 - Other	TCM	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A	2003 - Other	ABS	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A	2003 - Other	PCM	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A	2003 - Other	RCM	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	ABS	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	PCM	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	RCM	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	TCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	ABS	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	PCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	RCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	ABS	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	PCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	RCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	TCM	●	●	●	●	○
SENTIA	3. 0L	JE	1997	PCM	●	●	●	●	○
SENTIA	3. 0L	JE_HO	1997	PCM	●	●	●	●	○
TITAN DASH	2. 0L	FE	2000 - 2002	PCM	●	●	●	●	○
TITAN DASH	2. 0L	FE	2002	TCM	●	●	●	●	○
TITAN DASH	2. 0L	FE LPG	2002	PCM	●	●	●	●	○
TITAN DASH	2. 0L	FE LPG	2002	TCM	●	●	●	●	○
TITAN DASH	2. 0L	RF-T	2004	PCM	●	●	●	●	0x0080 0x0081 0x0082
TITAN DASH	2. 0L	RF-T	2004	TCM	●	●	●	●	○
Tribute	2. 3L	HEV / ATKINSON 4V	2008	PCM	●	●	●	●	0x00BB
Tribute	2. 5L	DURATEC-HE / I4	2009	PCM	●	●	●	●	0x00BB
Tribute	2. 5L	HEV / ATKINSON 4V	2009	PCM	●	●	●	●	0x00BB
Tribute	3. 0L	4V	2009	PCM	●	●	●	●	0x00BB
VX-1	1. 4L	K14B	Other	ABS	●	●	●	○	0x0212
VX-1	1. 4L	K14B	Other	BCM#1	●	●	●	●	○
XEDOS9	2. 0L	KF	1996	ABS	●	●	●	●	○
XEDOS9	2. 3L	KJ	1996 - 1998	ABS	●	●	●	●	○
XEDOS9	2. 5L	KL	1996 - 2000	ABS	●	●	●	●	○
XEDOS9	2. 5L	KL	2000	ABS/TCS	●	●	●	●	○
XEDOS9	2. 5L	KL	2000	PCM	●	●	●	●	○

Special Function

Index	Specil Function Name	Index	Specil Function Name
0005	Programmable Module Installation	0006	Module Reprogramming
0007	Programmable Parameters	0008	ABS Service Bleed
0009	PATS Functions	000A	Remote Keyless Entry
000B	G Sensor Calibration	000C	Passenger System Reset
000D	Neutral Position Setting	000E	Ride Height Calibration
000F	Factory Keyless Entry Code	0010	Stop Use of Transmission Adaptive
0011	Power Seat Calibration	0012	IVD Initialization Sequence
0013	Pneumatic Test	0014	Accurate Trim Test
0015	Passenger Zero Seat Weight Test	0016	Microphone Test
0017	Audio Speaker Walkaround Test	0018	Infotainment Display Test
0019	Tones Test	001A	TPMS Functions
001B	Zero Speed Test	001C	Rear Tones Test
001D	Monotones Test	001E	Sensor Initialization
001F	EPB calibration.	0020	EATC Operation Check
0021	Rain Sensor Reset	0022	LPSDM and RPSDM Service Function
0023	Power Balance	0024	EVAP Test
0025	Reset PCM KAM	0026	OBDII Modes
0027	Clear Transmission Adaptive Learning	0028	Clear Transmission Adaptive Tables
0029	Configure All Three Sensors Together.	002A	Configure Both the Yaw Rate Sensor and the Lateral Acceleration Sensors.
002B	Configure the lateral acceleration sensor.	002C	Configure the pressure sensor.
002D	FFH SelfTest and Prefill Utility	002E	FFH Start Heater Utility
002F	FFH Unlock Utility	0030	Auxiliary vehicle ID reset
0031	Halt Transmission Adaptive Learning	0032	Headlamp Alignment
0033	Resume Transmission Adaptive Learning	0034	Resume Transmission Adaptive Tables
0035	Keyfob Training	0036	Transmission
0037	Transmission Learning	0038	Transmission Solenoid Body IDN
0039	VSM Service Functions	003A	A/C Test
003B	ACM	003C	ACM Security Bypass Test
003D	Air/Fuel Learning	003E	AM Antenna Reception Sensitivity Test
003F	ASM Service Functions	0040	audio configuration
0041	Auto Leveling Sensor Re-zero Procedure	0042	Tire Pressure Monitoring System
0043	BSM Radar Test	0044	Button Test
0045	CAN Bus Fault Test	0046	CCM Calibration
0047	Clear EGR Adaptive Tables	0048	Clear Fuel Injector&HP Pump Adaptive Table
0050	Clearing of Learning Value	0051	Component/Parameter Reset
0053	Configure the steering angle sensor	0054	Configure the yaw rate sensor
0055	DATA Reset	0056	DPF
0057	DPF Component Parameter	0058	DPF Manual Regeneration
0059	DPF Parameter Reset	005A	Electronic Throttle Control
005B	EPS Steering Angle Calibration	005C	ETB/EGR Initialization
005D	FACM	005E	FFH Operation Check
005F	Gauge Test	0060	ICCM Aiming Adjustment
0061	Illumination Test	0062	Input and Data Test
0063	Interior Scan Test	0064	Keyless Entry Keypad Code Reset
0065	Learning	0066	Misfire Check
0067	Misfire Monitor Neutral Profile Correction	0068	Module Identification
0069	Multifunction Output Test	006A	Network Test
006B	New FACM	006C	Parking Aid Switch Test
006D	Passenger Seat Weight Sensor ReZero	006E	Rebalance
006F	Reset the Knock Sensor Learned Values	0070	Reset Transmission Tables
0071	Resetting adaptive values	0072	RVM Aiming
0074	Service Routine	0075	Specil Ignition ON
0076	Steering angle sensor calibration	0077	Supplemental Heater test

Index	Specil Function Name	Index	Specil Function Name
0080	Mode 1 Powertrain Data	0081	Mode 6 On-Board Test Results
0082	Mode 8 - On-Board device control	0083	Mode 9 - Vehicle Information
0084	OBD Drive Cycle	0085	Service Functions
0090	Diesel Particulate Filter Static Regeneration	0091	DPF Regeneration Suspension
0092	Fuel Injector Correction Factors	0093	IQA
0094	Refill the FAT.	0095	Relearn Vehicle Data
0096	Reset Charge Air Cooler Bypass Valve Position	0097	Reset the Cooling Fan Motor Learned Values
0098	Reset the Diesel Particulate Filter Learned	0099	Reset the Exhaust Gas Recirculation Valve Learned
009A	Reset the Intake Air Throttle Valve Learned	009B	Reset / Clear Specified Function
009C	SCR Dosing Measurement Test	009D	SCR Parameter Reset
009E	SCR System Emptying	009F	SCR System Refill Activation
00A0	SCR Visual Leak Check	00A1	System Prime
00A2	WIF Reset	00A3	DPF Reset
00A4	Enter the Fuel Injector Default Count Value	00A5	Clutch Switch Learn
00A6	Engine Oil Quality History	00A7	Fuel Injection Pump Learn
00A8	Fuel Injector Pilot Correction Learn	00A9	Fuel System Leak Test
00AA	Initialize the Exhaust Gas Related Component.	00AB	Reset Differential Pressure Sensor Learned Values
00AC	Reset KAM	00AD	Reset MAF Sensor Drift.
00AE	Reset MAF Sensor Offset.	00AF	Reset the air conditioning compressor learned values.
00B0	Reset the Diesel Particulate Filter Differential Pressure Sensor Learned Values	00B1	Reset the Exhaust Gas Temperature Value
00B2	Reset the Fuel Injection Pump Learned Values	00B3	Reset the Fuel Injector Learned Values
00B4	Reset the Fuel Metering Valve Learned Values	00B5	Reset the Fuel Pressure Relief Valve Open Count Learned Value
00B6	Reset the Fuel Pressure Relief Valve Open Duration Learned Value	00B7	Reset the Fuel Rail Pressure Sensor Learned Values
00B8	Reset the Heated Exhaust Gas Oxygen Sensor Learned Values	00B9	Reset the Mass Air Flow Sensor Learned Values
00BA	Reset the Neutral Gear Position Learned Value	00BB	Reset the oil change indicator.
00BC	Reset the Powertrain Control Module Learned	00BD	Reset the Turbocharger Learned Values.
00BE	Reset the Turbocharger Variable Vane Actuator Learned Values	00BF	Reset the Turbocharger Variable Vane Position Sensor Learned Values
00C0	Reset the Vehicle Speed Limit	00C1	Reset the water in fuel Warning Indicator.
00C2	rpm Controller	00C3	Stop-Start Activation
00C4	Speed Limiting	00C5	TR sensor
00C6	Transmission Fluid Level Test	00C7	Automatic Transmission PRNDL Display Test
00CA	ABS reset and configuration.	00CB	PDC Reset
00CC	Steering Wheel Position Sensor Calibration	00CD	Preliminary Checks
00CE	Reset TCM KAM	00CF	Fuel System Prime
00D0	Remote Start	00D1	TBM SIM RAV_ID
00D2	Reset TBM Password	00D3	TBM Transit Mode
00D4	CEI Lock Configuration	00D5	BMS Reset
00D6	Navigation	00D7	Calibrate Steering Angle Sensor
00D8	Configure the steering column assembly.	00D9	Configure the longitudinal acceleration sensor.
00DA	Configure the intermediate shaft.	00DB	Module Initialization
00DC	Pull Drift Compensation	00DD	Calibrate Longitudinal Acceleration Sensor
00DE	Inhibit longitudinal accelerometer monitoring	00DF	Pull Drift Compensation enable/disable
00E0	Straight Ahead Adaption Angle Reset	00E1	Steering Rack Limiter Configuration
00E2	Pressure Sensor Calibration	00E3	Reset Pressure Sensor Offset
00E4	Enable/Disable hill launch assist .	00E5	Camera Alignment
00E6	Shift fork system learn.	00E7	Reset the High Pressure Fuel System Learned Values
00E8	BleedMASTER	00E9	FCDIM Keycode Reset
00EA	Beltminder Enable/Disable	00EB	TPMS reset.
00EC	TPMS reset after ABS module replacement	00ED	Show GEM configuration
00EE	EPB	00EF	Clear crash data memory.
00F0	Passenger Airbag Deactivation Switch	00F1	Component checks
00F2	Driver's Seat Module	00F3	Assembly Check
00F4	Inclination Sensor Calibration	00F5	Maintenance mode
00F6	Static Apply	00F7	Clear stored clutch engagement point

Index	Specil Function Name	Index	Specil Function Name
00F8	Module Configuration	00F9	CCMii Sensor Alignment
00FA	Track Key Configuration	00FB	Driver Window Motor Test.
00FC	Passenger Window Motor Test	00FD	Clear Self-learning Data
00FE	RVC Configuration	00FF	Special Function
0100	Disable GDM VIN	0101	WMM Calibration
0102	RCM	0103	Cooling Fan Test
0104	IAC System Test	0105	VCT System Test
0106	A/C Test	0107	MAF Sensor / TP Sensor Dynamic Test
0108	ATC Barcode Entry	0109	ISM Configuration
010A	Valve Calibration	010B	TP Sweep Test
010C	ICP Sensor Test	010D	Oil Aeration Test
010E	Exhaust System Test	010F	MAF Sensor Contamination Test
0110	EGR System Flow Test	0111	Neutral Tow Function
0112	LIN New Module Initialization	0113	Tachometer
0114	Camshaft Position Reference Adaption Learn	0115	Powertrain Control Module Central Car Configuration
0116	Powertrain Control Module (PCM) One Touch Start Configuration	0117	TCM Adaptive Learning
0118	On-demand lock test routine	0119	Rear Brake Adjustment
011A	ACM Configuration	011B	BCMii
011C	Car Mod	011D	SPRM Configuration
011E	EPAS Configuration	011F	Learn the vehicle variant and VIN data
0120	Burglar Service Functions	0121	The removal and installation of the selector lever or the selector lever cable.
0122	Transmission fluid drain and refill.	0123	The installation of a new TCM.
0124	The installation of a new automatic transmission with a new TCM.	0125	The installation of a new automatic transmission with the original TCM.
0126	Reset the Transmission Control Module Learned	0127	Reset the Transmission Oil learned Values
0128	Transmission Range Sensor Learn	0129	Read the ECU serial number.
012A	RCM Calibration	012B	Reset maintenance lamp
012C	Special Ignition ON	012D	IC Service Functions
012E	A/F (Fuel Ratio)	012F	Reset Expansion ID
0130	Reset security ID	0131	Lockout Mode Reset
0132	Sensor Learn Routine	0133	Ambient Air Temp Sensor Configuration
0134	Touchscreen	0135	Variant and VIN Data Learning Procedure
0136	Neutral Position Learning	0137	Clear Grade Sensor Learning Value
0138	Clear Oil Pressure Sensor Learning Value	0139	Grade Sensor Learning
013A	Oil Pressure Sensor Learning	013B	Fuel System Vaporizer Prime
013C	Reset SOBDM-C KAM	013D	Power Liftgate Initialization
013E	LDWS Camera Alignment	013F	SWS calibration
0140	Driver side	0141	Passenger side
0142	Auto Leveling Sensor	0143	Automatic 4 wheel drive
0144	Clear Learning Value	0145	CVT Learning Value Setting
0146	Headlight Zero-set	0147	Height Sensor Initial Setting
0148	Maintenance Information	0149	Reset Supply Pump Learned Values
014A	Slope sensor initialization	014B	Starter Driving Counter
014C	FFH Fuel Priming	014D	Urea Injector Test
014E	Urea Pump Test	0150	PCM Service Functions
0151	ABD Initialization	0152	Tire Size Configuration
0153	Workshop test	0154	PROXI Alignment
0155	AFS	0156	HID HEADLAMPS
0157	Air Bleed for Electric Oil Pump	0158	Clutch System Test
0159	CVT Slope Sensor Calibration	015B	High Voltage (HV) De-energise Tool
015C	Injector ID code	0201	Mazda Vehicle Check-up
0202	Spark Duration PIDs	0203	Windshield Wiper Test
0204	Rear Window Wiper Test	0205	Cooling System Degas
0206	PAD Switch	0207	Enable Heated Screens
0208	Reader Aiming	0209	System Initialize
020A	Diesel Particulate Filter Dynamic Regeneration	020B	Coupling Calibration Data Writing

Index	Specil Function Name	Index	Specil Function Name
020C	Apply and Release Test	020D	RF KeyPad Learn Process
020E	FSC Aiming	020F	TPMS Sensor Training Mode
0210	Police Vehicle Top Speed Limit	0211	Maintenance revision status
0212	Hydraulic control test	0213	ABS
0214	SASM Module Reset	0215	Steering Motor Angle Trim
0216	Steering Toe Adjustment	0217	Steering Wheel Angle Trim
0218	Police Idle	0219	360 Camera Calibration
021A	BCM#1 Crash Status Reset	021B	Emergency Assist Activation
021C	ESN	021D	Remote Keyless Entry
F001	Audio	F002	Battery saver
F003	Body Type	F004	Courtesy Lamp
F005	Door Trigger Disable Mode	F006	Body and Fuel Type
F007	Hazard Warning	F008	Horn Warning
F009	Master Door Trigger Disable Mode	F00A	Panic Alarm
F00B	Police Mode	F00C	Traction control system
F00D	Autolamp Off Setting	F00E	Autolamp On Setting
F00F	Police Speedometer Offset	F010	Cabin Temperature Sensor Calibration Factor
F011	Taxi Mode	F012	Low Coolant Warning
F013	Parking Brake Warning	F014	Headlamp Delay Door Open
F015	Headlamp Delay Ignition Off	F016	Headlamp Delay Remote Lock Pressed
F017	Dynamic Stability Control	F018	Hill Descent Control LED
F019	Brake System Configuration	F01A	BPM fitted
F01B	Camera fitted	F01C	Audio Interface Module
F01D	Sonar fitted	F01E	Navigation System
F01F	Parking Aid Module	F020	Odometer Write
F021	Subwoofer	F022	Driver Beltminder Status
F023	Alarm	F024	Audio Configure
F025	Autolocking While The Vehicle Is Moving	F026	Module Reset
F027	BeltMinder	F028	Electrical Auxiliary Heater Chimes
F029	Power Steering Status	F02A	Repeat flasher
F02B	Autolock/Relock Configuration Status	F02C	Autolocking Customer setting
F02D	Double Locking With REMOTE	F02E	Power Lock Configuration
F02F	Single Door Unlocking Using The REMOTE	F030	Tailgate Release REMOTE Button
F031	PAD Switch	F032	Speed Control
F033	Ambient Temperature Sensor Conformation	F034	Heated Screen(s) active during warm up
F035	Power Sunroof Or Taxi Meter Fitted	F036	Deflation Detection System
F037	Baseplate	F038	Select seat trim type.
F039	Select Vehicle Type	F03A	Repeat flasher
F03B	Internal Remote Receiver	F03C	Lock confirmation flash
F03D	Alarm system	F03E	Wash Fluid Sensor
F03F	Select Engine Type	F040	Reverse Warning Chime
F041	Easy Entry / Exit	F042	Daytime Running Lamps
F043	Turn Signal Warning Chime	F044	Autolock
F045	Horn Chirp	F046	Tire Size (rev / mile)
F047	TBM Transit Mode	F048	Perimeter Lighting
F049	Stop and taillamp outage configuration	F04A	Overspeed Warning Indicator
F04B	Autolock Configuration Status	F04C	Auto unlock
F04D	Language	F04E	Headlight Battery Saver Timeout
F04F	Heated Backlight	F050	Front Foglamps
F051	Headlamp Type	F052	Button Press Chime
F053	Not in Park Chime	F054	Oil Life
F055	Parking Brake Chime	F056	Central Unlock via Key Cylinder
F057	Two Stage Unlocking	F058	Power Door Lock Inhibit
F059	Perimeter Alarm	F05A	Satellite Digital Audio Receiver System
F05B	Autolamp	F05C	Fog Lamp
F05D	Passenger Beltminder Status	F05E	Keypad Configure
F05F	Remote Panic	F060	Remote Keyless Entry

Index	Specil Function Name	Index	Specil Function Name
F061	Remote open/close signal	F062	Cellular Phone Module
F063	Radio Clock	F064	Divider Bar\$I
F065	Welcome illumination	F066	Battery saver function
F067	Speedometer Accuracy Bias	F068	Dark car
F069	Horn Chirp Configuration Status	F06A	Smart Unlock
F06B	Fuel Economy Display Mode	F06C	Power Adjustable Pedals
F06D	Power Seat Recline	F06E	Fuel Gallon Configuration
F06F	Power Mirrors	F070	High cool blower voltage
F071	Outside Air Temperature	F072	Oil Life Status and Warning
F073	Telephone	F074	Driver Seat Recline Memory Function
F075	Pedal Memory Function	F076	Screen Display-Brand
F077	Flex Fuel	F078	APIM
F079	Steering wheel control	F07A	Auxiliary Jack
F07B	SWC POD type	F07C	Two-way front speakers
F07D	Two-way rear speakers	F07E	Trailer Brake Control Module
F07F	Family Entertainment System	F080	Mirror Turn Signals
F081	Vehicle Door Configuration	F082	Fuel Tank Configuration
F083	Fuel Tank Size	F084	Rear Tire Size (Rev/Mile)
F085	Trim Switch Inhibit	F086	Fob panic activation
F087	Tilt-Telescope Steering Wheel	F088	Autolamp Delay Time
F089	Global Close	F08A	Global Open
F08B	Auto Lock	F08C	Security Horn Alarm
F08D	Illuminated Exit	F08E	ABS Tire Warning
F08F	Sliding Door Caution	F090	Smart Lock
F091	Horn	F092	Outside Air Temperature Display
F093	Answer Back Buzzer	F094	Automatic Locks
F095	Card Key Battery Low Warning	F096	Two(2) stage door unlocking by request switch.
F097	Two(2) stage door unlocking by transmitter.	F098	Auto relock timer (with AKE)
F099	(PCM) Oil Life Used	F09A	GCC vehicle
F09B	Accessory Protocol Interface Module	F09C	Tuner setting
F09D	Smart Rear Wipe	F09E	Drip Wipe
F09F	Safety Belt Warning	FOA0	Hazzard Warning Switch
FOA1	Global Closing With REMOTE	FOA2	Tailgate release available when ignition on
FOA3	Select the type of liftgate striker plate fitted	FOA4	Reset Alarm System Via Key
FOA5	One-touch-up window function fitted	FOA6	Auto high beam sensitivity
FOA7	Unlock sequence	FOA8	Daytime dimming rate setting
FOA9	Fuel logic	FOAA	Fuel Meter Response Setting
FOAB	Voice Recognition Module	FOAC	Door ajar
FOAD	Cargo Unlock Setting	FOAE	General Unlock Setting
FOAF	Rear Door Reverse Cycling	FOB0	Mirror Puddle Lamps
FOB1	RHT Buzzer	FOB2	Electronic-Controlled Power Steering
FOB3	Heated windshield	FOB4	Speed dependent wiper function
FOB5	Audio Repeater Display	FOB6	Power Folding Mirrors
FOB7	Approach Lamps	FOB8	Key Out Apply

Module Programming

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	Programmable Module Installation	ABS	●
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	Programmable Module Installation	GEM	●
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	Programmable Module Installation	IC	●
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	Programmable Parameters	Personality	●
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	Programmable Parameters	Exterior Lighting	●
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	Programmable Parameters	Warning Lamps / Chimes	●
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	Programmable Parameters	Power Door Locks	●
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	Programmable Parameters	Security	●
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	Programmable Parameters	Speed Items	●
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	Programmable Module Installation	ABS	●
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	Programmable Module Installation	GEM	●
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	Programmable Module Installation	IC	●
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	Programmable Parameters	Personality	●
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	Programmable Parameters	Exterior Lighting	●
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	Programmable Parameters	Warning Lamps / Chimes	●
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	Programmable Parameters	Power Door Locks	●
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	Programmable Parameters	Security	●
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	Programmable Parameters	Speed Items	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2002	Programmable Module Installation	ABS/TCS	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2002	Programmable Module Installation	IC	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2002	Programmable Module Installation	LHID	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2002	Programmable Module Installation	PCM	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2002	Programmable Module Installation	RCM	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2002	Programmable Module Installation	RHID	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2005	Programmable Module Installation	ABS/TCS	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2005	Programmable Module Installation	IC	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2005	Programmable Module Installation	RKE	※
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2005	Programmable Module Installation	LHID	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2005	Programmable Module Installation	PCM	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2005	Programmable Module Installation	RCM	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2005	Programmable Module Installation	RHID	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2005	Programmable Parameters	Exterior Lighting	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2005	Programmable Parameters	RKE	●
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	Programmable Parameters	Exterior Lighting	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002	Programmable Module Installation	ABS/TCS	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002	Programmable Module Installation	IC	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002	Programmable Module Installation	LHID	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002	Programmable Module Installation	PCM	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002	Programmable Module Installation	RCM	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002	Programmable Module Installation	RHID	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	Programmable Module Installation	ABS/TCS	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	Programmable Module Installation	IC	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	Programmable Module Installation	RKE	※
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	Programmable Module Installation	LHID	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	Programmable Module Installation	PCM	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	Programmable Module Installation	RCM	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	Programmable Module Installation	RHID	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	Programmable Parameters	Exterior Lighting	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	Programmable Parameters	RKE	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	Programmable Module Installation	ABS/TCS	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	Programmable Module Installation	IC	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	Programmable Module Installation	RKE	※
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	Programmable Module Installation	LHID	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	Programmable Module Installation	PCM	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	Programmable Module Installation	RCM	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	Programmable Module Installation	RHID	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	Programmable Parameters	Exterior Lighting	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	Programmable Parameters	RKE	●
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	Programmable Parameters	Exterior Lighting	●
ATENZA_AMC_MZ\$I	1. 8L	L8	Other	Programmable Module Installation	LCM	※
ATENZA_AMC_MZ\$I	1. 8L	L8	Other	Programmable Parameters	LCM	※
ATENZA_AMC_MZ\$I	2. 0L	LF	Other	Programmable Module Installation	LCM	※
ATENZA_AMC_MZ\$I	2. 0L	LF	Other	Programmable Parameters	LCM	※
ATENZA_AMC_MZ\$I	2. 2L	R2_T	Other	Programmable Module Installation	LCM	※
ATENZA_AMC_MZ\$I	2. 2L	R2_T	Other	Programmable Parameters	LCM	※
ATENZA_AMC_MZ\$I	2. 5L	L5	Other	Programmable Module Installation	LCM	●
ATENZA_AMC_MZ\$I	2. 5L	L5	Other	Programmable Parameters	LCM	●
ATENZA_AMC_MZ\$I	3. 7L	CA	Other	Programmable Module Installation	LCM	●
ATENZA_AMC_MZ\$I	3. 7L	CA	Other	Programmable Parameters	LCM	●
ATENZA_BMC_MZ\$I	1. 8L	L8	2007	Programmable Parameters	Exterior Lighting	●
ATENZA_BMC_MZ\$I	2. 0L	LF	2007	Programmable Parameters	Exterior Lighting	●
ATENZA_BMC_MZ\$I	2. 0L	RF_T	2007	Programmable Parameters	Exterior Lighting	●
ATENZA_BMC_MZ\$I	2. 2L	R2_T	2007	Programmable Parameters	Exterior Lighting	●
ATENZA_BMC_MZ\$I	2. 5L	L5	2007	Programmable Parameters	Exterior Lighting	●
AXELA / MAZDA3	1. 5L	ZY	Other	Programmable Module Installation	RCM	●
AXELA / MAZDA3	1. 5L	ZY	Other	Programmable Parameters	Passenger Airbag Deactivation	※
AXELA / MAZDA3	1. 6L	Y6	Other	Programmable Module Installation	RCM	●
AXELA / MAZDA3	1. 6L	Y6	Other	Programmable Module Installation	FACM	※

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
AXELA / MAZDA3	1. 6L	Y6	Other	Programmable Parameters	Passenger Airbag Deactivation	※
AXELA / MAZDA3	1. 6L	Y6	Other	Programmable Parameters	Speed Items	※
AXELA / MAZDA3	1. 6L	Y6	Other	Programmable Parameters	Tire Size / Axle Ratio	※
AXELA / MAZDA3	1. 6L	Z6	Other	Programmable Module Installation	RCM	●
AXELA / MAZDA3	1. 6L	Z6	Other	Programmable Parameters	Passenger Airbag Deactivation	※
AXELA / MAZDA3	2. 0L	LF	Other	Programmable Module Installation	RCM	●
AXELA / MAZDA3	2. 0L	LF	Other	Programmable Parameters	Passenger Airbag Deactivation	※
AXELA / MAZDA3	2. 0L	PE	Other	Programmable Module Installation	RCM	●
AXELA / MAZDA3	2. 0L	PE	Other	Programmable Parameters	Passenger Airbag Deactivation	※
AXELA / MAZDA3	2. 2L	R2_T	Other	Programmable Module Installation	RCM	●
AXELA / MAZDA3	2. 2L	R2_T	Other	Programmable Parameters	Passenger Airbag Deactivation	※
AXELA / MAZDA3	2. 3L	L3_T	Other	Programmable Module Installation	RCM	●
AXELA / MAZDA3	2. 3L	L3_T	Other	Programmable Parameters	Passenger Airbag Deactivation	※
AXELA / MAZDA3	2. 5L	L5	Other	Programmable Module Installation	RCM	●
AXELA / MAZDA3	2. 5L	L5	Other	Programmable Parameters	Passenger Airbag Deactivation	※
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003	Programmable Module Installation	ABS	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003	Programmable Module Installation	GEM	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003	Programmable Module Installation	IC	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003	Programmable Module Installation	PCM	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003	Programmable Module Installation	RCM	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003	Programmable Module Installation	EPS	※
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003	Programmable Parameters	Module Reset	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003	Programmable Parameters	Exterior Lighting	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003	Programmable Parameters	Tire Size / Axle Ratio	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	Programmable Module Installation	ABS	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	Programmable Module Installation	GEM	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	Programmable Module Installation	IC	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	Programmable Module Installation	RKE	※
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	Programmable Module Installation	PCM	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	Programmable Module Installation	RCM	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	Programmable Module Installation	EPS	※
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	Programmable Parameters	Module Reset	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	Programmable Parameters	Exterior Lighting	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	Programmable Parameters	Warning Lamps / Chimes	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	Programmable Parameters	RKE	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	Programmable Parameters	Tire Size / Axle Ratio	●
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003	Programmable Module Installation	ABS	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003	Programmable Module Installation	EPS	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003	Programmable Module Installation	GEM	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003	Programmable Module Installation	IC	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003	Programmable Module Installation	PCM	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003	Programmable Module Installation	RCM	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003	Programmable Parameters	Module Reset	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003	Programmable Parameters	Exterior Lighting	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003	Programmable Parameters	Tire Size / Axle Ratio	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	Programmable Module Installation	ABS	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	Programmable Module Installation	EPS	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	Programmable Module Installation	GEM	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	Programmable Module Installation	IC	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	Programmable Module Installation	RKE	※
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	Programmable Module Installation	PCM	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	Programmable Module Installation	RCM	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	Programmable Parameters	Module Reset	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	Programmable Parameters	Exterior Lighting	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	Programmable Parameters	Warning Lamps / Chimes	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	Programmable Parameters	RKE	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	Programmable Parameters	Tire Size / Axle Ratio	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003	Programmable Module Installation	ABS	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003	Programmable Module Installation	EPS	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003	Programmable Module Installation	GEM	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003	Programmable Module Installation	IC	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003	Programmable Module Installation	PCM	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003	Programmable Module Installation	RCM	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003	Programmable Parameters	Module Reset	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003	Programmable Parameters	Exterior Lighting	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003	Programmable Parameters	Tire Size / Axle Ratio	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	Programmable Module Installation	ABS	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	Programmable Module Installation	EPS	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	Programmable Module Installation	GEM	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	Programmable Module Installation	IC	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	Programmable Module Installation	RKE	※
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	Programmable Module Installation	PCM	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	Programmable Module Installation	RCM	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	Programmable Parameters	Module Reset	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	Programmable Parameters	Exterior Lighting	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	Programmable Parameters	Warning Lamps / Chimes	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	Programmable Parameters	RKE	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	Programmable Parameters	Tire Size / Axle Ratio	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	ABS	●
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	GEM	●
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	IC	●
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	RKE	※
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	PCM	●
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	RCM	●
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Parameters	Module Reset	●
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Parameters	Exterior Lighting	●
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Parameters	Warning Lamps / Chimes	●
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Parameters	RKE	●
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Parameters	Tire Size / Axle Ratio	●
Biante (Japan)	2. 0L	LF	2008	Programmable Module Installation	EPS	●
Biante (Japan)	2. 0L	LF	2008	Programmable Module Installation	IC	●
Biante (Japan)	2. 0L	LF	2008	Programmable Module Installation	RKE	※
Biante (Japan)	2. 0L	LF	2008	Programmable Module Installation	PCM	●
Biante (Japan)	2. 0L	LF	2008	Programmable Module Installation	RCM	●
Biante (Japan)	2. 0L	LF	2008	Programmable Parameters	Interior Lighting	●
Biante (Japan)	2. 0L	LF	2008	Programmable Parameters	Washer / Wiper	●
Biante (Japan)	2. 0L	LF	2008	Programmable Parameters	Exterior Lighting	●
Biante (Japan)	2. 0L	LF	2008	Programmable Parameters	Warning Lamps / Chimes	●
Biante (Japan)	2. 0L	LF	2008	Programmable Parameters	Brake System	●
Biante (Japan)	2. 0L	LF	2008	Programmable Parameters	RKE	※
Biante (Japan)	2. 0L	PE	2012	Programmable Module Installation	EPS	●
Biante (Japan)	2. 0L	PE	2012	Programmable Module Installation	RKE	※
Biante (Japan)	2. 0L	PE	2012	Programmable Module Installation	RCM	●
Biante (Japan)	2. 0L	PE	2012	Programmable Parameters	Interior Lighting	●
Biante (Japan)	2. 0L	PE	2012	Programmable Parameters	Washer / Wiper	●
Biante (Japan)	2. 0L	PE	2012	Programmable Parameters	Exterior Lighting	●
Biante (Japan)	2. 0L	PE	2012	Programmable Parameters	RKE	※
Biante (Japan)	2. 3L	L3	2008	Programmable Module Installation	EPS	●
Biante (Japan)	2. 3L	L3	2008	Programmable Module Installation	IC	●
Biante (Japan)	2. 3L	L3	2008	Programmable Module Installation	RKE	※
Biante (Japan)	2. 3L	L3	2008	Programmable Module Installation	PCM	●
Biante (Japan)	2. 3L	L3	2008	Programmable Module Installation	RCM	●
Biante (Japan)	2. 3L	L3	2008	Programmable Parameters	Interior Lighting	●
Biante (Japan)	2. 3L	L3	2008	Programmable Parameters	Washer / Wiper	●
Biante (Japan)	2. 3L	L3	2008	Programmable Parameters	Exterior Lighting	●
Biante (Japan)	2. 3L	L3	2008	Programmable Parameters	Warning Lamps / Chimes	●
Biante (Japan)	2. 3L	L3	2008	Programmable Parameters	Brake System	●
Biante (Japan)	2. 3L	L3	2008	Programmable Parameters	RKE	※
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF_T	2003	Programmable Module Installation	PCM	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
BONGO / BONGO BRAUNY / SPECTRON	2. 0L	RF_T	2004	Programmable Module Installation	PCM	●
Cougar	2. 5L	Duratec-VE	2001	Programmable Module Installation	ABS	●
Cougar	2. 5L	Duratec-VE	2001	Programmable Module Installation	IC	●
Cougar	2. 5L	Duratec-VE	2001	Programmable Module Installation	MC	●
Cougar	2. 5L	Duratec-VE	2001	Programmable Module Installation	REM	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Module Installation	ABS	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Module Installation	AM	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Module Installation	EPS	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Module Installation	GEM	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Module Installation	IC	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Module Installation	RKE	※
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Module Installation	LCM	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Module Installation	RCM	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Parameters	Personality	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Parameters	Interior Lighting	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Parameters	Washer / Wiper	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Parameters	Exterior Lighting	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Parameters	Security	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Parameters	RKE	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	Programmable Parameters	Power Windows	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	AM	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	GEM	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	IC	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	RKE	※
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	LCM	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	PCM	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	RCM	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006	Programmable Parameters	Exterior Lighting	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006	Programmable Parameters	Warning Lamps / Chimes	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006	Programmable Parameters	Security	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006	Programmable Parameters	RKE	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	ABS	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	AM	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	GEM	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	IC	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	RKE	※
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	LCM	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	RCM	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	Personality	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	Interior Lighting	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	Washer / Wiper	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	Exterior Lighting	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	Security	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	RKE	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	Power Windows	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	AM	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	GEM	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	IC	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	RKE	※
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	LCM	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	PCM	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Module Installation	RCM	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Parameters	Exterior Lighting	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Parameters	Warning Lamps / Chimes	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006	Programmable Parameters	RKE	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	ABS	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	AM	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	GEM	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	IC	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	RKE	※
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	LCM	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	RCM	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	Personality	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	Interior Lighting	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	Washer / Wiper	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	Exterior Lighting	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	RKE	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	Programmable Module Installation	ABS	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	Programmable Module Installation	AM	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	Programmable Module Installation	GEM	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	Programmable Module Installation	IC	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	Programmable Module Installation	RKE	※
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	Programmable Module Installation	LCM	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	Programmable Module Installation	RCM	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	Programmable Parameters	Personality	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	Programmable Parameters	Interior Lighting	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	Programmable Parameters	Washer / Wiper	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	Programmable Parameters	Exterior Lighting	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	Programmable Parameters	RKE	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007	Programmable Module Installation	AM	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007	Programmable Module Installation	IC	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007	Programmable Module Installation	RKE	※

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007	Programmable Module Installation	PCM	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007	Programmable Module Installation	RCM	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007	Programmable Parameters	Warning Lamps / Chimes	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007	Programmable Parameters	RKE	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2008	Programmable Module Installation	AM	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2008	Programmable Module Installation	IC	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2008	Programmable Module Installation	RKE	※
CX-7 (North America / General Specs.)	2. 3L	L3_T	2008	Programmable Module Installation	PCM	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2008	Programmable Module Installation	RCM	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2008	Programmable Parameters	Warning Lamps / Chimes	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2008	Programmable Parameters	RKE	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	AM	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	IC	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	RKE	※
CX-7 (North America / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	PCM	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2009	Programmable Module Installation	RCM	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	Warning Lamps / Chimes	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2009	Programmable Parameters	RKE	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Module Installation	ABS	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Module Installation	AM	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Module Installation	IC	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Module Installation	RKE	※
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Module Installation	LCM	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Module Installation	RCM	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Parameters	Personality	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Parameters	Interior Lighting	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Parameters	Washer / Wiper	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Parameters	Exterior Lighting	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Parameters	Power Door Locks	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Parameters	Security	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Parameters	RKE	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	Programmable Parameters	Power Windows	●
CX-7 (North America / General Specs.)	2. 5L	L5	2010	Programmable Module Installation	ABS	●
CX-7 (North America / General Specs.)	2. 5L	L5	2010	Programmable Module Installation	AM	●
CX-7 (North America / General Specs.)	2. 5L	L5	2010	Programmable Module Installation	IC	●
CX-7 (North America / General Specs.)	2. 5L	L5	2010	Programmable Module Installation	RKE	※
CX-7 (North America / General Specs.)	2. 5L	L5	2010	Programmable Module Installation	LCM	●
CX-7 (North America / General Specs.)	2. 5L	L5	2010	Programmable Module Installation	RCM	●
CX-7 (North America / General Specs.)	2. 5L	L5	2010	Programmable Parameters	Personality	●
CX-7 (North America / General Specs.)	2. 5L	L5	2010	Programmable Parameters	Interior Lighting	●
CX-7 (North America / General Specs.)	2. 5L	L5	2010	Programmable Parameters	Washer / Wiper	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
CX-7 (North America / General Specs.)	2.5L	L5	2010	Programmable Parameters	Exterior Lighting	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	Programmable Parameters	Power Door Locks	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	Programmable Parameters	Security	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	Programmable Parameters	RKE	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	Programmable Parameters	Power Windows	●
CX-9 (North America / General Specs.)	3.5L	CY	2007	Programmable Module Installation	AM	●
CX-9 (North America / General Specs.)	3.5L	CY	2007	Programmable Module Installation	IC	●
CX-9 (North America / General Specs.)	3.5L	CY	2007	Programmable Module Installation	RKE	※
CX-9 (North America / General Specs.)	3.5L	CY	2007	Programmable Module Installation	LCM	●
CX-9 (North America / General Specs.)	3.5L	CY	2007	Programmable Module Installation	PCM	●
CX-9 (North America / General Specs.)	3.5L	CY	2007	Programmable Module Installation	RCM	●
CX-9 (North America / General Specs.)	3.5L	CY	2007	Programmable Parameters	Exterior Lighting	●
CX-9 (North America / General Specs.)	3.5L	CY	2007	Programmable Parameters	Warning Lamps / Chimes	●
CX-9 (North America / General Specs.)	3.5L	CY	2007	Programmable Parameters	RKE	●
CX-9 (North America / General Specs.)	3.5L	CY	Other	Programmable Module Installation	AM	●
CX-9 (North America / General Specs.)	3.5L	CY	Other	Programmable Module Installation	IC	●
CX-9 (North America / General Specs.)	3.5L	CY	Other	Programmable Module Installation	RKE	※
CX-9 (North America / General Specs.)	3.5L	CY	Other	Programmable Module Installation	LCM	●
CX-9 (North America / General Specs.)	3.5L	CY	Other	Programmable Module Installation	PCM	●
CX-9 (North America / General Specs.)	3.5L	CY	Other	Programmable Module Installation	RCM	●
CX-9 (North America / General Specs.)	3.5L	CY	Other	Programmable Parameters	Exterior Lighting	●
CX-9 (North America / General Specs.)	3.5L	CY	Other	Programmable Parameters	Warning Lamps / Chimes	●
CX-9 (North America / General Specs.)	3.5L	CY	Other	Programmable Parameters	RKE	●
CX-9 (North America / General Specs.)	3.7L	CA	2008	Programmable Module Installation	AM	●
CX-9 (North America / General Specs.)	3.7L	CA	2008	Programmable Module Installation	IC	●
CX-9 (North America / General Specs.)	3.7L	CA	2008	Programmable Module Installation	RKE	※
CX-9 (North America / General Specs.)	3.7L	CA	2008	Programmable Module Installation	LCM	●
CX-9 (North America / General Specs.)	3.7L	CA	2008	Programmable Module Installation	PCM	●
CX-9 (North America / General Specs.)	3.7L	CA	2008	Programmable Module Installation	RCM	●
CX-9 (North America / General Specs.)	3.7L	CA	2008	Programmable Parameters	Exterior Lighting	●
CX-9 (North America / General Specs.)	3.7L	CA	2008	Programmable Parameters	Warning Lamps / Chimes	●
CX-9 (North America / General Specs.)	3.7L	CA	2008	Programmable Parameters	RKE	●
CX-9 (North America / General Specs.)	3.7L	CA	2009	Programmable Module Installation	AM	●
CX-9 (North America / General Specs.)	3.7L	CA	2009	Programmable Module Installation	IC	●
CX-9 (North America / General Specs.)	3.7L	CA	2009	Programmable Module Installation	RKE	※
CX-9 (North America / General Specs.)	3.7L	CA	2009	Programmable Module Installation	LCM	●
CX-9 (North America / General Specs.)	3.7L	CA	2009	Programmable Module Installation	RCM	●
CX-9 (North America / General Specs.)	3.7L	CA	2009	Programmable Module Installation	PCM	※
CX-9 (North America / General Specs.)	3.7L	CA	2009	Programmable Parameters	Exterior Lighting	●
CX-9 (North America / General Specs.)	3.7L	CA	2009	Programmable Parameters	Warning Lamps / Chimes	●
CX-9 (North America / General Specs.)	3.7L	CA	2009	Programmable Parameters	RKE	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
CX-9 (North America / General Specs.)	3. 7L	CA	2010	Programmable Module Installation	AM	●
CX-9 (North America / General Specs.)	3. 7L	CA	2010	Programmable Module Installation	IC	●
CX-9 (North America / General Specs.)	3. 7L	CA	2010	Programmable Module Installation	RKE	※
CX-9 (North America / General Specs.)	3. 7L	CA	2010	Programmable Module Installation	LCM	●
CX-9 (North America / General Specs.)	3. 7L	CA	2010	Programmable Module Installation	RCM	●
CX-9 (North America / General Specs.)	3. 7L	CA	2010	Programmable Module Installation	PCM	※
CX-9 (North America / General Specs.)	3. 7L	CA	2010	Programmable Parameters	Exterior Lighting	●
CX-9 (North America / General Specs.)	3. 7L	CA	2010	Programmable Parameters	Warning Lamps / Chimes	●
CX-9 (North America / General Specs.)	3. 7L	CA	2010	Programmable Parameters	RKE	●
CX-9 (North America / General Specs.)	3. 7L	CA	2011	Programmable Module Installation	AM	●
CX-9 (North America / General Specs.)	3. 7L	CA	2011	Programmable Module Installation	IC	●
CX-9 (North America / General Specs.)	3. 7L	CA	2011	Programmable Module Installation	RKE	※
CX-9 (North America / General Specs.)	3. 7L	CA	2011	Programmable Module Installation	LCM	●
CX-9 (North America / General Specs.)	3. 7L	CA	2011	Programmable Module Installation	RCM	●
CX-9 (North America / General Specs.)	3. 7L	CA	2011	Programmable Parameters	Exterior Lighting	●
CX-9 (North America / General Specs.)	3. 7L	CA	2011	Programmable Parameters	Warning Lamps / Chimes	●
CX-9 (North America / General Specs.)	3. 7L	CA	2011	Programmable Parameters	RKE	●
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	P3	Other	Programmable Parameters	RKE	※
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2002	Programmable Module Installation	IC	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2002	Programmable Module Installation	RKE	※
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2002	Programmable Module Installation	PCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2002	Programmable Module Installation	RCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2004	Programmable Module Installation	IC	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2004	Programmable Module Installation	RKE	※
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2004	Programmable Module Installation	PCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2004	Programmable Module Installation	RCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2005	Programmable Module Installation	EPS	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2005	Programmable Module Installation	IC	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2005	Programmable Module Installation	RKE	※
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2005	Programmable Module Installation	PCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2005	Programmable Module Installation	RCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2005	Programmable Parameters	Exterior Lighting	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2005	Programmable Parameters	Warning Lamps / Chimes	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2005	Programmable Parameters	RKE	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	Other	Programmable Module Installation	EPS	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	Other	Programmable Module Installation	IC	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	Other	Programmable Module Installation	RKE	※
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	Other	Programmable Module Installation	PCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	Other	Programmable Module Installation	RCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	Other	Programmable Parameters	Exterior Lighting	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	Other	Programmable Parameters	Warning Lamps / Chimes	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	Other	Programmable Parameters	RKE	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2002	Programmable Module Installation	IC	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2002	Programmable Module Installation	RKE	※
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2002	Programmable Module Installation	PCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2002	Programmable Module Installation	RCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2004	Programmable Module Installation	IC	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2004	Programmable Module Installation	RKE	※
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2004	Programmable Module Installation	PCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2004	Programmable Module Installation	RCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2004	Programmable Parameters	RKE	※
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2005	Programmable Module Installation	EPS	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2005	Programmable Module Installation	IC	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2005	Programmable Module Installation	RKE	※
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2005	Programmable Module Installation	PCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2005	Programmable Module Installation	RCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2005	Programmable Parameters	Exterior Lighting	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2005	Programmable Parameters	Warning Lamps / Chimes	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2005	Programmable Parameters	RKE	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	Other	Programmable Module Installation	EPS	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	Other	Programmable Module Installation	IC	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	Other	Programmable Module Installation	RKE	※
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	Other	Programmable Module Installation	PCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	Other	Programmable Module Installation	RCM	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	Other	Programmable Parameters	Exterior Lighting	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	Other	Programmable Parameters	Warning Lamps / Chimes	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	Other	Programmable Parameters	RKE	※
Escape / Tribute (- 2006/3)	2. 3L	L3	2003	Programmable Module Installation	ABS	●
Escape / Tribute (- 2006/3)	2. 3L	L3	2003	Programmable Module Installation	GEM	●
Escape / Tribute (- 2006/3)	2. 3L	L3	2003	Programmable Module Installation	IC	●
Escape / Tribute (- 2006/3)	2. 3L	L3	2003	Programmable Module Installation	PCM	●
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	Programmable Module Installation	ABS	●
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	Programmable Module Installation	GEM	●
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	Programmable Module Installation	IC	●
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	Programmable Module Installation	PCM	●
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	Programmable Parameters	Module Reset	●
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	Programmable Parameters	Warning Lamps / Chimes	●
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	Programmable Parameters	Speed Items	●
Escape / Tribute / Maverick	2. 0L	Zetec	2001	Programmable Module Installation	GEM	●
Escape / Tribute / Maverick	2. 0L	Zetec	2001	Programmable Module Installation	IC	●
Escape / Tribute / Maverick	2. 0L	Zetec	2001	Programmable Parameters	Personality	●
Escape / Tribute / Maverick	2. 0L	Zetec	2001	Programmable Parameters	Warning Lamps / Chimes	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
Escape / Tribute / Maverick	2.0L	Zetec	2001	Programmable Parameters	Security	●
Escape / Tribute / Maverick	2.0L	Zetec	2002	Programmable Module Installation	GEM	●
Escape / Tribute / Maverick	2.0L	Zetec	2002	Programmable Module Installation	IC	●
Escape / Tribute / Maverick	2.0L	Zetec	2002	Programmable Parameters	Personality	●
Escape / Tribute / Maverick	2.0L	Zetec	2002	Programmable Parameters	Warning Lamps / Chimes	●
Escape / Tribute / Maverick	2.0L	Zetec	2002	Programmable Parameters	Security	●
Escape / Tribute / Maverick	2.0L	Zetec	2003	Programmable Module Installation	GEM	●
Escape / Tribute / Maverick	2.0L	Zetec	2003	Programmable Module Installation	IC	●
Escape / Tribute / Maverick	2.0L	Zetec	2003	Programmable Parameters	Personality	※
Escape / Tribute / Maverick	2.0L	Zetec	2003	Programmable Parameters	Warning Lamps / Chimes	●
Escape / Tribute / Maverick	2.0L	Zetec	2003	Programmable Parameters	Security	●
Escape / Tribute / Maverick	2.0L	Zetec	2004	Programmable Module Installation	GEM	●
Escape / Tribute / Maverick	2.0L	Zetec	2004	Programmable Module Installation	IC	●
Escape / Tribute / Maverick	2.0L	Zetec	2004	Programmable Parameters	Personality	●
Escape / Tribute / Maverick	2.0L	Zetec	2004	Programmable Parameters	Warning Lamps / Chimes	●
Escape / Tribute / Maverick	2.0L	Zetec	2004	Programmable Parameters	Security	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006	Programmable Module Installation	ABS	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006	Programmable Module Installation	GEM	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006	Programmable Module Installation	IC	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006	Programmable Parameters	Personality	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006	Programmable Parameters	Exterior Lighting	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006	Programmable Parameters	Warning Lamps / Chimes	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006	Programmable Parameters	Power Door Locks	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006	Programmable Parameters	Security	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006	Programmable Parameters	Speed Items	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2007	Programmable Module Installation	ABS	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2007	Programmable Module Installation	GEM	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2007	Programmable Module Installation	IC	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2007	Programmable Parameters	Personality	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2007	Programmable Parameters	Exterior Lighting	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2007	Programmable Parameters	Warning Lamps / Chimes	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2007	Programmable Parameters	Power Door Locks	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2007	Programmable Parameters	Security	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2007	Programmable Parameters	Speed Items	●
Escape / Tribute / Maverick	3.0L	4V	2001	Programmable Module Installation	GEM	●
Escape / Tribute / Maverick	3.0L	4V	2001	Programmable Module Installation	IC	●
Escape / Tribute / Maverick	3.0L	4V	2001	Programmable Parameters	Personality	●
Escape / Tribute / Maverick	3.0L	4V	2001	Programmable Parameters	Warning Lamps / Chimes	●
Escape / Tribute / Maverick	3.0L	4V	2001	Programmable Parameters	Security	●
Escape / Tribute / Maverick	3.0L	4V	2002	Programmable Module Installation	GEM	●
Escape / Tribute / Maverick	3.0L	4V	2002	Programmable Module Installation	IC	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
Escape / Tribute / Maverick	3.0L	4V	2002	Programmable Parameters	Personality	●
Escape / Tribute / Maverick	3.0L	4V	2002	Programmable Parameters	Warning Lamps / Chimes	●
Escape / Tribute / Maverick	3.0L	4V	2002	Programmable Parameters	Security	●
Escape / Tribute / Maverick	3.0L	4V	2003	Programmable Module Installation	GEM	●
Escape / Tribute / Maverick	3.0L	4V	2003	Programmable Module Installation	IC	●
Escape / Tribute / Maverick	3.0L	4V	2003	Programmable Parameters	Personality	※
Escape / Tribute / Maverick	3.0L	4V	2003	Programmable Parameters	Warning Lamps / Chimes	※
Escape / Tribute / Maverick	3.0L	4V	2003	Programmable Parameters	Security	●
Escape / Tribute / Maverick	3.0L	4V	2004	Programmable Module Installation	GEM	●
Escape / Tribute / Maverick	3.0L	4V	2004	Programmable Module Installation	IC	●
Escape / Tribute / Maverick	3.0L	4V	2004	Programmable Parameters	Personality	●
Escape / Tribute / Maverick	3.0L	4V	2004	Programmable Parameters	Warning Lamps / Chimes	●
Escape / Tribute / Maverick	3.0L	4V	2004	Programmable Parameters	Security	●
Escape / Tribute / Maverick	3.0L	4V	2006	Programmable Module Installation	ABS	●
Escape / Tribute / Maverick	3.0L	4V	2006	Programmable Module Installation	GEM	●
Escape / Tribute / Maverick	3.0L	4V	2006	Programmable Module Installation	IC	●
Escape / Tribute / Maverick	3.0L	4V	2006	Programmable Parameters	Personality	●
Escape / Tribute / Maverick	3.0L	4V	2006	Programmable Parameters	Exterior Lighting	●
Escape / Tribute / Maverick	3.0L	4V	2006	Programmable Parameters	Warning Lamps / Chimes	●
Escape / Tribute / Maverick	3.0L	4V	2006	Programmable Parameters	Power Door Locks	●
Escape / Tribute / Maverick	3.0L	4V	2006	Programmable Parameters	Security	●
Escape / Tribute / Maverick	3.0L	4V	2006	Programmable Parameters	Speed Items	●
Escape / Tribute / Maverick	3.0L	4V	2007	Programmable Module Installation	ABS	●
Escape / Tribute / Maverick	3.0L	4V	2007	Programmable Module Installation	GEM	●
Escape / Tribute / Maverick	3.0L	4V	2007	Programmable Module Installation	IC	●
Escape / Tribute / Maverick	3.0L	4V	2007	Programmable Parameters	Personality	●
Escape / Tribute / Maverick	3.0L	4V	2007	Programmable Parameters	Exterior Lighting	●
Escape / Tribute / Maverick	3.0L	4V	2007	Programmable Parameters	Warning Lamps / Chimes	●
Escape / Tribute / Maverick	3.0L	4V	2007	Programmable Parameters	Power Door Locks	●
Escape / Tribute / Maverick	3.0L	4V	2007	Programmable Parameters	Security	●
Escape / Tribute / Maverick	3.0L	4V	2007	Programmable Parameters	Speed Items	●
Escape /Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	Programmable Module Installation	ABS	●
Escape /Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	Programmable Module Installation	ACM	※
Escape /Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	Programmable Module Installation	FDIM	●
Escape /Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	Programmable Module Installation	PSCM	※
Escape /Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	Programmable Module Installation	RCM	●
Escape /Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	Programmable Parameters	Audio Configure	●
Escape /Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	Programmable Parameters	Warning Lamps / Chimes	●
Escape /Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	Programmable Parameters	Speed Items	●
Escape /Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	Programmable Module Installation	ABS	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
Escape /Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	Programmable Module Installation	ACM	※
Escape /Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	Programmable Module Installation	FDIM	●
Escape /Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	Programmable Module Installation	PSCM	※
Escape /Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	Programmable Module Installation	RCM	●
Escape /Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	Programmable Parameters	Audio Configure	●
Escape /Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	Programmable Parameters	Warning Lamps / Chimes	●
Escape /Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	Programmable Parameters	Speed Items	●
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009	Programmable Module Installation	PSCM	※
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2010	Programmable Module Installation	ABS	●
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2010	Programmable Module Installation	FDIM	●
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2010	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2010	Programmable Module Installation	IC	●
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2010	Programmable Module Installation	PSCM	●
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2011	Programmable Module Installation	ABS	●
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2011	Programmable Module Installation	FDIM	●
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2011	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2011	Programmable Module Installation	IC	●
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2011	Programmable Module Installation	PSCM	●
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2012	Programmable Module Installation	ABS	●
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2012	Programmable Module Installation	ACM	※
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2012	Programmable Module Installation	FDIM	●
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2012	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2012	Programmable Module Installation	IC	●
Escape /Tribute / Mariner	2. 5L	DURATEC-HE / I4	2012	Programmable Module Installation	PSCM	●
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009	Programmable Module Installation	PSCM	※
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2010	Programmable Module Installation	FDIM	●
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2010	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2010	Programmable Module Installation	IC	●
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2010	Programmable Module Installation	PSCM	●
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2011	Programmable Module Installation	FDIM	●
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2011	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2011	Programmable Module Installation	IC	●
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2011	Programmable Module Installation	PSCM	●
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2012	Programmable Module Installation	ACM	※
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2012	Programmable Module Installation	FDIM	●
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2012	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2012	Programmable Module Installation	IC	●
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2012	Programmable Module Installation	PSCM	●
Escape /Tribute / Mariner	3. 0L	4V	2008	Programmable Module Installation	ABS	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
Escape /Tribute / Mariner	3.0L	4V	2008	Programmable Module Installation	ACM	※
Escape /Tribute / Mariner	3.0L	4V	2008	Programmable Module Installation	FDIM	●
Escape /Tribute / Mariner	3.0L	4V	2008	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	3.0L	4V	2008	Programmable Module Installation	PSCM	※
Escape /Tribute / Mariner	3.0L	4V	2008	Programmable Module Installation	RCM	●
Escape /Tribute / Mariner	3.0L	4V	2008	Programmable Parameters	Audio Configure	●
Escape /Tribute / Mariner	3.0L	4V	2008	Programmable Parameters	Warning Lamps / Chimes	●
Escape /Tribute / Mariner	3.0L	4V	2008	Programmable Parameters	Speed Items	●
Escape /Tribute / Mariner	3.0L	4V	2009	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	3.0L	4V	2009	Programmable Module Installation	PSCM	※
Escape /Tribute / Mariner	3.0L	4V	2010	Programmable Module Installation	ABS	●
Escape /Tribute / Mariner	3.0L	4V	2010	Programmable Module Installation	FDIM	●
Escape /Tribute / Mariner	3.0L	4V	2010	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	3.0L	4V	2010	Programmable Module Installation	IC	●
Escape /Tribute / Mariner	3.0L	4V	2010	Programmable Module Installation	PSCM	●
Escape /Tribute / Mariner	3.0L	4V	2011	Programmable Module Installation	ABS	●
Escape /Tribute / Mariner	3.0L	4V	2011	Programmable Module Installation	FDIM	●
Escape /Tribute / Mariner	3.0L	4V	2011	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	3.0L	4V	2011	Programmable Module Installation	IC	●
Escape /Tribute / Mariner	3.0L	4V	2011	Programmable Module Installation	PSCM	●
Escape /Tribute / Mariner	3.0L	4V	2012	Programmable Module Installation	ABS	●
Escape /Tribute / Mariner	3.0L	4V	2012	Programmable Module Installation	ACM	※
Escape /Tribute / Mariner	3.0L	4V	2012	Programmable Module Installation	FDIM	●
Escape /Tribute / Mariner	3.0L	4V	2012	Programmable Module Installation	HVAC	※
Escape /Tribute / Mariner	3.0L	4V	2012	Programmable Module Installation	IC	●
Escape /Tribute / Mariner	3.0L	4V	2012	Programmable Module Installation	PSCM	●
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999.8	Programmable Module Installation	GEM	●
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1999.5	Programmable Module Installation	GEM	●
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000	Programmable Module Installation	GEM	●
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999.5	Programmable Module Installation	GEM	●
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1999.5	Programmable Module Installation	GEM	●
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999.8	Programmable Module Installation	GEM	●
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000	Programmable Module Installation	GEM	●
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	Programmable Module Installation	GEM	●
MAZDA2 (EURO STG3/4 Specs.)	1.25L	MZI	2002	Programmable Module Installation	IC	●
MAZDA2 (EURO STG3/4 Specs.)	1.25L	MZI	2002	Programmable Module Installation	PCM	※
MAZDA2 (EURO STG3/4 Specs.)	1.25L	MZI	2002	Programmable Parameters	Tire Size / Axle Ratio	※
MAZDA2 (EURO STG3/4 Specs.)	1.25L	MZI	2006	Programmable Module Installation	IC	●
MAZDA2 (EURO STG3/4 Specs.)	1.25L	MZI	2006	Programmable Module Installation	PCM	※
MAZDA2 (EURO STG3/4 Specs.)	1.25L	MZI	2006	Programmable Parameters	Tire Size / Axle Ratio	※
MAZDA2 (EURO STG3/4 Specs.)	1.4L	MZ_CD DI	2002	Programmable Module Installation	IC	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA2 (EURO STG3/4 Specs.)	1.4L	MZ_CD DI	2002	Programmable Module Installation	PCM	※
MAZDA2 (EURO STG3/4 Specs.)	1.4L	MZ_CD DI	2002	Programmable Parameters	Tire Size / Axle Ratio	※
MAZDA2 (EURO STG3/4 Specs.)	1.4L	MZ_CD DI	2006	Programmable Module Installation	IC	●
MAZDA2 (EURO STG3/4 Specs.)	1.4L	MZ_CD DI	2006	Programmable Module Installation	PCM	※
MAZDA2 (EURO STG3/4 Specs.)	1.4L	MZ_CD DI	2006	Programmable Parameters	Tire Size / Axle Ratio	※
MAZDA2 (EURO STG3/4 Specs.)	1.4L	MZI	2002	Programmable Module Installation	IC	●
MAZDA2 (EURO STG3/4 Specs.)	1.4L	MZI	2002	Programmable Module Installation	PCM	※
MAZDA2 (EURO STG3/4 Specs.)	1.4L	MZI	2002	Programmable Parameters	Tire Size / Axle Ratio	※
MAZDA2 (EURO STG3/4 Specs.)	1.4L	MZI	2006	Programmable Module Installation	IC	●
MAZDA2 (EURO STG3/4 Specs.)	1.4L	MZI	2006	Programmable Module Installation	PCM	※
MAZDA2 (EURO STG3/4 Specs.)	1.4L	MZI	2006	Programmable Parameters	Tire Size / Axle Ratio	※
MAZDA2 (EURO STG3/4 Specs.)	1.6L	MZI	2002	Programmable Module Installation	IC	●
MAZDA2 (EURO STG3/4 Specs.)	1.6L	MZI	2002	Programmable Module Installation	PCM	※
MAZDA2 (EURO STG3/4 Specs.)	1.6L	MZI	2002	Programmable Parameters	Tire Size / Axle Ratio	※
MAZDA2 (EURO STG3/4 Specs.)	1.6L	MZI	2006	Programmable Module Installation	IC	●
MAZDA2 (EURO STG3/4 Specs.)	1.6L	MZI	2006	Programmable Module Installation	PCM	※
MAZDA2 (EURO STG3/4 Specs.)	1.6L	MZI	2006	Programmable Parameters	Tire Size / Axle Ratio	※
MAZDA3 (China / General)	1.6L	Z6	2007	Programmable Module Installation	ABS	●
MAZDA3 (China / General)	1.6L	Z6	2007	Programmable Module Installation	GEM	●
MAZDA3 (China / General)	1.6L	Z6	2007	Programmable Module Installation	IC	●
MAZDA3 (China / General)	1.6L	Z6	2007	Programmable Module Installation	RKE	※
MAZDA3 (China / General)	1.6L	Z6	2007	Programmable Module Installation	PCM	●
MAZDA3 (China / General)	1.6L	Z6	2007	Programmable Module Installation	RCM	●
MAZDA3 (China / General)	1.6L	Z6	2007	Programmable Parameters	Module Reset	●
MAZDA3 (China / General)	1.6L	Z6	2007	Programmable Parameters	Exterior Lighting	●
MAZDA3 (China / General)	1.6L	Z6	2007	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (China / General)	1.6L	Z6	2007	Programmable Parameters	RKE	●
MAZDA3 (China / General)	1.6L	Z6	2007	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (China / General)	2.0L	LF	2007	Programmable Module Installation	ABS	●
MAZDA3 (China / General)	2.0L	LF	2007	Programmable Module Installation	EPS	●
MAZDA3 (China / General)	2.0L	LF	2007	Programmable Module Installation	GEM	●
MAZDA3 (China / General)	2.0L	LF	2007	Programmable Module Installation	IC	●
MAZDA3 (China / General)	2.0L	LF	2007	Programmable Module Installation	RKE	※
MAZDA3 (China / General)	2.0L	LF	2007	Programmable Module Installation	PCM	●
MAZDA3 (China / General)	2.0L	LF	2007	Programmable Module Installation	RCM	●
MAZDA3 (China / General)	2.0L	LF	2007	Programmable Parameters	Module Reset	●
MAZDA3 (China / General)	2.0L	LF	2007	Programmable Parameters	Exterior Lighting	●
MAZDA3 (China / General)	2.0L	LF	2007	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (China / General)	2.0L	LF	2007	Programmable Parameters	RKE	●
MAZDA3 (China / General)	2.0L	LF	2007	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003	Programmable Module Installation	ABS	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003	Programmable Module Installation	GEM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003	Programmable Module Installation	IC	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003	Programmable Module Installation	PCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003	Programmable Module Installation	RCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003	Programmable Parameters	Module Reset	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003	Programmable Parameters	Exterior Lighting	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	Programmable Module Installation	ABS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	Programmable Module Installation	GEM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	Programmable Module Installation	IC	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	Programmable Module Installation	RKE	※
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	Programmable Module Installation	PCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	Programmable Module Installation	RCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	Programmable Parameters	Module Reset	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	Programmable Parameters	Exterior Lighting	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	Programmable Parameters	RKE	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003	Programmable Module Installation	ABS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003	Programmable Module Installation	EPS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003	Programmable Module Installation	FACM	※
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003	Programmable Module Installation	GEM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003	Programmable Module Installation	IC	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003	Programmable Module Installation	RCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003	Programmable Module Installation	PCM	※
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003	Programmable Parameters	Module Reset	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003	Programmable Parameters	Exterior Lighting	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	Programmable Module Installation	ABS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	Programmable Module Installation	EPS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	Programmable Module Installation	FACM	※
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	Programmable Module Installation	GEM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	Programmable Module Installation	IC	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	Programmable Module Installation	RKE	※
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	Programmable Module Installation	RCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	Programmable Module Installation	PCM	※
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	Programmable Parameters	Module Reset	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	Programmable Parameters	Exterior Lighting	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	Programmable Parameters	RKE	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003	Programmable Module Installation	ABS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003	Programmable Module Installation	GEM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003	Programmable Module Installation	IC	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003	Programmable Module Installation	PCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003	Programmable Module Installation	RCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003	Programmable Parameters	Module Reset	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003	Programmable Parameters	Exterior Lighting	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	Programmable Module Installation	ABS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	Programmable Module Installation	GEM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	Programmable Module Installation	IC	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	Programmable Module Installation	RKE	※
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	Programmable Module Installation	PCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	Programmable Module Installation	RCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	Programmable Parameters	Module Reset	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	Programmable Parameters	Exterior Lighting	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	Programmable Parameters	RKE	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003	Programmable Module Installation	ABS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003	Programmable Module Installation	EPS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003	Programmable Module Installation	GEM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003	Programmable Module Installation	IC	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003	Programmable Module Installation	PCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003	Programmable Module Installation	RCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003	Programmable Parameters	Module Reset	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003	Programmable Parameters	Exterior Lighting	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	Programmable Module Installation	ABS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	Programmable Module Installation	EPS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	Programmable Module Installation	GEM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	Programmable Module Installation	IC	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	Programmable Module Installation	RKE	※
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	Programmable Module Installation	PCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	Programmable Module Installation	RCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	Programmable Parameters	Module Reset	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	Programmable Parameters	Exterior Lighting	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	Programmable Parameters	RKE	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Module Installation	ABS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Module Installation	FFH	※
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Module Installation	GEM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Module Installation	IC	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Module Installation	RKE	※
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Module Installation	PCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Module Installation	RCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Parameters	Module Reset	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Parameters	Exterior Lighting	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Parameters	PCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Parameters	RKE	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF_T	2006	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Programmable Module Installation	ABS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Programmable Module Installation	EPS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Programmable Module Installation	GEM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Programmable Module Installation	IC	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Programmable Module Installation	PCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Programmable Module Installation	RCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Programmable Parameters	Module Reset	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Programmable Parameters	Exterior Lighting	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	Programmable Module Installation	ABS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	Programmable Module Installation	EPS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	Programmable Module Installation	GEM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	Programmable Module Installation	IC	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	Programmable Module Installation	RKE	※
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	Programmable Module Installation	PCM	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	Programmable Module Installation	RCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	Programmable Parameters	Module Reset	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	Programmable Parameters	Exterior Lighting	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	Programmable Parameters	RKE	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	Programmable Module Installation	ABS	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	Programmable Module Installation	GEM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	Programmable Module Installation	IC	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	Programmable Module Installation	RKE	※
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	Programmable Module Installation	PCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	Programmable Module Installation	RCM	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	Programmable Parameters	Module Reset	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	Programmable Parameters	Exterior Lighting	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	Programmable Parameters	RKE	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (North America / General)	1.6L	Z6	2006	Programmable Module Installation	ABS	●
MAZDA3 (North America / General)	1.6L	Z6	2006	Programmable Module Installation	GEM	●
MAZDA3 (North America / General)	1.6L	Z6	2006	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	1.6L	Z6	2006	Programmable Module Installation	RKE	※
MAZDA3 (North America / General)	1.6L	Z6	2006	Programmable Module Installation	PCM	●
MAZDA3 (North America / General)	1.6L	Z6	2006	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	1.6L	Z6	2006	Programmable Module Installation	TPM	※
MAZDA3 (North America / General)	1.6L	Z6	2006	Programmable Parameters	Module Reset	●
MAZDA3 (North America / General)	1.6L	Z6	2006	Programmable Parameters	Exterior Lighting	●
MAZDA3 (North America / General)	1.6L	Z6	2006	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (North America / General)	1.6L	Z6	2006	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (North America / General)	1.6L	Z6	2012	Programmable Module Installation	ABS	●
MAZDA3 (North America / General)	1.6L	Z6	2012	Programmable Module Installation	GEM	●
MAZDA3 (North America / General)	1.6L	Z6	2012	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	1.6L	Z6	2012	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	1.6L	Z6	2012	Programmable Parameters	Module Reset	●
MAZDA3 (North America / General)	1.6L	Z6	2012	Programmable Parameters	Exterior Lighting	●
MAZDA3 (North America / General)	1.6L	Z6	2012	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (North America / General)	2.0L	LF	2004	Programmable Module Installation	ABS	●
MAZDA3 (North America / General)	2.0L	LF	2004	Programmable Module Installation	EPS	●
MAZDA3 (North America / General)	2.0L	LF	2004	Programmable Module Installation	GEM	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA3 (North America / General)	2.0L	LF	2004	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	2.0L	LF	2004	Programmable Module Installation	PCM	●
MAZDA3 (North America / General)	2.0L	LF	2004	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	2.0L	LF	2004	Programmable Module Installation	TPM	●
MAZDA3 (North America / General)	2.0L	LF	2004	Programmable Parameters	Module Reset	●
MAZDA3 (North America / General)	2.0L	LF	2004	Programmable Parameters	Exterior Lighting	●
MAZDA3 (North America / General)	2.0L	LF	2004	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (North America / General)	2.0L	LF	2004	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (North America / General)	2.0L	LF	2005	Programmable Module Installation	ABS	●
MAZDA3 (North America / General)	2.0L	LF	2005	Programmable Module Installation	EPS	●
MAZDA3 (North America / General)	2.0L	LF	2005	Programmable Module Installation	GEM	●
MAZDA3 (North America / General)	2.0L	LF	2005	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	2.0L	LF	2005	Programmable Module Installation	PCM	●
MAZDA3 (North America / General)	2.0L	LF	2005	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	2.0L	LF	2005	Programmable Module Installation	TPM	●
MAZDA3 (North America / General)	2.0L	LF	2005	Programmable Parameters	Module Reset	●
MAZDA3 (North America / General)	2.0L	LF	2005	Programmable Parameters	Exterior Lighting	●
MAZDA3 (North America / General)	2.0L	LF	2005	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (North America / General)	2.0L	LF	2005	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (North America / General)	2.0L	LF	2006	Programmable Module Installation	ABS	●
MAZDA3 (North America / General)	2.0L	LF	2006	Programmable Module Installation	EPS	●
MAZDA3 (North America / General)	2.0L	LF	2006	Programmable Module Installation	GEM	●
MAZDA3 (North America / General)	2.0L	LF	2006	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	2.0L	LF	2006	Programmable Module Installation	RKE	※
MAZDA3 (North America / General)	2.0L	LF	2006	Programmable Module Installation	PCM	●
MAZDA3 (North America / General)	2.0L	LF	2006	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	2.0L	LF	2006	Programmable Module Installation	TPM	※
MAZDA3 (North America / General)	2.0L	LF	2006	Programmable Parameters	Module Reset	●
MAZDA3 (North America / General)	2.0L	LF	2006	Programmable Parameters	Exterior Lighting	●
MAZDA3 (North America / General)	2.0L	LF	2006	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (North America / General)	2.0L	LF	2006	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (North America / General)	2.0L	LF	2007	Programmable Module Installation	ABS	●
MAZDA3 (North America / General)	2.0L	LF	2007	Programmable Module Installation	EPS	●
MAZDA3 (North America / General)	2.0L	LF	2007	Programmable Module Installation	GEM	●
MAZDA3 (North America / General)	2.0L	LF	2007	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	2.0L	LF	2007	Programmable Module Installation	PCM	●
MAZDA3 (North America / General)	2.0L	LF	2007	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	2.0L	LF	2007	Programmable Module Installation	TPM	●
MAZDA3 (North America / General)	2.0L	LF	2007	Programmable Parameters	Module Reset	●
MAZDA3 (North America / General)	2.0L	LF	2007	Programmable Parameters	Exterior Lighting	●
MAZDA3 (North America / General)	2.0L	LF	2007	Programmable Parameters	Warning Lamps / Chimes	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA3 (North America / General)	2.0L	LF	2007	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (North America / General)	2.0L	LF	2008	Programmable Module Installation	ABS	●
MAZDA3 (North America / General)	2.0L	LF	2008	Programmable Module Installation	EPS	●
MAZDA3 (North America / General)	2.0L	LF	2008	Programmable Module Installation	GEM	●
MAZDA3 (North America / General)	2.0L	LF	2008	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	2.0L	LF	2008	Programmable Module Installation	PCM	●
MAZDA3 (North America / General)	2.0L	LF	2008	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	2.0L	LF	2008	Programmable Module Installation	TPM	●
MAZDA3 (North America / General)	2.0L	LF	2008	Programmable Parameters	Module Reset	●
MAZDA3 (North America / General)	2.0L	LF	2008	Programmable Parameters	Exterior Lighting	●
MAZDA3 (North America / General)	2.0L	LF	2008	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (North America / General)	2.0L	LF	2008	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (North America / General)	2.0L	LF	2009	Programmable Module Installation	ABS	●
MAZDA3 (North America / General)	2.0L	LF	2009	Programmable Module Installation	EPS	●
MAZDA3 (North America / General)	2.0L	LF	2009	Programmable Module Installation	GEM	●
MAZDA3 (North America / General)	2.0L	LF	2009	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	2.0L	LF	2009	Programmable Module Installation	PCM	●
MAZDA3 (North America / General)	2.0L	LF	2009	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	2.0L	LF	2009	Programmable Module Installation	TPM	●
MAZDA3 (North America / General)	2.0L	LF	2009	Programmable Parameters	Module Reset	●
MAZDA3 (North America / General)	2.0L	LF	2009	Programmable Parameters	Exterior Lighting	●
MAZDA3 (North America / General)	2.0L	LF	2009	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (North America / General)	2.0L	LF	2009	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (North America / General)	2.3L	L3	2004	Programmable Module Installation	ABS	●
MAZDA3 (North America / General)	2.3L	L3	2004	Programmable Module Installation	EPS	●
MAZDA3 (North America / General)	2.3L	L3	2004	Programmable Module Installation	GEM	●
MAZDA3 (North America / General)	2.3L	L3	2004	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	2.3L	L3	2004	Programmable Module Installation	PCM	●
MAZDA3 (North America / General)	2.3L	L3	2004	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	2.3L	L3	2004	Programmable Module Installation	TPM	●
MAZDA3 (North America / General)	2.3L	L3	2004	Programmable Parameters	Module Reset	●
MAZDA3 (North America / General)	2.3L	L3	2004	Programmable Parameters	Exterior Lighting	●
MAZDA3 (North America / General)	2.3L	L3	2004	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (North America / General)	2.3L	L3	2004	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (North America / General)	2.3L	L3	2005	Programmable Module Installation	ABS	●
MAZDA3 (North America / General)	2.3L	L3	2005	Programmable Module Installation	EPS	●
MAZDA3 (North America / General)	2.3L	L3	2005	Programmable Module Installation	GEM	●
MAZDA3 (North America / General)	2.3L	L3	2005	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	2.3L	L3	2005	Programmable Module Installation	PCM	●
MAZDA3 (North America / General)	2.3L	L3	2005	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	2.3L	L3	2005	Programmable Module Installation	TPM	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA3 (North America / General)	2.3L	L3	2009	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	2.3L	L3	2009	Programmable Module Installation	PCM	●
MAZDA3 (North America / General)	2.3L	L3	2009	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	2.3L	L3	2009	Programmable Module Installation	TPM	●
MAZDA3 (North America / General)	2.3L	L3	2009	Programmable Parameters	Module Reset	●
MAZDA3 (North America / General)	2.3L	L3	2009	Programmable Parameters	Exterior Lighting	●
MAZDA3 (North America / General)	2.3L	L3	2009	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (North America / General)	2.3L	L3	2009	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (North America / General)	2.3L	L3_T	2007	Programmable Module Installation	ABS	●
MAZDA3 (North America / General)	2.3L	L3_T	2007	Programmable Module Installation	GEM	●
MAZDA3 (North America / General)	2.3L	L3_T	2007	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	2.3L	L3_T	2007	Programmable Module Installation	PCM	●
MAZDA3 (North America / General)	2.3L	L3_T	2007	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	2.3L	L3_T	2007	Programmable Module Installation	TPM	●
MAZDA3 (North America / General)	2.3L	L3_T	2007	Programmable Parameters	Module Reset	●
MAZDA3 (North America / General)	2.3L	L3_T	2007	Programmable Parameters	Exterior Lighting	●
MAZDA3 (North America / General)	2.3L	L3_T	2007	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (North America / General)	2.3L	L3_T	2007	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (North America / General)	2.3L	L3_T	2008	Programmable Module Installation	ABS	●
MAZDA3 (North America / General)	2.3L	L3_T	2008	Programmable Module Installation	GEM	●
MAZDA3 (North America / General)	2.3L	L3_T	2008	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	2.3L	L3_T	2008	Programmable Module Installation	PCM	●
MAZDA3 (North America / General)	2.3L	L3_T	2008	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	2.3L	L3_T	2008	Programmable Module Installation	TPM	●
MAZDA3 (North America / General)	2.3L	L3_T	2008	Programmable Parameters	Module Reset	●
MAZDA3 (North America / General)	2.3L	L3_T	2008	Programmable Parameters	Exterior Lighting	●
MAZDA3 (North America / General)	2.3L	L3_T	2008	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (North America / General)	2.3L	L3_T	2008	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA3 (North America / General)	2.3L	L3_T	2009	Programmable Module Installation	ABS	●
MAZDA3 (North America / General)	2.3L	L3_T	2009	Programmable Module Installation	GEM	●
MAZDA3 (North America / General)	2.3L	L3_T	2009	Programmable Module Installation	IC	●
MAZDA3 (North America / General)	2.3L	L3_T	2009	Programmable Module Installation	PCM	●
MAZDA3 (North America / General)	2.3L	L3_T	2009	Programmable Module Installation	RCM	●
MAZDA3 (North America / General)	2.3L	L3_T	2009	Programmable Module Installation	TPM	●
MAZDA3 (North America / General)	2.3L	L3_T	2009	Programmable Parameters	Module Reset	●
MAZDA3 (North America / General)	2.3L	L3_T	2009	Programmable Parameters	Exterior Lighting	●
MAZDA3 (North America / General)	2.3L	L3_T	2009	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA3 (North America / General)	2.3L	L3_T	2009	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	Programmable Module Installation	ABS	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	Programmable Module Installation	EPS	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	Programmable Module Installation	GEM	※
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	Programmable Module Installation	IC	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	Programmable Module Installation	RKE	※
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	Programmable Module Installation	PCM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	Programmable Module Installation	RCM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	Programmable Parameters	Interior Lighting	※
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	Programmable Parameters	Exterior Lighting	※
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	Programmable Parameters	RKE	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	Programmable Parameters	Tire Size / Axle Ratio	※
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2007	Programmable Module Installation	ABS	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2007	Programmable Module Installation	EPS	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2007	Programmable Module Installation	IC	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2007	Programmable Module Installation	RKE	※
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2007	Programmable Module Installation	PCM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2007	Programmable Module Installation	RCM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2007	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2007	Programmable Parameters	RKE	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2007	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005	Programmable Module Installation	ABS	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005	Programmable Module Installation	EPS	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005	Programmable Module Installation	IC	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005	Programmable Module Installation	RKE	※
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005	Programmable Module Installation	PCM	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005	Programmable Module Installation	RCM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005	Programmable Parameters	Exterior Lighting	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005	Programmable Parameters	RKE	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	Programmable Module Installation	ABS	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	Programmable Module Installation	EPS	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	Programmable Module Installation	GEM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	Programmable Module Installation	IC	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	Programmable Module Installation	RKE	※
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	Programmable Module Installation	PCM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	Programmable Module Installation	RCM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	Programmable Parameters	Interior Lighting	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	Programmable Parameters	Exterior Lighting	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	Programmable Parameters	RKE	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2005	Programmable Module Installation	ABS	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2005	Programmable Module Installation	FFH	※
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2005	Programmable Module Installation	IC	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2005	Programmable Module Installation	RKE	※
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2005	Programmable Module Installation	PCM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2005	Programmable Module Installation	RCM	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2005	Programmable Parameters	Exterior Lighting	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2005	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2005	Programmable Parameters	PCM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2005	Programmable Parameters	RKE	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2005	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2005	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Module Installation	ABS	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Module Installation	FFH	※
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Module Installation	GEM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Module Installation	IC	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Module Installation	RKE	※
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Module Installation	PCM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Module Installation	RCM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Parameters	Interior Lighting	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Parameters	Exterior Lighting	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Parameters	PCM	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Parameters	RKE	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Parameters	Passenger Airbag Deactivation	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF_T	2007	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA5 (North America Specs.)	2.3L	L3	2006	Programmable Module Installation	ABS	●
MAZDA5 (North America Specs.)	2.3L	L3	2006	Programmable Module Installation	EPS	●
MAZDA5 (North America Specs.)	2.3L	L3	2006	Programmable Module Installation	IC	●
MAZDA5 (North America Specs.)	2.3L	L3	2006	Programmable Module Installation	PCM	●
MAZDA5 (North America Specs.)	2.3L	L3	2006	Programmable Module Installation	RCM	●
MAZDA5 (North America Specs.)	2.3L	L3	2006	Programmable Module Installation	TPM	●
MAZDA5 (North America Specs.)	2.3L	L3	2006	Programmable Parameters	Exterior Lighting	●
MAZDA5 (North America Specs.)	2.3L	L3	2006	Programmable Parameters	Warning Lamps / Chimes	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA5 (North America Specs.)	2.3L	L3	2006	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA5 (North America Specs.)	2.3L	L3	2007	Programmable Module Installation	ABS	●
MAZDA5 (North America Specs.)	2.3L	L3	2007	Programmable Module Installation	EPS	●
MAZDA5 (North America Specs.)	2.3L	L3	2007	Programmable Module Installation	IC	●
MAZDA5 (North America Specs.)	2.3L	L3	2007	Programmable Module Installation	PCM	●
MAZDA5 (North America Specs.)	2.3L	L3	2007	Programmable Module Installation	RCM	●
MAZDA5 (North America Specs.)	2.3L	L3	2007	Programmable Module Installation	TPM	●
MAZDA5 (North America Specs.)	2.3L	L3	2007	Programmable Parameters	Exterior Lighting	●
MAZDA5 (North America Specs.)	2.3L	L3	2007	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA5 (North America Specs.)	2.3L	L3	2007	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA5 (North America Specs.)	2.3L	L3	2008	Programmable Module Installation	ABS	●
MAZDA5 (North America Specs.)	2.3L	L3	2008	Programmable Module Installation	EPS	●
MAZDA5 (North America Specs.)	2.3L	L3	2008	Programmable Module Installation	IC	●
MAZDA5 (North America Specs.)	2.3L	L3	2008	Programmable Module Installation	PCM	●
MAZDA5 (North America Specs.)	2.3L	L3	2008	Programmable Module Installation	RCM	●
MAZDA5 (North America Specs.)	2.3L	L3	2008	Programmable Module Installation	TPM	●
MAZDA5 (North America Specs.)	2.3L	L3	2008	Programmable Parameters	Interior Lighting	●
MAZDA5 (North America Specs.)	2.3L	L3	2008	Programmable Parameters	Exterior Lighting	●
MAZDA5 (North America Specs.)	2.3L	L3	2008	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA5 (North America Specs.)	2.3L	L3	2008	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA5 (North America Specs.)	2.3L	L3	2009	Programmable Module Installation	ABS	●
MAZDA5 (North America Specs.)	2.3L	L3	2009	Programmable Module Installation	EPS	●
MAZDA5 (North America Specs.)	2.3L	L3	2009	Programmable Module Installation	IC	●
MAZDA5 (North America Specs.)	2.3L	L3	2009	Programmable Module Installation	PCM	●
MAZDA5 (North America Specs.)	2.3L	L3	2009	Programmable Module Installation	RCM	●
MAZDA5 (North America Specs.)	2.3L	L3	2009	Programmable Module Installation	TPM	●
MAZDA5 (North America Specs.)	2.3L	L3	2009	Programmable Parameters	Interior Lighting	●
MAZDA5 (North America Specs.)	2.3L	L3	2009	Programmable Parameters	Exterior Lighting	●
MAZDA5 (North America Specs.)	2.3L	L3	2009	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA5 (North America Specs.)	2.3L	L3	2009	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA5 (North America Specs.)	2.3L	L3	2010	Programmable Module Installation	ABS	●
MAZDA5 (North America Specs.)	2.3L	L3	2010	Programmable Module Installation	EPS	●
MAZDA5 (North America Specs.)	2.3L	L3	2010	Programmable Module Installation	IC	●
MAZDA5 (North America Specs.)	2.3L	L3	2010	Programmable Module Installation	PCM	●
MAZDA5 (North America Specs.)	2.3L	L3	2010	Programmable Module Installation	RCM	●
MAZDA5 (North America Specs.)	2.3L	L3	2010	Programmable Module Installation	TPM	●
MAZDA5 (North America Specs.)	2.3L	L3	2010	Programmable Parameters	Interior Lighting	●
MAZDA5 (North America Specs.)	2.3L	L3	2010	Programmable Parameters	Exterior Lighting	●
MAZDA5 (North America Specs.)	2.3L	L3	2010	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA5 (North America Specs.)	2.3L	L3	2010	Programmable Parameters	Tire Size / Axle Ratio	●
MAZDA6 (China)	2.0L	LF	2007	Programmable Parameters	Exterior Lighting	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA6 (China)	2. 5L	L5	2007	Programmable Parameters	Exterior Lighting	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002	Programmable Module Installation	ABS/TCS	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002	Programmable Module Installation	IC	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002	Programmable Module Installation	LHID	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002	Programmable Module Installation	PCM	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002	Programmable Module Installation	RCM	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002	Programmable Module Installation	RHID	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	Programmable Module Installation	ABS/TCS	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	Programmable Module Installation	IC	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	Programmable Module Installation	RKE	※
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	Programmable Module Installation	LHID	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	Programmable Module Installation	PCM	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	Programmable Module Installation	RCM	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	Programmable Module Installation	RHID	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	Programmable Parameters	Exterior Lighting	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	Programmable Parameters	RKE	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002	Programmable Module Installation	ABS/TCS	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002	Programmable Module Installation	IC	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002	Programmable Module Installation	LHID	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002	Programmable Module Installation	PCM	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002	Programmable Module Installation	RCM	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002	Programmable Module Installation	RHID	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	Programmable Module Installation	ABS/TCS	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	Programmable Module Installation	IC	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	Programmable Module Installation	RKE	※
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	Programmable Module Installation	LHID	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	Programmable Module Installation	PCM	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	Programmable Module Installation	RCM	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	Programmable Module Installation	RHID	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	Programmable Parameters	Exterior Lighting	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	Programmable Parameters	RKE	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF_T	2002	Programmable Module Installation	ABS/TCS	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF_T	2002	Programmable Module Installation	IC	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF_T	2002	Programmable Module Installation	LHID	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF_T	2002	Programmable Module Installation	PCM	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF_T	2002	Programmable Module Installation	RCM	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF_T	2002	Programmable Module Installation	RHID	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF_T	2003	Programmable Module Installation	ABS/TCS	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF_T	2003	Programmable Module Installation	IC	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2003	Programmable Module Installation	LHID	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2003	Programmable Module Installation	PCM	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2003	Programmable Module Installation	RCM	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2003	Programmable Module Installation	RHID	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004	Programmable Module Installation	ABS/TCS	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004	Programmable Module Installation	IC	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004	Programmable Module Installation	LHID	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004	Programmable Module Installation	PCM	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004	Programmable Module Installation	RCM	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004	Programmable Module Installation	RHID	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005	Programmable Module Installation	ABS/TCS	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005	Programmable Module Installation	IC	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005	Programmable Module Installation	RKE	※
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005	Programmable Module Installation	LHID	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005	Programmable Module Installation	PCM	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005	Programmable Module Installation	RCM	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005	Programmable Module Installation	RHID	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005	Programmable Parameters	Exterior Lighting	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005	Programmable Parameters	PCM	●
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005	Programmable Parameters	RKE	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002	Programmable Module Installation	ABS/TCS	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002	Programmable Module Installation	IC	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002	Programmable Module Installation	LHID	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002	Programmable Module Installation	PCM	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002	Programmable Module Installation	RCM	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002	Programmable Module Installation	RHID	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2003	Programmable Module Installation	ABS/TCS	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2003	Programmable Module Installation	IC	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2003	Programmable Module Installation	LHID	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2003	Programmable Module Installation	PCM	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2003	Programmable Module Installation	RCM	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2003	Programmable Module Installation	RHID	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	Programmable Module Installation	ABS/TCS	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	Programmable Module Installation	IC	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	Programmable Module Installation	RKE	※
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	Programmable Module Installation	LHID	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	Programmable Module Installation	PCM	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	Programmable Module Installation	RCM	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	Programmable Module Installation	RHID	●
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	Programmable Parameters	Exterior Lighting	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2005	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2005	Programmable Parameters	RKE	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	Programmable Module Installation	ABS/TCS	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	Programmable Module Installation	IC	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	Programmable Module Installation	RKE	※
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	Programmable Module Installation	LHID	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	Programmable Module Installation	PCM	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	Programmable Module Installation	RCM	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	Programmable Module Installation	RHID	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	Programmable Parameters	Exterior Lighting	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	Programmable Parameters	RKE	●
MAZDA6 (Middle East / General)	2. 5L	L5	2009	Programmable Module Installation	LCM	●
MAZDA6 (Middle East / General)	2. 5L	L5	2009	Programmable Parameters	Exterior Lighting	●
MAZDA6 (Middle East / General)	2. 5L	L5	2010	Programmable Module Installation	LCM	●
MAZDA6 (Middle East / General)	2. 5L	L5	2010	Programmable Parameters	Exterior Lighting	●
MAZDA6 (Middle East / General)	3. 7L	CA	2009	Programmable Module Installation	LCM	●
MAZDA6 (Middle East / General)	3. 7L	CA	2009	Programmable Parameters	Exterior Lighting	●
MAZDA6 (Middle East / General)	3. 7L	CA	2010	Programmable Module Installation	LCM	●
MAZDA6 (Middle East / General)	3. 7L	CA	2010	Programmable Parameters	Exterior Lighting	●
MAZDA6 (North America / General)	2. 3L	L3	2003	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	2. 3L	L3	2003	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	2. 3L	L3	2003	Programmable Module Installation	PCM	●
MAZDA6 (North America / General)	2. 3L	L3	2004	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	2. 3L	L3	2004	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	2. 3L	L3	2004	Programmable Module Installation	PCM	●
MAZDA6 (North America / General)	2. 3L	L3	2005	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	2. 3L	L3	2005	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	2. 3L	L3	2005	Programmable Module Installation	PCM	●
MAZDA6 (North America / General)	2. 3L	L3	2005	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (North America / General)	2. 3L	L3	2006	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	2. 3L	L3	2006	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	2. 3L	L3	2006	Programmable Module Installation	PCM	●
MAZDA6 (North America / General)	2. 3L	L3	2006	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (North America / General)	2. 3L	L3	2007	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	2. 3L	L3	2007	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	2. 3L	L3	2007	Programmable Module Installation	PCM	●
MAZDA6 (North America / General)	2. 3L	L3	2007	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (North America / General)	2. 3L	L3	2008	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	2. 3L	L3	2008	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	2. 3L	L3	2008	Programmable Module Installation	PCM	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA6 (North America / General)	2.3L	L3	2008	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (North America / General)	2.3L	L3_T	2006	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	2.3L	L3_T	2006	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	2.3L	L3_T	2006	Programmable Module Installation	RKE	※
MAZDA6 (North America / General)	2.3L	L3_T	2006	Programmable Module Installation	PCM	●
MAZDA6 (North America / General)	2.3L	L3_T	2006	Programmable Module Installation	RCM	●
MAZDA6 (North America / General)	2.3L	L3_T	2006	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (North America / General)	2.3L	L3_T	2006	Programmable Parameters	RKE	※
MAZDA6 (North America / General)	2.3L	L3_T	2007	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	2.3L	L3_T	2007	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	2.3L	L3_T	2007	Programmable Module Installation	RKE	※
MAZDA6 (North America / General)	2.3L	L3_T	2007	Programmable Module Installation	PCM	●
MAZDA6 (North America / General)	2.3L	L3_T	2007	Programmable Module Installation	RCM	●
MAZDA6 (North America / General)	2.3L	L3_T	2007	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (North America / General)	2.3L	L3_T	2007	Programmable Parameters	RKE	※
MAZDA6 (North America / General)	2.5L	L5	2009	Programmable Module Installation	LCM	●
MAZDA6 (North America / General)	2.5L	L5	2009	Programmable Parameters	Exterior Lighting	●
MAZDA6 (North America / General)	2.5L	L5	2010	Programmable Module Installation	LCM	●
MAZDA6 (North America / General)	2.5L	L5	2010	Programmable Parameters	Exterior Lighting	●
MAZDA6 (North America / General)	3.0L	AJ	2003	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	3.0L	AJ	2003	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	3.0L	AJ	2003	Programmable Module Installation	PCM	●
MAZDA6 (North America / General)	3.0L	AJ	2004	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	3.0L	AJ	2004	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	3.0L	AJ	2004	Programmable Module Installation	PCM	※
MAZDA6 (North America / General)	3.0L	AJ	2005	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	3.0L	AJ	2005	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	3.0L	AJ	2005	Programmable Module Installation	PCM	●
MAZDA6 (North America / General)	3.0L	AJ	2005	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (North America / General)	3.0L	AJ	2006	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	3.0L	AJ	2006	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	3.0L	AJ	2006	Programmable Module Installation	PCM	●
MAZDA6 (North America / General)	3.0L	AJ	2006	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (North America / General)	3.0L	AJ	2007	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	3.0L	AJ	2007	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	3.0L	AJ	2007	Programmable Module Installation	PCM	●
MAZDA6 (North America / General)	3.0L	AJ	2007	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (North America / General)	3.0L	AJ	2008	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	3.0L	AJ	2008	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	3.0L	AJ	2008	Programmable Module Installation	PCM	●
MAZDA6 (North America / General)	3.0L	AJ	2008	Programmable Parameters	Warning Lamps / Chimes	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MAZDA6 (North America / General)	3.0L	AJ	Other	Programmable Module Installation	ABS/TCS	●
MAZDA6 (North America / General)	3.0L	AJ	Other	Programmable Module Installation	IC	●
MAZDA6 (North America / General)	3.0L	AJ	Other	Programmable Module Installation	PCM	●
MAZDA6 (North America / General)	3.0L	AJ	Other	Programmable Parameters	Warning Lamps / Chimes	●
MAZDA6 (North America / General)	3.7L	CA	2009	Programmable Module Installation	LCM	●
MAZDA6 (North America / General)	3.7L	CA	2009	Programmable Parameters	Exterior Lighting	●
MAZDA6 (North America / General)	3.7L	CA	2010	Programmable Module Installation	LCM	●
MAZDA6 (North America / General)	3.7L	CA	2010	Programmable Parameters	Exterior Lighting	●
MPV (Europe/General)	2.0L	FS	Other	Programmable Module Installation	ABS/TCS	●
MPV (Europe/General)	2.0L	RF_T	2004	Programmable Module Installation	ABS/TCS	●
MPV (Europe/General)	2.5L	GY	Other	Programmable Module Installation	ABS/TCS	●
MPV (Europe/General)	3.0L	JE	Other	Programmable Module Installation	ABS/TCS	●
MPV (JPN/General)	2.0L	FS	Other	Programmable Module Installation	ABS/TCS	●
MPV (JPN/General)	2.3L	L3	2004	Programmable Module Installation	ABS/TCS	●
MPV (JPN/General)	2.5L	GY	Other	Programmable Module Installation	ABS/TCS	●
MPV (JPN/General)	3.0L	AJ	2004	Programmable Module Installation	ABS/TCS	●
MPV (JPN/General)	3.0L	AJ	2004	Programmable Module Installation	PCM	●
MPV (JPN/General)	3.0L	JE	Other	Programmable Module Installation	ABS/TCS	●
MPV (North America / General)	3.0L	AJ	2004	Programmable Module Installation	ABS/TCS	●
MPV (North America / General)	3.0L	AJ	2004	Programmable Module Installation	RCM	●
MPV (North America / General)	3.0L	AJ	2005	Programmable Module Installation	ABS/TCS	●
MPV (North America / General)	3.0L	AJ	2005	Programmable Module Installation	PCM	●
MPV (North America / General)	3.0L	AJ	2005	Programmable Module Installation	RCM	●
MPV (North America / General)	3.0L	AJ	2006	Programmable Module Installation	ABS/TCS	●
MPV (North America / General)	3.0L	AJ	2006	Programmable Module Installation	PCM	●
MPV (North America / General)	3.0L	AJ	2006	Programmable Module Installation	RCM	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	Programmable Module Installation	AM	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	Programmable Module Installation	IC	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	Programmable Module Installation	RKE	※
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	Programmable Module Installation	PCM	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	Programmable Module Installation	RCM	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	Programmable Parameters	Exterior Lighting	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	Programmable Parameters	Warning Lamps / Chimes	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	Programmable Parameters	RKE	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	Programmable Parameters	Tire Size / Axle Ratio	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2013	Programmable Module Installation	AM	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2013	Programmable Module Installation	IC	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2013	Programmable Module Installation	RKE	※
MPV / Mazda8 (JPN/General)	2.3L	L3	2013	Programmable Module Installation	PCM	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2013	Programmable Module Installation	RCM	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2013	Programmable Parameters	Exterior Lighting	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MPV / Mazda8 (JPN/General)	2. 3L	L3	2013	Programmable Parameters	Warning Lamps / Chimes	●
MPV / Mazda8 (JPN/General)	2. 3L	L3	2013	Programmable Parameters	RKE	●
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	Programmable Module Installation	AM	●
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	Programmable Module Installation	IC	●
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	Programmable Module Installation	RKE	※
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	Programmable Module Installation	PCM	●
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	Programmable Module Installation	RCM	●
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	Programmable Parameters	Exterior Lighting	●
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	Programmable Parameters	Warning Lamps / Chimes	●
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	Programmable Parameters	RKE	●
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	Programmable Parameters	Tire Size / Axle Ratio	●
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	Programmable Module Installation	AM	●
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	Programmable Module Installation	IC	●
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	Programmable Module Installation	RKE	※
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	Programmable Module Installation	RCM	●
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	Programmable Parameters	Exterior Lighting	●
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	Programmable Parameters	Warning Lamps / Chimes	●
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	Programmable Parameters	RKE	●
MX-5 (Europe / General Specs.)	1. 8L	L8	2005	Programmable Module Installation	ABS	●
MX-5 (Europe / General Specs.)	1. 8L	L8	2005	Programmable Module Installation	IC	●
MX-5 (Europe / General Specs.)	1. 8L	L8	2005	Programmable Module Installation	RKE	※
MX-5 (Europe / General Specs.)	1. 8L	L8	2005	Programmable Module Installation	PCM	●
MX-5 (Europe / General Specs.)	1. 8L	L8	2005	Programmable Module Installation	RCM	●
MX-5 (Europe / General Specs.)	1. 8L	L8	2005	Programmable Parameters	Warning Lamps / Chimes	●
MX-5 (Europe / General Specs.)	1. 8L	L8	2005	Programmable Parameters	RKE	●
MX-5 (Europe / General Specs.)	1. 8L	L8	2008	Programmable Module Installation	ABS	●
MX-5 (Europe / General Specs.)	1. 8L	L8	2008	Programmable Module Installation	IC	●
MX-5 (Europe / General Specs.)	1. 8L	L8	2008	Programmable Module Installation	RKE	※
MX-5 (Europe / General Specs.)	1. 8L	L8	2008	Programmable Module Installation	PCM	●
MX-5 (Europe / General Specs.)	1. 8L	L8	2008	Programmable Module Installation	RCM	●
MX-5 (Europe / General Specs.)	1. 8L	L8	2008	Programmable Parameters	Warning Lamps / Chimes	●
MX-5 (Europe / General Specs.)	1. 8L	L8	2008	Programmable Parameters	RKE	●
MX-5 (Europe / General Specs.)	2. 0L	LF	2005	Programmable Module Installation	ABS	●
MX-5 (Europe / General Specs.)	2. 0L	LF	2005	Programmable Module Installation	IC	●
MX-5 (Europe / General Specs.)	2. 0L	LF	2005	Programmable Module Installation	RKE	※
MX-5 (Europe / General Specs.)	2. 0L	LF	2005	Programmable Module Installation	PCM	●
MX-5 (Europe / General Specs.)	2. 0L	LF	2005	Programmable Module Installation	RCM	●
MX-5 (Europe / General Specs.)	2. 0L	LF	2005	Programmable Parameters	Warning Lamps / Chimes	●
MX-5 (Europe / General Specs.)	2. 0L	LF	2005	Programmable Parameters	RKE	●
MX-5 (Europe / General Specs.)	2. 0L	LF	2008	Programmable Module Installation	ABS	●
MX-5 (Europe / General Specs.)	2. 0L	LF	2008	Programmable Module Installation	IC	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
MX-5 (North America / General Specs.)	2.0L	LF	Other	Programmable Module Installation	IC	●
MX-5 (North America / General Specs.)	2.0L	LF	Other	Programmable Module Installation	RKE	※
MX-5 (North America / General Specs.)	2.0L	LF	Other	Programmable Module Installation	PCM	●
MX-5 (North America / General Specs.)	2.0L	LF	Other	Programmable Module Installation	RCM	●
MX-5 (North America / General Specs.)	2.0L	LF	Other	Programmable Parameters	Warning Lamps / Chimes	●
MX-5 (North America / General Specs.)	2.0L	LF	Other	Programmable Parameters	RKE	※
PREMACY / MAZDA5	1.6L	Y6	Other	Programmable Module Installation	RKE	※
PREMACY / MAZDA5	1.6L	Y6	Other	Programmable Module Installation	RCM	●
PREMACY / MAZDA5	1.6L	Y6	Other	Programmable Parameters	RKE	※
PREMACY / MAZDA5	1.6L	Y6	Other	Programmable Parameters	RCM	※
PREMACY / MAZDA5	1.8L	L8	Other	Programmable Module Installation	RKE	※
PREMACY / MAZDA5	1.8L	L8	Other	Programmable Module Installation	RCM	●
PREMACY / MAZDA5	1.8L	L8	Other	Programmable Parameters	RKE	※
PREMACY / MAZDA5	1.8L	L8	Other	Programmable Parameters	RCM	※
PREMACY / MAZDA5	2.0L	LF	Other	Programmable Module Installation	RKE	※
PREMACY / MAZDA5	2.0L	LF	Other	Programmable Module Installation	RCM	●
PREMACY / MAZDA5	2.0L	LF	Other	Programmable Parameters	RKE	※
PREMACY / MAZDA5	2.0L	LF	Other	Programmable Parameters	RCM	※
PREMACY / MAZDA5	2.0L	PE	Other	Programmable Module Installation	RKE	※
PREMACY / MAZDA5	2.0L	PE	Other	Programmable Module Installation	RCM	●
PREMACY / MAZDA5	2.0L	PE	Other	Programmable Parameters	RKE	※
PREMACY / MAZDA5	2.0L	PE	Other	Programmable Parameters	RCM	※
PREMACY / MAZDA5	2.5L	L5	Other	Programmable Module Installation	RKE	※
PREMACY / MAZDA5	2.5L	L5	Other	Programmable Module Installation	RCM	●
PREMACY / MAZDA5	2.5L	L5	Other	Programmable Parameters	RKE	※
PREMACY / MAZDA5	2.5L	L5	Other	Programmable Parameters	RCM	※
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Module Installation	ABS	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Module Installation	EPS	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Module Installation	IC	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Module Installation	RKE	※
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Module Installation	PCM	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Module Installation	RCM	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Parameters	Exterior Lighting	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Parameters	RKE	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Parameters	Tire Size / Axle Ratio	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006	Programmable Module Installation	ABS	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006	Programmable Module Installation	EPS	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006	Programmable Module Installation	IC	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006	Programmable Module Installation	RKE	※
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006	Programmable Module Installation	PCM	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006	Programmable Module Installation	RCM	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006	Programmable Parameters	Interior Lighting	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006	Programmable Parameters	Exterior Lighting	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006	Programmable Parameters	Warning Lamps / Chimes	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006	Programmable Parameters	RKE	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006	Programmable Parameters	Tire Size / Axle Ratio	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007	Programmable Module Installation	ABS	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007	Programmable Module Installation	EPS	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007	Programmable Module Installation	IC	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007	Programmable Module Installation	RKE	※
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007	Programmable Module Installation	PCM	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007	Programmable Module Installation	RCM	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007	Programmable Parameters	Interior Lighting	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007	Programmable Parameters	Exterior Lighting	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007	Programmable Parameters	Warning Lamps / Chimes	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007	Programmable Parameters	RKE	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007	Programmable Parameters	Tire Size / Axle Ratio	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Programmable Module Installation	ABS	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Programmable Module Installation	EPS	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Programmable Module Installation	IC	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Programmable Module Installation	RKE	※
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Programmable Module Installation	PCM	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Programmable Module Installation	RCM	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Programmable Parameters	Exterior Lighting	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Programmable Parameters	RKE	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Programmable Parameters	Tire Size / Axle Ratio	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	Programmable Module Installation	ABS	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	Programmable Module Installation	EPS	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	Programmable Module Installation	IC	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	Programmable Module Installation	RKE	※
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	Programmable Module Installation	PCM	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	Programmable Module Installation	RCM	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	Programmable Parameters	Interior Lighting	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	Programmable Parameters	Exterior Lighting	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	Programmable Parameters	Warning Lamps / Chimes	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	Programmable Parameters	RKE	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	Programmable Parameters	Tire Size / Axle Ratio	●
Ranger / Courier / Mazda B-Series /Bravo	4.0L	V6 SOHC	2003	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq-Turbo Diesel Common Rail	2011	Programmable Module Installation	TBM	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq-Turbo Diesel Common Rail Injection	2011	Programmable Parameters	Tracking And Blocking Module	●
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004	Programmable Module Installation	IC	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2005	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2005	Programmable Module Installation	IC	※
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2005	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2005	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2006	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2006	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2006	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2006	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2007	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2007	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2007	Programmable Module Installation	RCM	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2007	Programmable Module Installation	SDARS	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2007	Programmable Parameters	Personality	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2007	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2008	Programmable Module Installation	GEM / SJB	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2008	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2008	Programmable Module Installation	RCM	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2008	Programmable Parameters	Personality	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2008	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2008	Programmable Parameters	Tire Pressure Monitoring System	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2009	Programmable Module Installation	GEM / SJB	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2009	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2009	Programmable Module Installation	RCM	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2009	Programmable Parameters	Personality	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2009	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2009	Programmable Parameters	Tire Pressure Monitoring System	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2010	Programmable Module Installation	ABS	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2010	Programmable Module Installation	GEM / SJB	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2010	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2010	Programmable Parameters	Personality	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2010	Programmable Parameters	Tire Pressure Monitoring System	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2011	Programmable Module Installation	ABS	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2011	Programmable Module Installation	GEM / SJB	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2011	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2011	Programmable Parameters	Tire Pressure Monitoring System	●
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1996	Programmable Module Installation	ABS/TCS	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1997	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	1996	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	1997	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2002	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2002	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2002	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2002	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2002	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2002	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2003	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2003	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2003	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2003	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2003	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2003	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	Programmable Module Installation	TBM	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	Programmable Parameters	Tracking And Blocking Module	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998	Programmable Parameters	Vehicle	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998	Programmable Parameters	Tire Size	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1999	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1999	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	2. 5L	Other	1999	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1999	Programmable Parameters	Vehicle	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1999	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1999	Programmable Parameters	Tire Size	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	2000	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	2000	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	2. 5L	Other	2000	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	2000	Programmable Parameters	Vehicle	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	2000	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	2000	Programmable Parameters	Tire Size	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	2001	Programmable Module Installation	ABS/TCS	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
Ranger / Mazda B-Series / Courier	2. 5L	Other	2001	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	2. 5L	Other	2001	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	2001	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	2001	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999	Programmable Parameters	Vehicle	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999	Programmable Parameters	Tire Size	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	2000	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	2000	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	3. 0L	FFV	2000	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	2000	Programmable Parameters	Vehicle	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	2000	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	2000	Programmable Parameters	Tire Size	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1995	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1996	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1997	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1998	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1998	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	3. 0L	Other	1998	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1998	Programmable Parameters	Vehicle	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1998	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1998	Programmable Parameters	Tire Size	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1999	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1999	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	3. 0L	Other	1999	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1999	Programmable Parameters	Vehicle	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1999	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1999	Programmable Parameters	Tire Size	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	2000	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	2000	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	3. 0L	Other	2000	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	2000	Programmable Parameters	Vehicle	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	2000	Programmable Parameters	Power Door Locks	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
Ranger / Mazda B-Series / Courier	3.0L	Other	2000	Programmable Parameters	Tire Size	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2001	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2001	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	3.0L	Other	2001	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2001	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2001	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2003	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2003	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2003	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2003	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2003	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2003	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2004	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2004	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2004	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2004	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2005	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2005	Programmable Module Installation	IC	※
Ranger / Mazda B-Series / Courier	3.0L	Other	2005	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2005	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2006	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2006	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2006	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2006	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2007	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2007	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2007	Programmable Module Installation	RCM	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2007	Programmable Module Installation	SDARS	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2007	Programmable Parameters	Personality	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2007	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2008	Programmable Module Installation	GEM / SJB	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2008	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2008	Programmable Module Installation	RCM	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2008	Programmable Parameters	Personality	●
Ranger / Mazda B-Series / Courier	3.0L	Other	2008	Programmable Parameters	Warning Lamps / Chimes	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
Ranger / Mazda B-Series / Courier	3.0L	Other	2008	Programmable Parameters	Tire Pressure Monitoring System	●
Ranger / Mazda B-Series / Courier	3.2L	Duratorq-Turbo Diesel Common Rail	2011	Programmable Module Installation	TBM	●
Ranger / Mazda B-Series / Courier	3.2L	Duratorq-Turbo Diesel Common Rail Injection	2011	Programmable Parameters	Tracking And Blocking Module	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1996	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1998	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1998	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	4.0L	Other	1998	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1998	Programmable Parameters	Vehicle	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1998	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1998	Programmable Parameters	Tire Size	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1999	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1999	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	4.0L	Other	1999	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1999	Programmable Parameters	Vehicle	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1999	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1999	Programmable Parameters	Tire Size	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2000	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2000	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	4.0L	Other	2000	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2000	Programmable Parameters	Vehicle	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2000	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2000	Programmable Parameters	Tire Size	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2001	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2001	Programmable Module Installation	GEM	※
Ranger / Mazda B-Series / Courier	4.0L	Other	2001	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2001	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2001	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2002	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2002	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2002	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2002	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2002	Programmable Parameters	Power Door Locks	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2002	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003	Programmable Module Installation	ABS/TCS	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003	Programmable Module Installation	RAP	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003	Programmable Parameters	Power Door Locks	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2004	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2004	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2004	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2004	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2005	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2005	Programmable Module Installation	IC	※
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2005	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2005	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2006	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2006	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2006	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2006	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007	Programmable Module Installation	RCM	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007	Programmable Module Installation	SDARS	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007	Programmable Parameters	Personality	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2008	Programmable Module Installation	GEM / SJB	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2008	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2008	Programmable Module Installation	RCM	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2008	Programmable Parameters	Personality	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2008	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2008	Programmable Parameters	Tire Pressure Monitoring System	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2009	Programmable Module Installation	GEM / SJB	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2009	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2009	Programmable Module Installation	RCM	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2009	Programmable Parameters	Personality	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2009	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2009	Programmable Parameters	Tire Pressure Monitoring System	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2010	Programmable Module Installation	ABS	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2010	Programmable Module Installation	GEM / SJB	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2010	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2010	Programmable Parameters	Personality	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2010	Programmable Parameters	Tire Pressure Monitoring System	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2011	Programmable Module Installation	ABS	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2011	Programmable Module Installation	GEM / SJB	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2011	Programmable Module Installation	IC	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2011	Programmable Parameters	Tire Pressure Monitoring System	●
Ranger / Mazda B-Series / Courier	Other	Other	2004	Programmable Module Installation	GEM	●
Ranger / Mazda B-Series / Courier	Other	Other	2004	Programmable Module Installation	IC	●
Ranger / Mazda B-Series / Courier	Other	Other	2004	Programmable Parameters	Warning Lamps / Chimes	●
Ranger / Mazda B-Series / Courier	Other	Other	2004	Programmable Parameters	Security	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	Programmable Module Installation	TBM	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	Programmable Parameters	Tracking And Blocking Module	●
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Module Installation	ABS	●
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Module Installation	IC	●
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Module Installation	RKE	※
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Module Installation	PCM	●
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Module Installation	RCM	●
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Parameters	Warning Lamps / Chimes	●
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005	Programmable Parameters	RKE	●
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008	Programmable Module Installation	ABS	●
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008	Programmable Module Installation	IC	●
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008	Programmable Module Installation	RKE	※
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008	Programmable Module Installation	PCM	●
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008	Programmable Module Installation	RCM	●
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008	Programmable Parameters	Warning Lamps / Chimes	●
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008	Programmable Parameters	RKE	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	Programmable Module Installation	ABS	※
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	Programmable Module Installation	IC	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	Programmable Module Installation	RKE	※
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	Programmable Module Installation	LCM	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	Programmable Module Installation	PCM	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	Programmable Module Installation	RCM	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	Programmable Parameters	Exterior Lighting	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	Programmable Parameters	Warning Lamps / Chimes	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	Programmable Parameters	RKE	※
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	Programmable Parameters	Tire Size / Axle Ratio	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	Programmable Module Installation	ABS/TCS	※
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	Programmable Module Installation	IC	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	Programmable Module Installation	RKE	※
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	Programmable Module Installation	PCM	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	Programmable Module Installation	RCM	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	Programmable Parameters	Warning Lamps / Chimes	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	Programmable Parameters	RKE	※
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard-Power	2003	Programmable Module Installation	ABS/TCS	※
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard-Power	2003	Programmable Module Installation	IC	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard-Power	2003	Programmable Module Installation	RKE	※
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard-Power	2003	Programmable Module Installation	PCM	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard-Power	2003	Programmable Module Installation	RCM	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard-Power	2003	Programmable Parameters	Warning Lamps / Chimes	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard-Power	2003	Programmable Parameters	RKE	※
RX-8 (North America Specs.)	654x2cc	13B	2009	Programmable Module Installation	ABS	※
RX-8 (North America Specs.)	654x2cc	13B	2009	Programmable Module Installation	IC	●
RX-8 (North America Specs.)	654x2cc	13B	2009	Programmable Module Installation	RKE	※
RX-8 (North America Specs.)	654x2cc	13B	2009	Programmable Module Installation	LCM	●
RX-8 (North America Specs.)	654x2cc	13B	2009	Programmable Module Installation	PCM	●
RX-8 (North America Specs.)	654x2cc	13B	2009	Programmable Module Installation	RCM	●
RX-8 (North America Specs.)	654x2cc	13B	2009	Programmable Module Installation	TPM	●
RX-8 (North America Specs.)	654x2cc	13B	2009	Programmable Parameters	Exterior Lighting	●
RX-8 (North America Specs.)	654x2cc	13B	2009	Programmable Parameters	Warning Lamps / Chimes	●
RX-8 (North America Specs.)	654x2cc	13B	2009	Programmable Parameters	RKE	※
RX-8 (North America Specs.)	654x2cc	13B	2009	Programmable Parameters	Tire Size / Axle Ratio	●
RX-8 (North America Specs.)	654x2cc	13B	2010	Programmable Module Installation	ABS	※
RX-8 (North America Specs.)	654x2cc	13B	2010	Programmable Module Installation	IC	●
RX-8 (North America Specs.)	654x2cc	13B	2010	Programmable Module Installation	RKE	※
RX-8 (North America Specs.)	654x2cc	13B	2010	Programmable Module Installation	LCM	●
RX-8 (North America Specs.)	654x2cc	13B	2010	Programmable Module Installation	PCM	●
RX-8 (North America Specs.)	654x2cc	13B	2010	Programmable Module Installation	RCM	●
RX-8 (North America Specs.)	654x2cc	13B	2010	Programmable Module Installation	TPM	●
RX-8 (North America Specs.)	654x2cc	13B	2010	Programmable Parameters	Exterior Lighting	●
RX-8 (North America Specs.)	654x2cc	13B	2010	Programmable Parameters	Warning Lamps / Chimes	●
RX-8 (North America Specs.)	654x2cc	13B	2010	Programmable Parameters	RKE	※
RX-8 (North America Specs.)	654x2cc	13B	2010	Programmable Parameters	Tire Size / Axle Ratio	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2004	Programmable Module Installation	ABS/TCS	※
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2004	Programmable Module Installation	IC	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2004	Programmable Module Installation	RKE	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2004	Programmable Module Installation	PCM	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2004	Programmable Module Installation	RCM	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2005	Programmable Module Installation	ABS/TCS	※
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2005	Programmable Module Installation	IC	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2005	Programmable Module Installation	RKE	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2005	Programmable Module Installation	PCM	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2005	Programmable Module Installation	RCM	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2006	Programmable Module Installation	ABS/TCS	※
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2006	Programmable Module Installation	IC	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2006	Programmable Module Installation	RKE	※
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2006	Programmable Module Installation	PCM	●

Vehicle	Capacity	EngineType	Year	Module Programming	System	Flags
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2006	Programmable Module Installation	RCM	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2006	Programmable Parameters	Warning Lamps / Chimes	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2006	Programmable Parameters	RKE	※
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2007	Programmable Module Installation	ABS/TCS	※
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2007	Programmable Module Installation	IC	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2007	Programmable Module Installation	RKE	※
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2007	Programmable Module Installation	PCM	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2007	Programmable Module Installation	RCM	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2007	Programmable Parameters	Warning Lamps / Chimes	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2007	Programmable Parameters	RKE	※
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2008	Programmable Module Installation	ABS/TCS	※
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2008	Programmable Module Installation	IC	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2008	Programmable Module Installation	RKE	※
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2008	Programmable Module Installation	PCM	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2008	Programmable Module Installation	RCM	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2008	Programmable Parameters	Warning Lamps / Chimes	●
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2008	Programmable Parameters	RKE	※
RX-8 (North America Specs.)	654x2cc	13B-MSP High-Power	2008	Programmable Parameters	Tire Size / Axle Ratio	●
RX-8 (North America Specs.)	654x2cc	13B-MSP Standard-Power	2004	Programmable Module Installation	ABS/TCS	※
RX-8 (North America Specs.)	654x2cc	13B-MSP Standard-Power	2004	Programmable Module Installation	IC	●
RX-8 (North America Specs.)	654x2cc	13B-MSP Standard-Power	2004	Programmable Module Installation	RKE	※
RX-8 (North America Specs.)	654x2cc	13B-MSP Standard-Power	2004	Programmable Module Installation	PCM	●
RX-8 (North America Specs.)	654x2cc	13B-MSP Standard-Power	2004	Programmable Module Installation	RCM	●
RX-8 (North America Specs.)	654x2cc	13B-MSP Standard-Power	2005	Programmable Module Installation	ABS/TCS	※
RX-8 (North America Specs.)	654x2cc	13B-MSP Standard-Power	2005	Programmable Module Installation	IC	●
RX-8 (North America Specs.)	654x2cc	13B-MSP Standard-Power	2005	Programmable Module Installation	RKE	※
RX-8 (North America Specs.)	654x2cc	13B-MSP Standard-Power	2005	Programmable Module Installation	PCM	●
RX-8 (North America Specs.)	654x2cc	13B-MSP Standard-Power	2005	Programmable Module Installation	RCM	●