

ABS_BMW_V6.10 Function List (Note:For reference only)

Series	Model Series	Part	Systems
1 Series	E81/E82/E87/E88	Chassis	ABS/ASC/DSC Dynamic Stability Control
3 Series	E30	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic stability control('94->))
3 Series	E30	Chassis	51 DSC(Dynamic stability control)
3 Series	E30	Chassis	56 ABS/ASC tester
3 Series	E36[<9803]	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic stability control('94->))
3 Series	E36[<9803]	Chassis	51 DSC(Dynamic stability control)
3 Series	E36[<9803]	Chassis	56 ABS/ASC tester
3 Series	E36[>9803]	Chassis	ABS/ASC/DSC Dynamic Stability Control
3 Series	E46	Chassis	ABS/ASC/DSC Dynamic Stability Control
3 Series	E90/E91/E92/E93	Chassis	ABS/ASC/DSC Dynamic Stability Control
5 Series	E28	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic stability control('94->))
5 Series	E28	Chassis	51 DSC(Dynamic stability control)
5 Series	E28	Chassis	56 ABS/ASC tester
5 Series	E34	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic stability control('94->))
5 Series	E34	Chassis	51 DSC(Dynamic stability control)
5 Series	E34	Chassis	56 ABS/ASC tester
5 Series	E39	Chassis	ABS/ASC/DSC Dynamic Stability Control
5 Series	E60/E61	Chassis	ABS/ASC/DSC Dynamic Stability Control
6 Series	E24	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic stability control('94->))
6 Series	E24	Chassis	51 DSC(Dynamic stability control)
6 Series	E24	Chassis	56 ABS/ASC tester

Series	Model Series	Part	Systems
6 Series	E63/E64	Chassis	ABS/ASC/DSC Dynamic Stability Control
7 Series	E23	Chassis	50 ABS (Anti-lock braking system)\n ASC (Automatic stability control)\n ABD (Automatic brake differential (All-wheel drive))\n DSC (Dynamic stability control ('94->))
7 Series	E23	Chassis	51 DSC (Dynamic stability control)
7 Series	E23	Chassis	56 ABS/ASC tester
7 Series	E32	Chassis	50 ABS (Anti-lock braking system)\n ASC (Automatic stability control)\n ABD (Automatic brake differential (All-wheel drive))\n DSC (Dynamic stability control ('94->))
7 Series	E32	Chassis	51 DSC (Dynamic stability control)
7 Series	E32	Chassis	56 ABS/ASC tester
7 Series	E38	Chassis	ABS/ASC/DSC Dynamic Stability Control
7 Series	E65	Chassis	ABS/ASC/DSC Dynamic Stability Control
8 Series	E31	Chassis	50 ABS (Anti-lock braking system)\n ASC (Automatic stability control)\n ABD (Automatic brake differential (All-wheel drive))\n DSC (Dynamic stability control ('94->))
8 Series	E31	Chassis	51 DSC (Dynamic stability control)
8 Series	E31	Chassis	56 ABS/ASC tester
X3 Series	E83	Chassis	ABS/ASC/DSC Dynamic Stability Control
X5 Series	E53	Chassis	ABS/ASC/DSC Dynamic Stability Control
X5 Series	E70	Chassis	ABS/ASC/DSC Dynamic Stability Control
X6 Series	E71	Chassis	ABS/ASC/DSC Dynamic Stability Control
Z1 Series	E30	Chassis	50 ABS (Anti-lock braking system)\n ASC (Automatic stability control)\n ABD (Automatic brake differential (All-wheel drive))\n DSC (Dynamic stability control ('94->))
Z1 Series	E30	Chassis	51 DSC (Dynamic stability control)
Z1 Series	E30	Chassis	56 ABS/ASC tester
Z3 Series	E36	Chassis	ABS/ASC/DSC Dynamic Stability Control
Z4 Series	E85/E86	Chassis	ABS/ASC/DSC Dynamic Stability Control
Z8 Series	E52	Chassis	ABS/ASC/DSC Dynamic Stability Control
Z Reihe	Z4_E89	Chassis	ABS/ASC/DSC Dynamic Stability Control
1 Series	F20	Chassis	DSC Dynamic Stability Control
3 Series	F30	Chassis	DSC Dynamic Stability Control
5 Series	F07	Chassis	DSC Dynamic Stability Control
5 Series	F10/F11	Chassis	DSC Dynamic Stability Control

Series	Model Series	Part	Systems
5 Series	F18	Chassis	DSC Dynamic Stability Control
6 Series	F12/F13	Chassis	DSC Dynamic Stability Control
7 Series	F01/F02/F04	Chassis	DSC Dynamic Stability Control
X3 Series	F25	Chassis	DSC Dynamic Stability Control
X6 Series	E72	Chassis	DSC Dynamic Stability Control
X1 Series	E84	Chassis	DSC Dynamic Stability Control
2 Series	F22	Chassis	DSC Dynamic Stability Control
3 Series	F34	Chassis	DSC Dynamic Stability Control
4 Series	F32/F33	Chassis	DSC Dynamic Stability Control
6 Series	F06	Chassis	DSC Dynamic Stability Control
I Series	I01/I12	Chassis	DSC Dynamic Stability Control
X Series	X5_F15	Chassis	DSC Dynamic Stability Control
3 Series	F80	Chassis	DSC Dynamic Stability Control
4 Series	F82/F83	Chassis	DSC Dynamic Stability Control
X Series	X4_F26	Chassis	DSC Dynamic Stability Control
X Series	X5_F85	Chassis	DSC Dynamic Stability Control
X Series	X6_F16	Chassis	DSC Dynamic Stability Control
X Series	X6_F86	Chassis	DSC Dynamic Stability Control